




KODAK 26322809 Printomatic Digital Instant Print Camera User Guide


[Home](#) » [Kodak](#) » KODAK 26322809 Printomatic Digital Instant Print Camera User Guide 

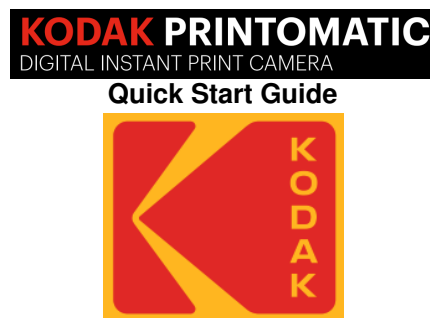


Contents

- [1 Getting Started](#)
- [2 Insert paper into the paper compartment.](#)
- [3 Photo Tips](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)


Getting Started

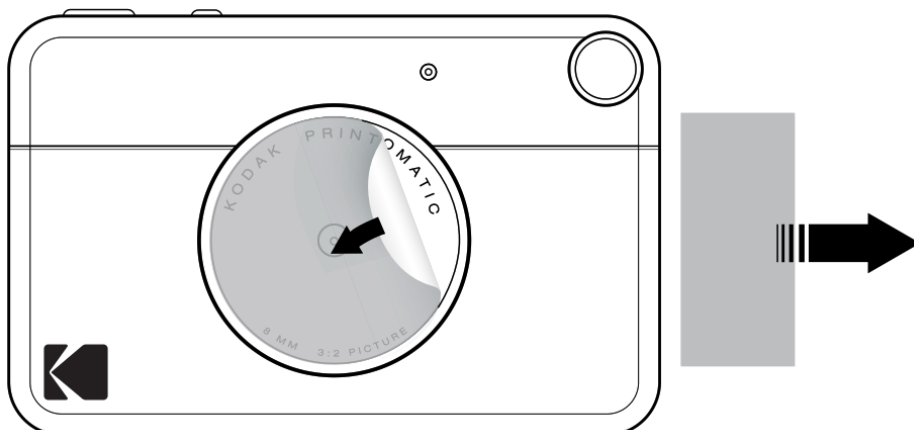


Remove plastic from the camera lens and photo cardboard.

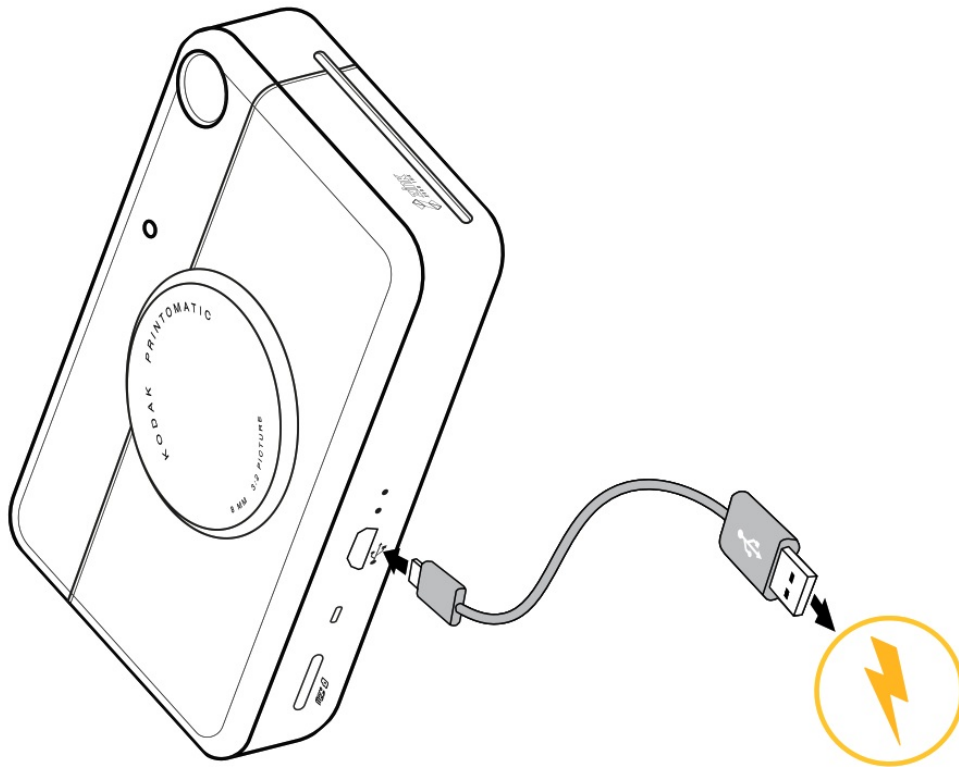

Charge the camera with a USB cable before use.

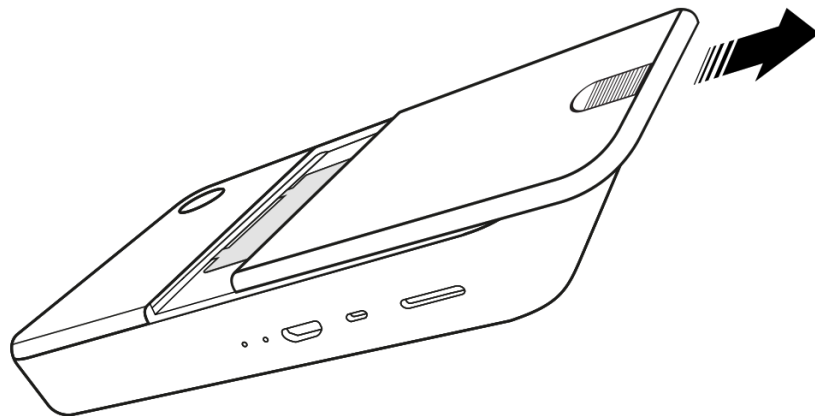


Place a finger on the grooves in the back of the camera door and gently slide to open.

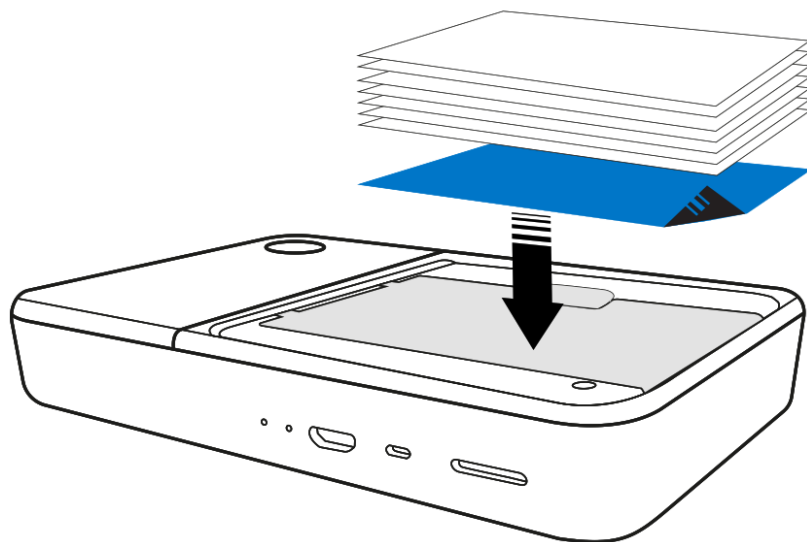


Insert paper into the paper compartment.


NOTE: Blue sheet should be at the bottom of the paper stack facing down.

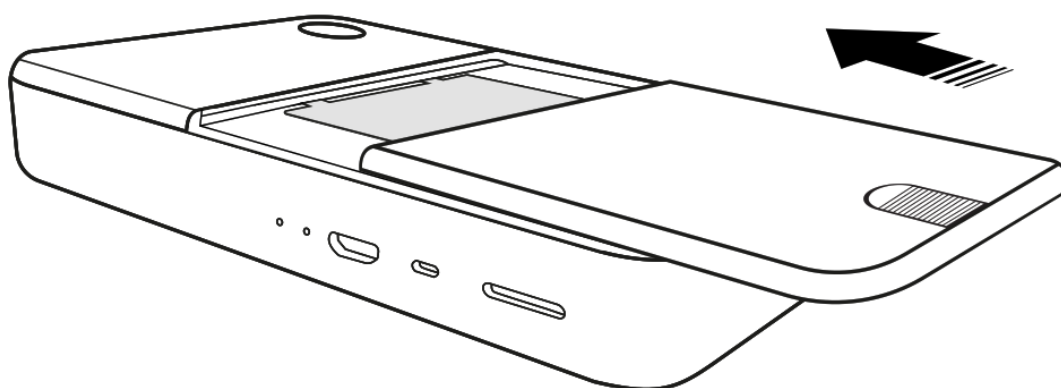


Slide the camera door back onto the camera.

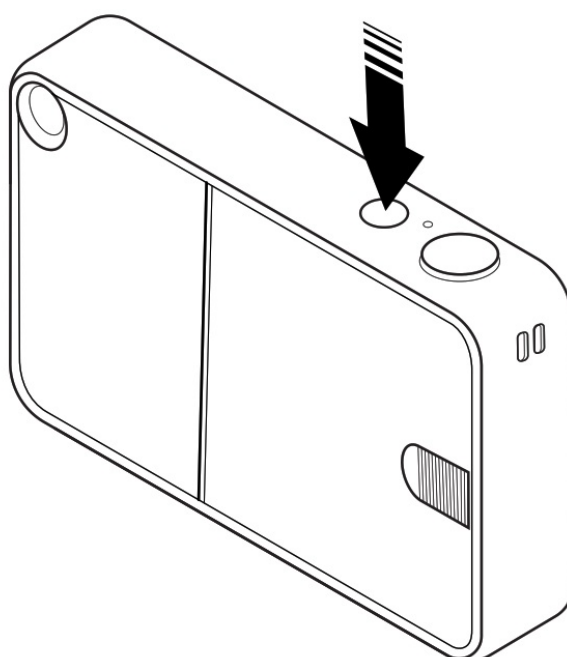

Press the power button for 3 seconds to turn on the camera.

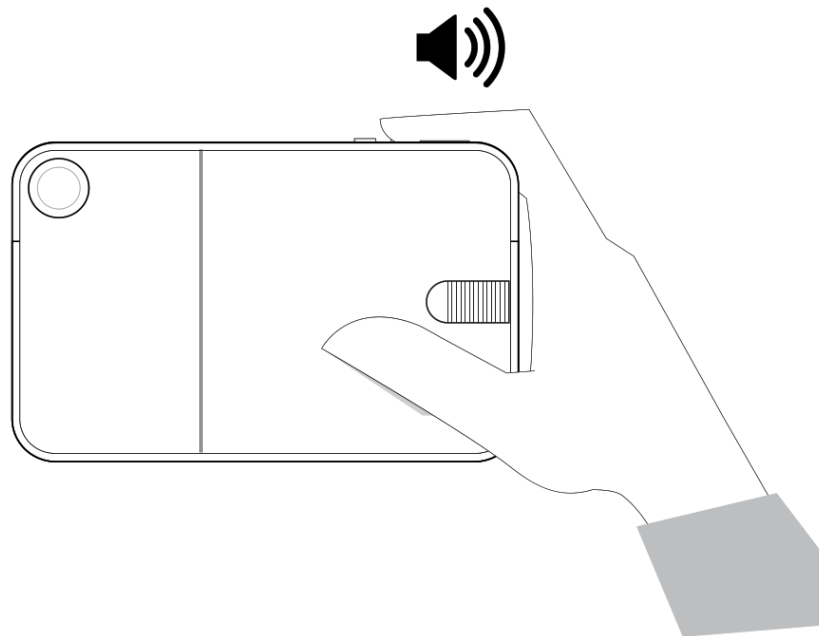

When you're ready to take a photo, press down on the shutter button and hold the camera still until you hear an alert.

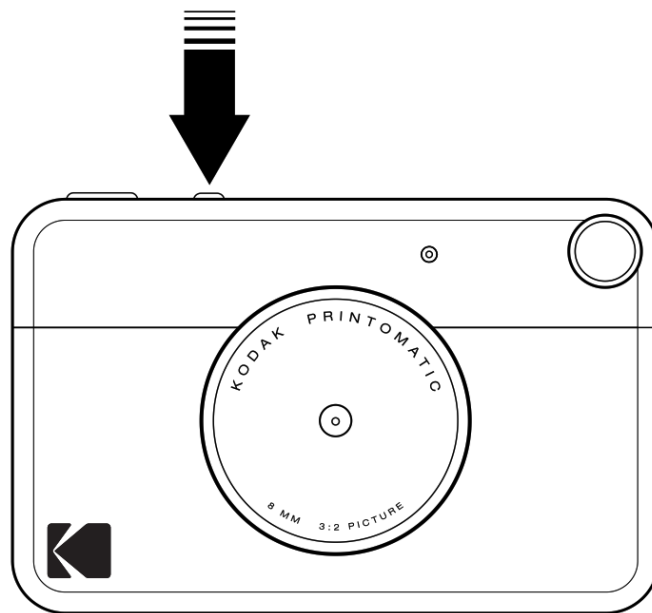

When you're done, press and hold the power button to turn off the camera.

Photo Tips

- Be aware that the blue sheet will print out first.
- To reset the camera, press and hold the reset button for 2 seconds using a pin.
- When using an SD card, photos can only be saved to the SD card. You can't print photos from the SD card.
- The flash will automatically turn on when the camera senses the environment is dark.
- Make sure not to cover the printing slot with your hand when a photo is printing.

The Kodak trademark, logo, and trade dress are used under license from Eastman Kodak Company.

ZINK, ZERO INK, and the ZINK logo are trademarks of ZINK Holdings, LLC.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to

connote any sponsorship, endorsement, or approval. Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 ©2022. C&A IP Holdings LLC. All Rights Reserved.
MADE IN VIETNAM

Customer Service:

U.S. Support: kodak@camarketing.com.844-516-1539

International Support:
kodakintl@camarketing.com
844-516-1540


More Information
For further information, scan the QR code below to visit our support page.



<https://www.kodakphotoplus.com/pages/printomatic-support>



Documents / Resources

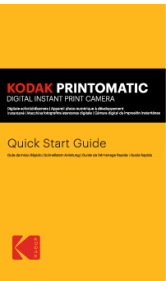	<p>KODAK 26322809 Printomatic Digital Instant Print Camera [pdf] User Guide 26322809 Printomatic Digital Instant Print Camera, 26322809, Printomatic Digital Instant Print Camera</p>
---	---

References

-  [Kodak Photo Plus - Printomatic Instant Print Camera](#)