



KODAK EasyShare LS743 Camera Case Instructions

[Home](#) » [Kodak](#) » KODAK EasyShare LS743 Camera Case Instructions 

Contents

- [1 KODAK EasyShare LS743 Camera Case](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INTRODUCTION](#)
- [5 INSTALLATION INSTRUCTIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



KODAK EasyShare LS743 Camera Case



Product Information

Kodak EasyShare LS743 Camera Case Disassembly

The Kodak EasyShare LS743 Camera Case Disassembly guide provides instructions on how to access the internals of the camera by removing the front and back case. The guide was written by Michael and is available on www.iFixit.com. The guide ID is 3465, and the draft is dated May 20, 2022. The guide requires a Phillips #00 Screwdriver (1) for disassembly.

Product Usage Instructions

Kodak EasyShare LS743 Camera Case Disassembly

1. Using a Phillips #00 screwdriver, remove two 5.39 mm screws located next to the battery slot.
2. Remove the metal piece holding down the lanyard, then remove the lanyard.
3. Using a Phillips #00 screwdriver, remove seven screws located on the outside case of the camera. One 6.25 mm screw is located on the top right corner, right to the OK button. Four 4.45 mm screws are on the bottom of the camera. Two 2.95 mm screws are on the left side of the camera, above the USB port.
4. Carefully remove the rear camera casing and then carefully remove the front camera casing.
5. To reassemble the camera case, follow these instructions in reverse order.

Note: This guide is intended for users with technical knowledge and experience in disassembling electronic devices. Users who are not familiar with disassembling electronic devices should not attempt to use this guide and should seek professional assistance instead.

INTRODUCTION

If you need to access the internals of the Kodak EasyShare LS743 Camera, follow this guide. This guide will walk you through the removal of the front and back case of the camera.


TOOLS



- Phillips #00 Screwdriver (1)


INSTALLATION INSTRUCTIONS

Step 1: Kodak EasyShare LS743 Camera Case Disassembly

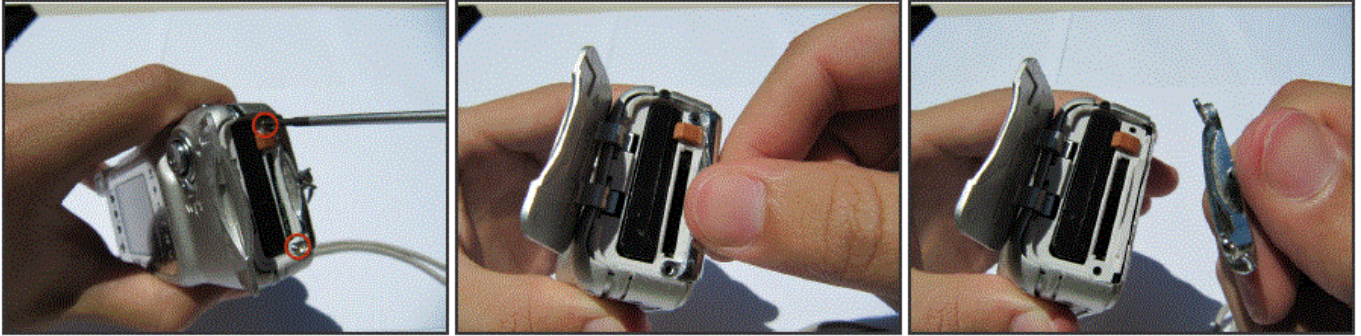


- Using a Phillips #00 screwdriver, remove two 5.39 mm screws next to the battery slot.
- Remove the metal piece holding down the lanyard, then remove the lanyard.

Step 2

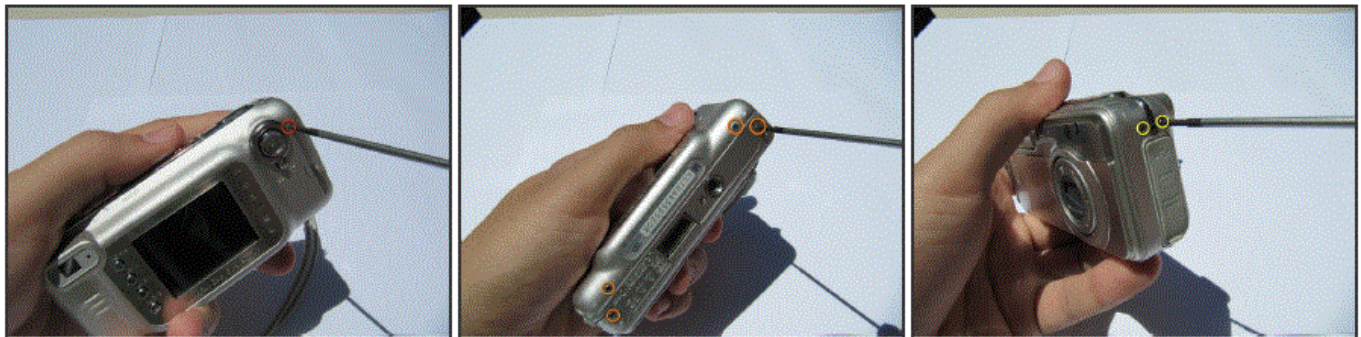

- Using a Phillips #00 screwdriver, remove seven screws located on the outside case of the camera.
 - One 6.25 mm screw is located on the top right corner, right to the "OK" button.
 - Four 4.45 mm screws are on the bottom of the camera.
 - Two 2.95 mm screws are on the left side of the camera, above the USB port.

Step 3

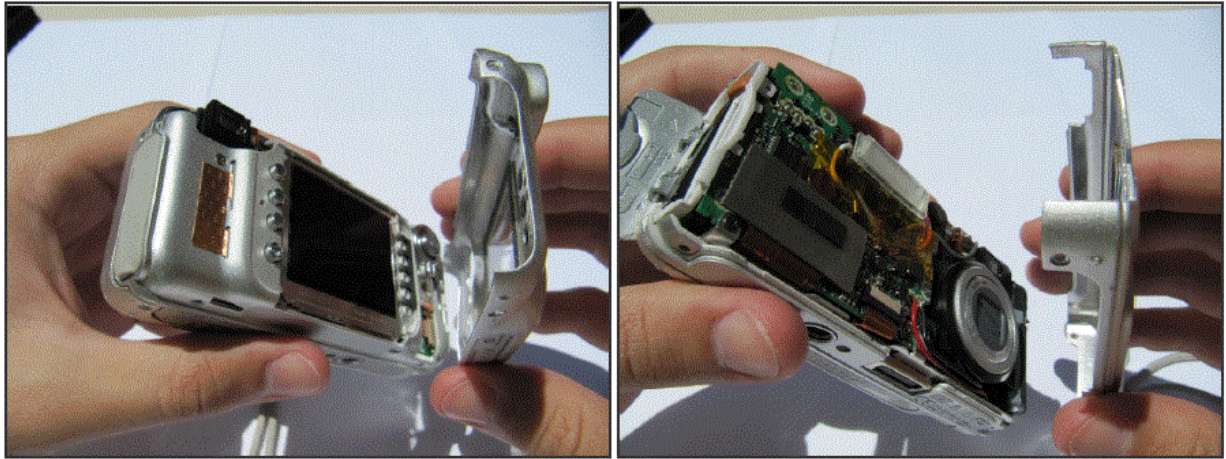


- Carefully remove the rear camera casing.
- Carefully remove the front camera casing.

To reassemble your device, follow these instructions in reverse order.

www.iFixit.com

© iFixit — CC BY-NC-SA

Documents / Resources

	<p>KODAK EasyShare LS743 Camera Case [pdf] Instructions EasyShare LS743 Camera Case, LS743 Camera Case, Camera Case, Case</p>
---	---

References

- [iFixit: The Free Repair Manual](#)