




## KODAK KODPM210W Instant Printer User Guide

[Home](#) » [Kodak](#) » KODAK KODPM210W Instant Printer User Guide 



KODAK Instant Printer  
User Guide

 
[www.kodakphotoprinter.com](http://www.kodakphotoprinter.com)

### Contents

- [1 Before Start](#)
- [2 Smartphone App Installation](#)
- [3 Printing in the App](#)
- [4 Note](#)
- [5 Troubleshooting](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

### Before Start

1. This Printer has built-in battery. Charge the printer before using it.
2. How to Change Cartridge

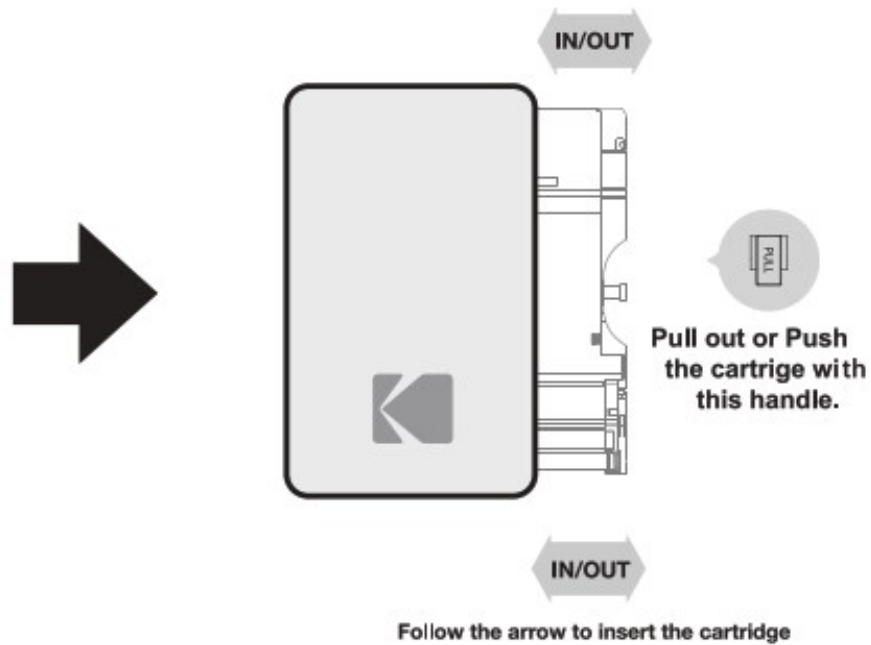

## Smartphone App Installation

### 1. ANDROID

 
- 1) Go to GOOGLE Play Store in your smartphone.
- 2) Search "KODAK Instant Printer"
- 3) Install "KODAK Instant Printer". Into your smartphone

### 2. APPLE Device



- 1) Go to APP STORE in your IPHONE, IPOD TOUCH or IPAD.
- 2) Search "KODAK Instant Printer"
- 3) Install "KODAK Instant Printer". Application into your device.

### BLUETOOTH Connection

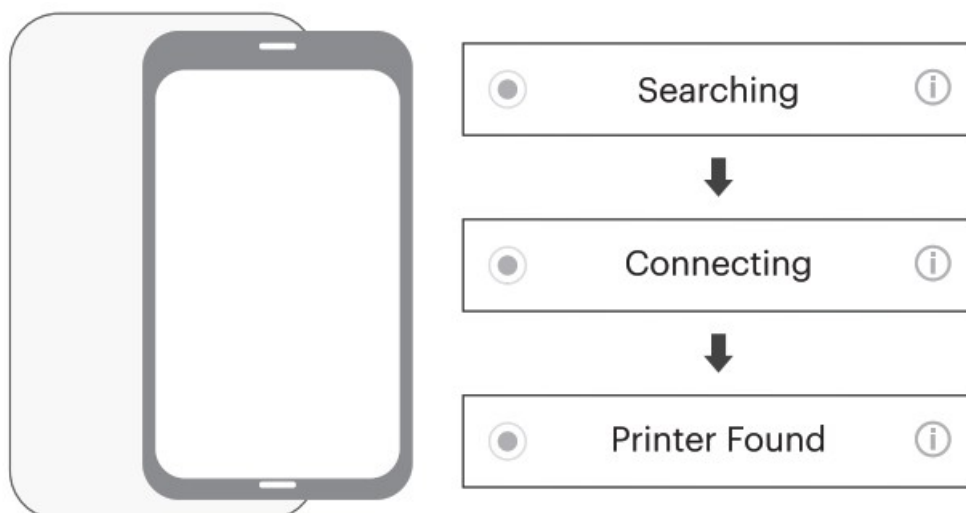- 1) Turn on BLUETOOTH in your smartphone
- 2) Turn on printer.
- 3) Go to BLUETOOTH setting in your smartphone and you can find "KODAK Instant-XXXX" ('XXXX' are 4 digits combination of numbers and letters.)
- 4) Select it for connection.

 


### Power and Active Status

	Power ON: White / Power OFF(2Sec): Off / Printing: White Flickering F.W Upgrade: Pink Flickering / No Cartridge, Error : Red Flickering Waiting, Cooling : White
<b>Charge</b>	Charging: Red / Charging Complete: Green
	Connecting: Green Blink / Bluetooth Complete: Green

## Printing in the App

 
1. KODAK Instant Printer app launch
  2. "Gallery" to load your device's photos. f
  3. Choose Photo 1
  4. Select Print Number
  5. Select Printer Icon
- Select SNS if you want to print the photo from it.

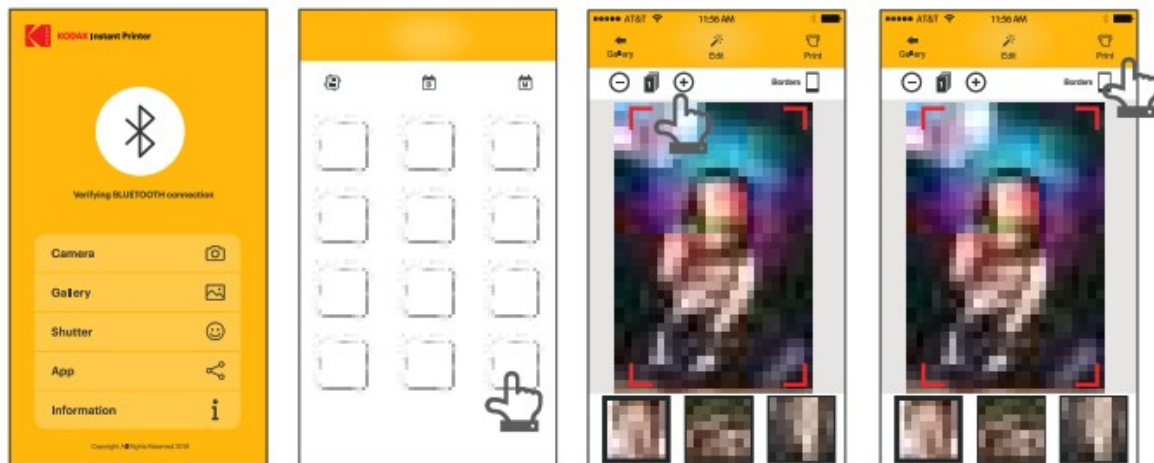

## Note

- Photo Paper will go in and out 4 times (Yellow, Magenta, Cyan, Overcoating).  
Do not touch the paper during printing process for best image quality
- Do not pull paper out by force during printing.
- Do not place an object in front of the paper exit slot. C
- Use the latest application for best print quality. Check the latest app version from 1) GOOGLE Play Store and APPLE APP STORE.
- Printer has built-in battery. Charge the printer before using.
- Handle with care during charging to prevent electric shock.
- Do not disassemble or deform. Avoid too high or low temperature or humidity.
- The higher resolution the image has, the higher quality the printed photo has.  
Recommended image size is 1280\*2448 pixel.
- Operating Temperature : 0-40 C. (32-104 °F)

## Troubleshooting

Symptom	Cause / Solution
Paper Jam	Power off and Power On again. Paper will be automatically ejected If not, please contact customer service.
Image quality is not good.	Print quality could be less if your photo source has low resolution.
	Over 1280 x 2448 pixel is recommended for best image quality.
Printer is not responding	Press Reset button with sharp tool like pin. 

#### FCC (Federal Communications Commission)



This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:



1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

This appliance and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter.

A minimum separation distance of 20cm must be maintained between the antenna and the person for this appliance to satisfy the RF exposure requirements.


The Kodak trademark, logo and trade dress are used under license from Kodak.

[www.kodakphotoprinter.com](http://www.kodakphotoprinter.com)

Copyright © Prinics., Ltd



#### Documents / Resources

	<a href="#">KODAK KODPM210W Instant Printer</a> [pdf] User Guide KODPM210W Instant Printer, KODPM210W, Instant Printer
---	---