



KODAK Mini Shot Camera and Printer Combo User Guide

[Home](#) » [Kodak](#) » KODAK Mini Shot Camera and Printer Combo User Guide 

Contents

- [1 KODAK Mini Shot Camera and Printer Combo](#)
- [2 Before Start](#)
 - [2.1 Power, Shutter and Active Status](#)
- [3 Smartphone App Installation](#)
 - [3.1 Control Panel](#)
- [4 Troubleshooting](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



 
KODAK Mini Shot Camera and Printer Combo




Before Start

1. this unit has built-in battery. Charge this unit before using it.

2. How to change cartridge.

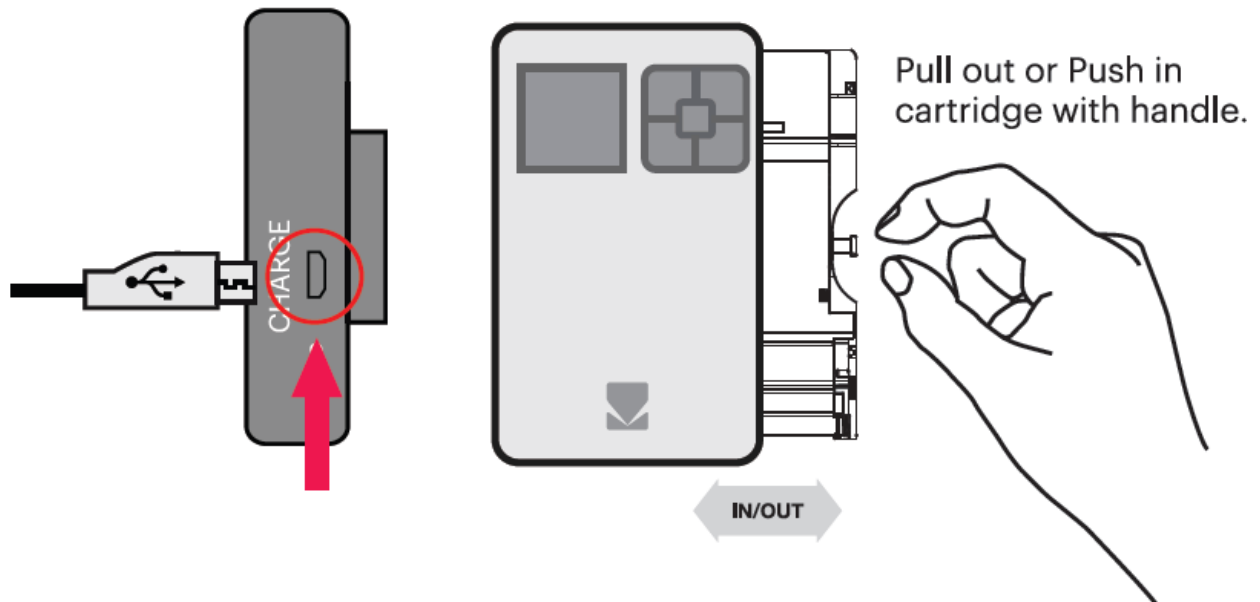

Power, Shutter and Active Status

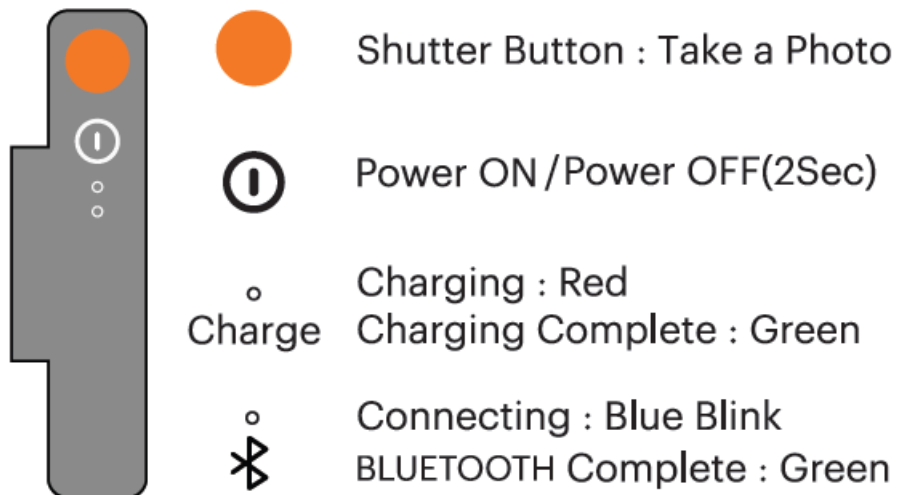 

Smartphone App Installation

1. Go to GOOGLE Play Store in your smartphone.
2. Search "KODAK Instant Printer"
3. Install "KODAK Instant Printer". Into your smartphone

 
BLUETOOTH Connection

1. Turn on BLUETOOTH in your smartphone.
2. Turn on this unit.
3. Go to BLUETOOTH setting in your smartphone and select. "KODAK Instant-XXXX" (XXXX' are 4 digits combination of numbers and letters.)

Take a Photo

1. Turn on this unit by pressing power button.
2. Press shutter button to take the photo after positioning the subject in LCD screen. *Taken photos are deleted when the camera is powered OFF.

Control Panel

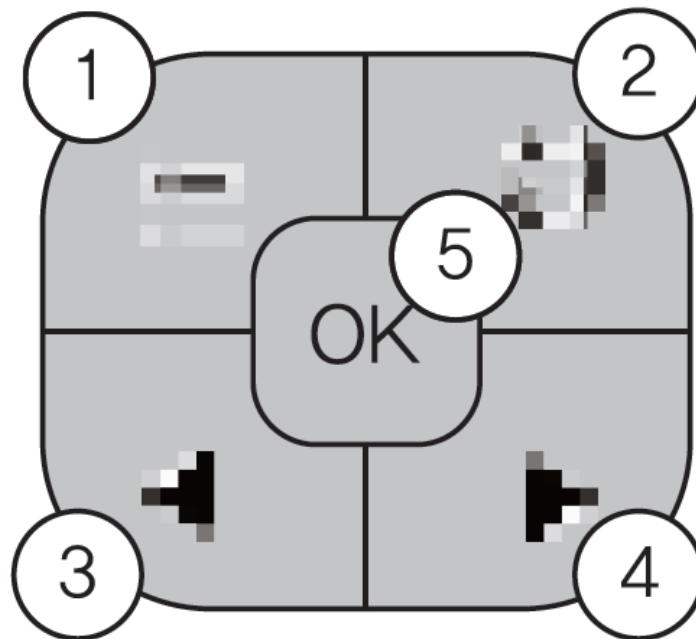


1. **Menu:** You can select Borders, Filters, Flash or Language
2. **Print:** Print image on LCD.
3. **Arrow Button:** You can go to left or right in the menu.
4. **OK:** Confirm the setting or selected menu.

Menu

1. **Border :** You can select border of printed image.
2. **Filter:** You can select filters when you take the photo.
3. **Flash:** You can set Flash Auto or Off.

 Printing in the App

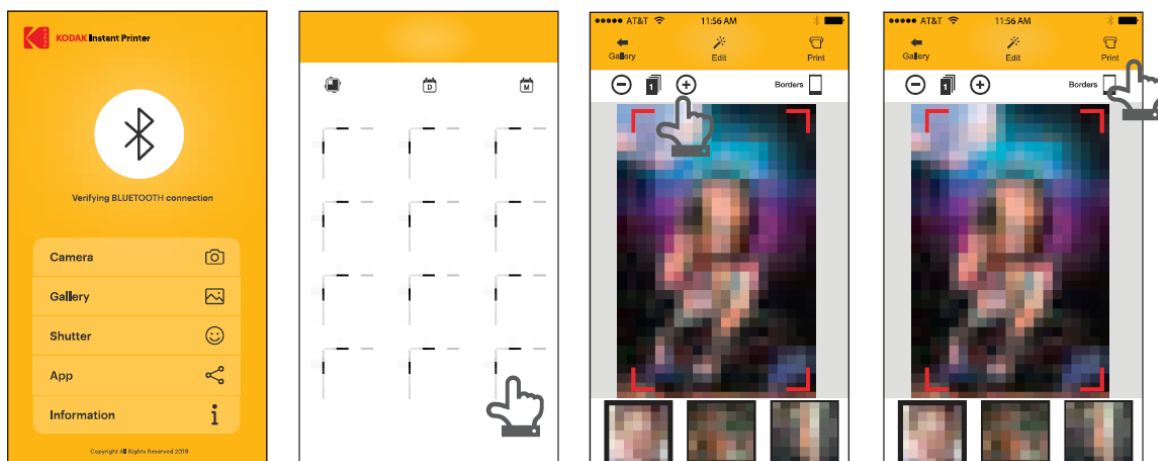


1. KODAK Instant Printer app launch
 2. "Gallery" to load your device's photos.
 3. Choose Photo
 4. Select Print Number
 5. Select Printer icon
- *Select SNS if you want to print the photo from it.


Note

- Photo Paper will go in and out 4 times (Yellow, Magenta, Cyan, Overcoating).
Do not touch the paper during printing process for best image quality
- Do not pull paper out by force during printing. Do not place an object in front of the paper exit slot.
- Use the latest application for best print quality. Check the latest app version from GOOGLE Play Store and APPLE APP STORE.
- Printer has built-in battery. Charge the printer before using.
- * Handle with care during charging to prevent electric shock.
- Do not disassemble or deform.
- Avoid too high or low temperature or humidity.
- The higher resolution the image has, the higher quality the printed photo has. Recommended image size is 1280 2448 pixel.
- Operating Temperature: 0-40C (32-104 °F)

Troubleshooting

Symptom	Cause / Solution
Paper Jam	Power off and Power On again. Paper will be automatically ejected If not, please contact customer service.
Image quality is not good.	Print quality could be less if your photo source has low resolution.
	Over 1280 x 2448 pixel is recommended for best image quality.
Camera is not responding	Press Reset button with sharp tool like pin. 

Documents / Resources

	KODAK Mini Shot Camera and Printer Combo [pdf] User Guide Mini Shot Camera and Printer Combo, Shot Camera and Printer Combo, Camera and Printer Combo, Printer Combo, Combo
---	--