



KODAK PIXPRO WPZ2 Digital Camera User Guide


[Home](#) » [Kodak](#) » KODAK PIXPRO WPZ2 Digital Camera User Guide 

KODAK PIXPRO WPZ2 Digital Camera User Guide



IMPORTANT MICRO SD MEMORY CARD INFORMATION:

A microSD/micro SDHC memory card is NOT included with this camera packaging and needs to be purchased separately. This camera takes a microSD/micro SDHC memory card. We recommend using a name brand memory card that is Class 4 or higher and has a capacity of 4GB to 32GB. This camera is not compatible with standard SD cards.

The Camera User Manual and the “PIXPRO Remote Viewer”  User Manual are available on the websites below:

Americas



<https://us.kodakpixpro.com/wpz2/user-manual/>

Europe




<https://kodakpixpro.com/Europe/support/multi-lang-downloads.php>

Quick Start Guide

Contents


- 1 1 Camera Views
- 2 2 Inserting the Battery and Micro SD Memory Card (32GB max)
- 3 3 Setting the Language/Date/Time
- 4 4 Taking the Best Photos
- 5 5 Using the Mode Button
- 6 6 Using the Quick Video Recording Button
- 7 7 Using the Menu Button
- 8 8 Wi-Fi® Connection
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

1 Camera Views

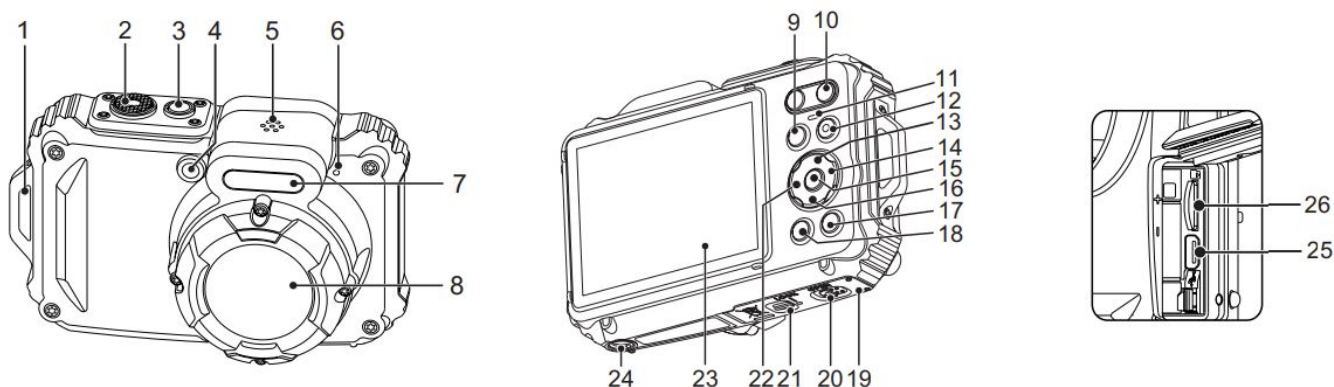

| | | | |
|----|----------------------------------|----|---|
| 1 | Strap Eyelet | 14 | Flash Button/Arrow Button (Right) |
| 2 | Shutter Button | 15 | SET Button |
| 3 | Power Button | 16 | Delete Button/Self-Timer Button/ Arrow Button (Down) |
| 4 | AF Assist Beam/Self-Timer Lamp | 17 | Playback Button |
| 5 | Speaker | 18 | Menu Button |
| 6 | Microphone | 19 | Battery Cover Door |
| 7 | Flash Lamp | 20 | Battery Cover Door (Open) Toggle Switch |
| 8 | Lens | 21 | Battery Cover Door Lock |
| 9 | Mode Button | 22 | Macro Button/Arrow Button (Left) |
| 10 | Zoom Button | 23 | LCD |
| 11 | Indicator Lamp | 24 | Tripod Socket (1/4" Standard) |
| 12 | Quick Video Recording Button | 25 | Micro USB Port |
| 13 | Display Button/Arrow Button (Up) | 26 | Micro SD Card Slot (32GB max) |

2 Inserting the Battery and Micro SD Memory Card (32GB max)

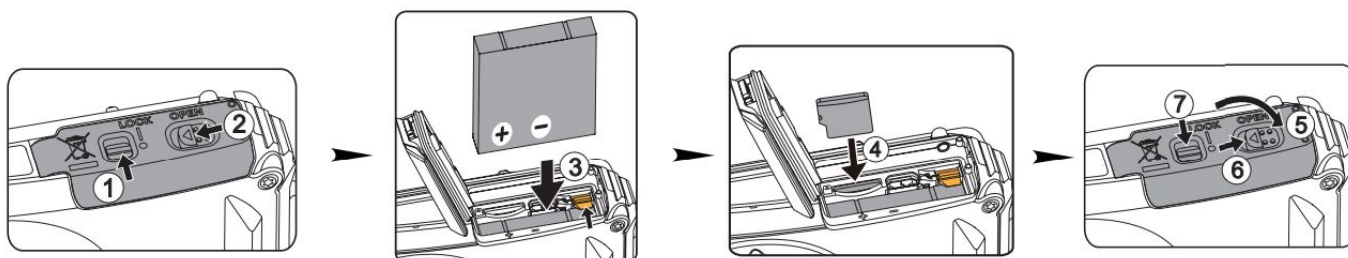

1. Unlock the battery cover door lock as shown in step push the battery cover door open switch to open the battery cover door as shown in step
2. Insert the battery into the battery compartment as shown in step being sure to line up metal contacts on bottom of battery with the contacts in slot
3. Insert the Micro SD memory card (not to exceed 32GB) into the memory card slot as shown in step , push

exposed edge of the Micro SD memory card fully into the slot with your fingertip.

4. Close the battery cover door as shown in step push the battery cover door switch to close the battery cover door as shown in step and be sure to lock the battery cover door latch as shown in step .

3 Setting the Language/Date/Time










1. Press the power button to turn the camera on and the language menu will appear. Use the up/down/left/right buttons to select desired language and press the **(SET)** button to confirm your language.
2. Use the up/down/left/right buttons again to set the date and time and press **(SET)** the button to confirm.

4 Taking the Best Photos



1. Be sure to hold the camera securely.
2. Use the zoom button to select Tele or Wide position to zoom in or out on your subject(s).
3. Gently press the shutter button half-way down to focus on your subject(s). When the focus frame turns green, press the shutter button completely down to take your photo.

5 Using the Mode Button



This camera provides a convenient mode button that allows you to manually switch between different camera settings with ease. Available modes are listed below:











| | | | |
|---|-------------|---|-----------------|
|  | Auto Mode |  | Program AE |
|  | Manual Mode |  | Movie Mode |
|  | Scene Mode |  | Underwater Mode |
|  | Wi-Fi® Mode | | |

6 Using the Quick Video Recording Button


While in shooting mode, press the  button to begin recording a video. To stop recording, press the  button again. The camera's Micro SD Memory Card (max 32GB) will store the video and return to the shooting screen.


7 Using the Menu Button

In each mode (except for the Wi-Fi® mode), press the menu  button to access the “Easy Menu”. Press the up/down buttons to move between options, then press the **(SET)** button to make a selection. Choosing the  within this list will provide access to the Full Menu and Modes below:


| Shooting Mode | Playback Mode |
|---|---|
|  Shoot Settings |  Playback Settings |
|  General Settings |  General Settings |
|  Connection Settings |  Connection Settings |
|  File Settings |  File Settings |
|  Wi-Fi® Settings |  Wi-Fi® Settings |

8 Wi-Fi® Connection

This camera can be connected to your smart device through the FREE “PIXPRO Remote Viewer” APP  . The APP is available for iOS™ and ANDROID™ devices. Check the SSID and password on the camera’s AP mode interface. The Wi-Fi® password for this WPZ2 camera is unique and randomized to meet Federal and/or State compliance laws and standards.

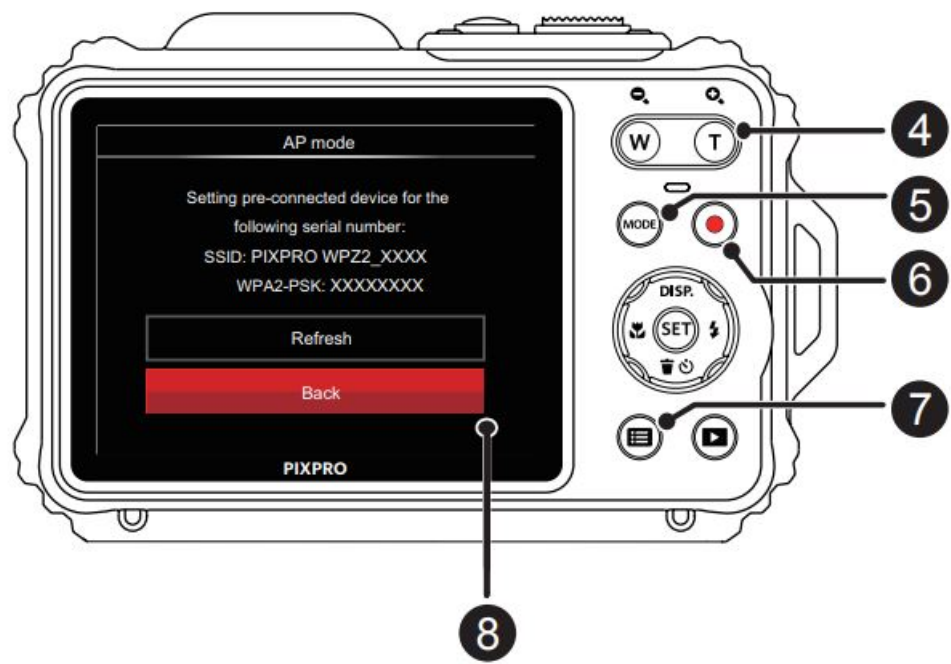

Documents / Resources

| | |
|---|--|
|  | KODAK PIXPRO WPZ2 Digital Camera [pdf] User Guide PIXPRO WPZ2, Digital Camera |
|---|--|

References

-  [Kodak - Official Site | Cameras & Accessories](#)
-  [WPZ2 | Kodak PIXPRO](#)

Manuals+.