



# KODAK PRINTOMATIC Digital Instant Print Camera User Guide

[Home](#) » [Kodak](#) » KODAK PRINTOMATIC Digital Instant Print Camera User Guide

## Contents [ [hide](#) ]


- [1 KODAK PRINTOMATIC Digital Instant Print Camera](#)
- [2 CHARGE YOUR CAMERA](#)
- [3 TURN YOUR CAMERA ON](#)
- [4 LOADING PAPER INTO THE PRINTER](#)
- [5 HOW TO HOLD THE CAMERA TO TAKE A PICTURE](#)
- [6 USING THE VIEWFINDER](#)
- [7 HOW TO HOLD THE CAMERA FOR A SELFIE](#)
- [8 PHOTO TIPS](#)
- [9 RESETTING THE CAMERA](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)



**KODAK PRINTOMATIC Digital Instant Print Camera**




## **CHARGE YOUR CAMERA**

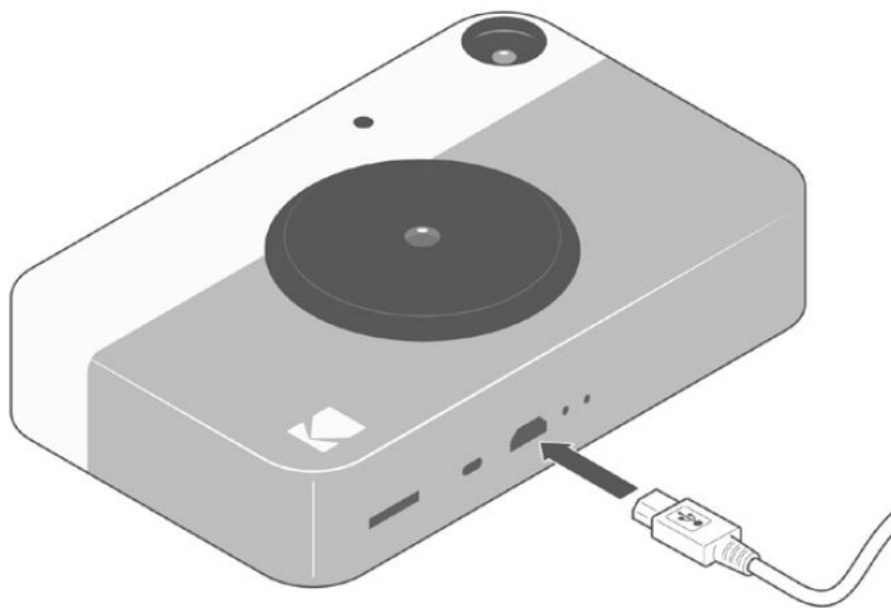

Connect a compatible micro USB cable and charger, 1 amp or greater, to the camera. For best results, place the camera face up on a flat surface.



## **TURN YOUR CAMERA ON**

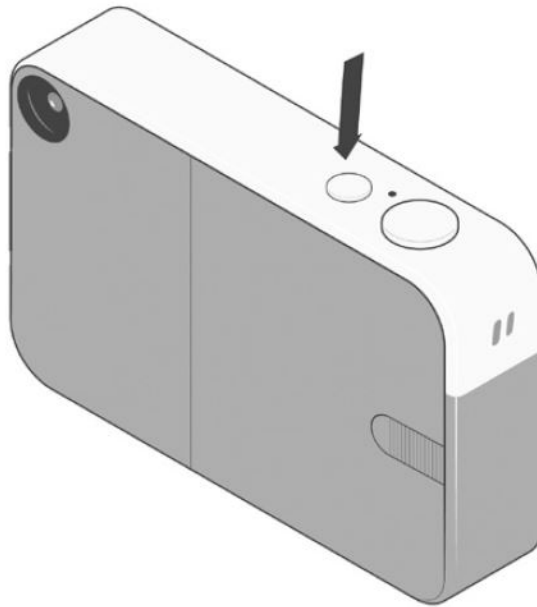

Press and hold the power button until the light on the top turns ON.



**Tip:** To prevent turning on the camera accidentally when not in use, it is best to use a KODAK case for storage.

## LOADING PAPER INTO THE PRINTER

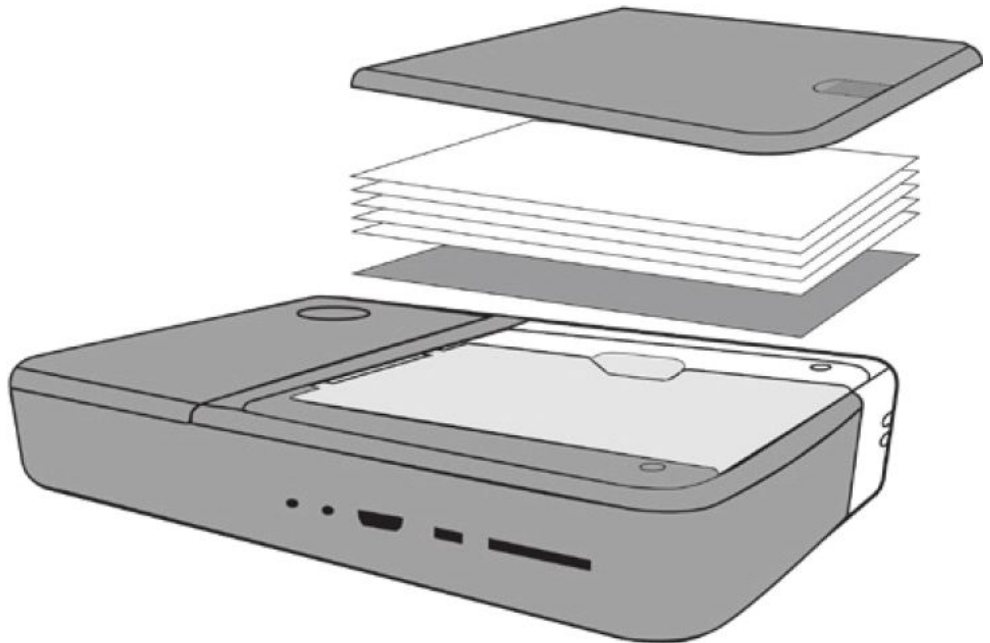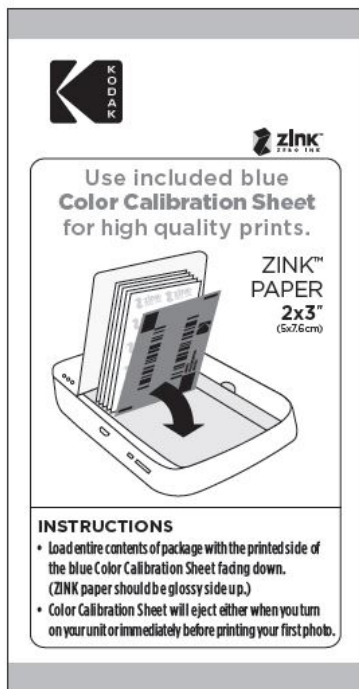


Use only KODAK ZINK Photo Paper and load the entire pack into the camera, with the blue sheet facing down. Hold paper from the sides in order to avoid fingerprints.


## HOW TO HOLD THE CAMERA TO TAKE A PICTURE

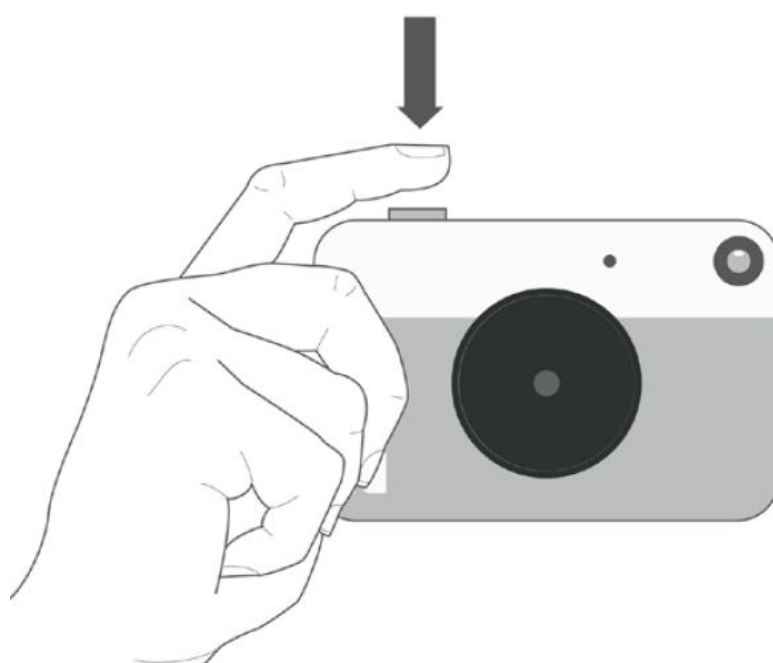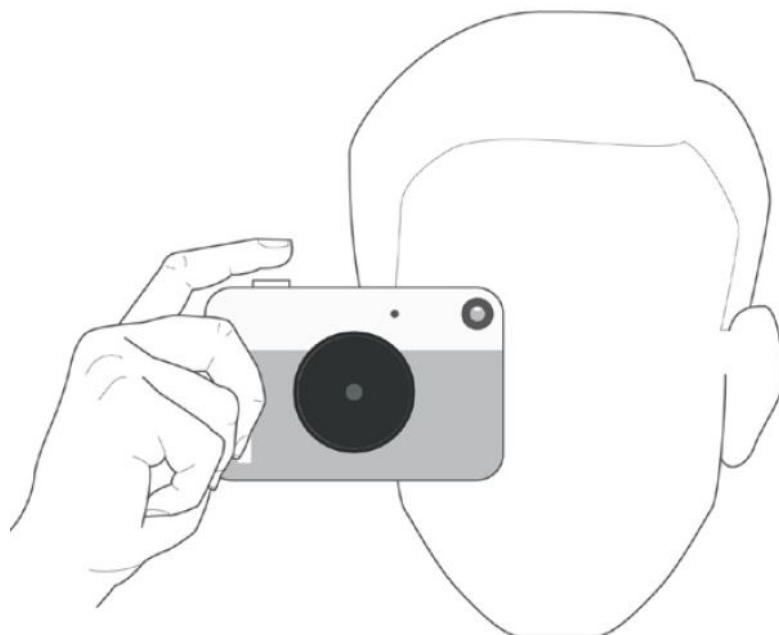

**USING THE VIEWFINDER**

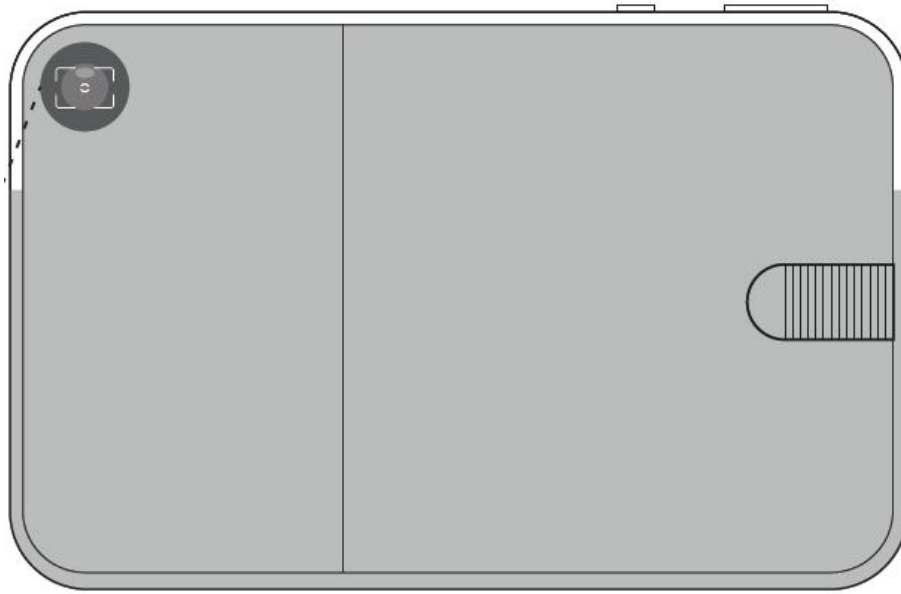


Only what is in the frame  
will be printed.

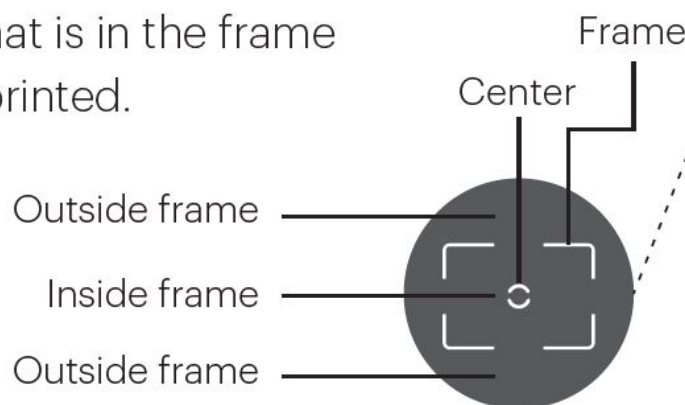

When taking a picture, use the viewfinder to make sure the subject is within the frame.

## HOW TO HOLD THE CAMERA FOR A SELFIE

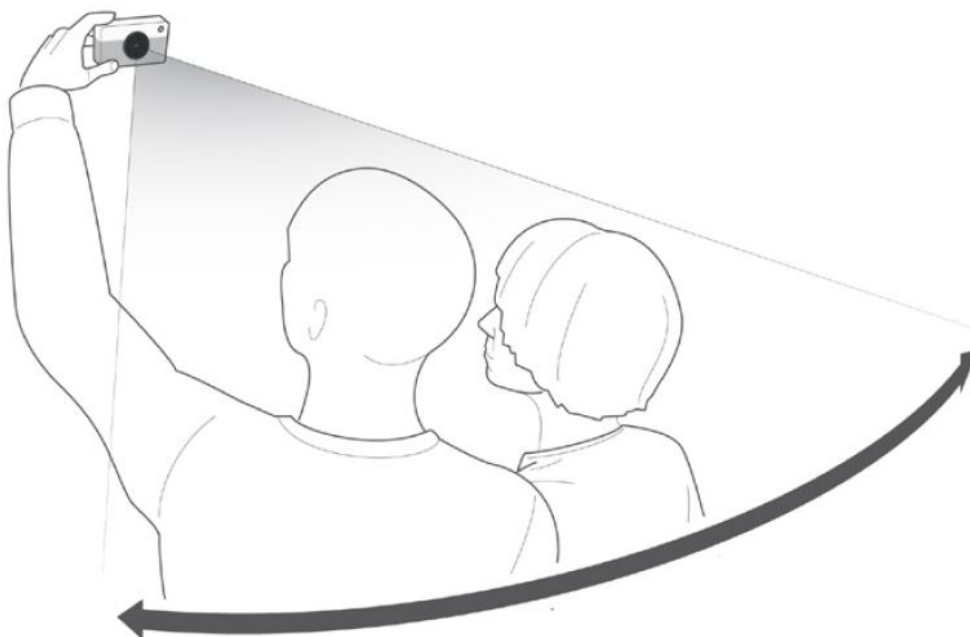


## PHOTO TIPS

**Tip 1:** For best photos, focus on vivid backgrounds with lots of natural color

**Tip 2:** Flash will automatically turn on when the camera senses that the scene is dark **Tip 3:** In indoor scenes with fluorescent lighting, focus on bolder colors in the scene **Tip 4:** Remember to use the sticky-backed KODAK ZINK Photo Paper to share your prints.

RESETTING THE CAMERA

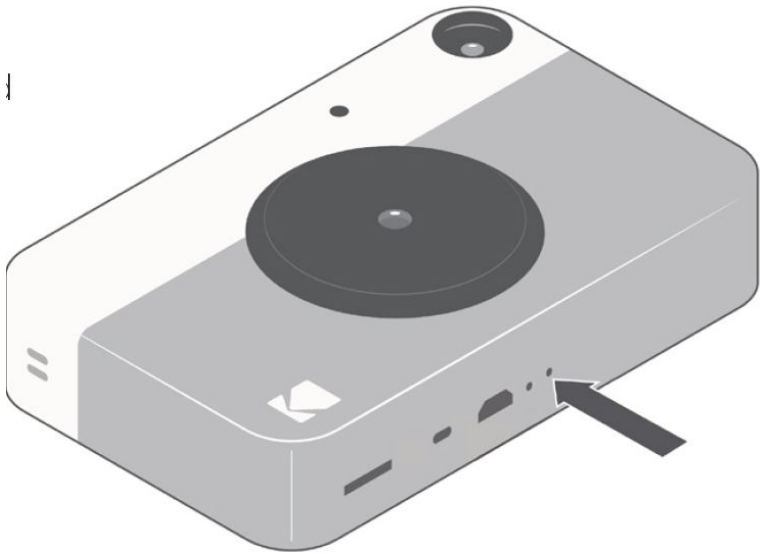



To reset camera, insert a pin and hold for 2 seconds.

[kodakphotoplus.com](http://kodakphotoplus.com)

The Kodak trademark, logo and trade dress are used under license from Eastman Kodak Company. ZINK, ZERO INK, and the ZINK logo are registered trademarks of ZINK Holdings LLC used under license. Distributed by: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA ©2020, C&A IP Holdings, LLC. All Rights Reserved. Made in Vietnam. All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Documents / Resources

	<a href="#">KODAK PRINTOMATIC Digital Instant Print Camera</a> [pdf] User Guide PRINTOMATIC, Digital Instant Print Camera
	<a href="#">KODAK PRINTOMATIC Digital Instant Print Camera</a> [pdf] User Manual PRINTOMATIC Digital Instant Print Camera, PRINTOMATIC, PRINTOMATIC Instant Print Camera, Digital Instant Print Camera, Instant Print Camera, Print Camera, Camera

References

- [Kodak Photo Plus - Printomatic Instant Print Camera](#)
- [Kodak Photo Plus - Printomatic Instant Print Camera](#)