

[Skip to content](#)

Manuals+

User Manuals Simplified.

KODAK RDPF-1020W Digital Photo Frame User Manual



[Home](#) » [Kodak](#) » KODAK RDPF-1020W Digital Photo Frame User Manual

KODAK Digital Photo Frame

USER MANUAL RDPF- 1020W

Important Safety Precautions

Congratulations on purchasing your new digital photo frame. With this Digital Photo Frame, you can easily and quickly view photos directly from your digital camera's memory card. You can even create a slideshow with multiple transition effects. The Digital Photo Frame is compatible with the following memory cards and devices: Secure Digital (SD) card, Multi Media Card (MMC), and USB flash drives.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 **CAUTION** 
RISK OF ELECTRIC SHOCK DO NOT OPEN



THIS SYMBOL INDICATES THAT DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



THIS SYMBOL INDICATES THAT THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

- High voltage inside. Do not open the casing of the digital photo frame. Refer servicing to qualified personnel only.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- To avoid permanent loss of data, do not insert or remove memory cards or USB devices when the power is on.

Safety Instructions

- Do not expose the product to dripping or splashing liquids or objects filled with liquids, such as vases. Use in a dry location only.
- Keep product away from open flames, such as candles.
- Keep the digital photo frame clean and never store it near a heat source or in dirty, humid, or wet places. Keep it out of direct sunlight.
- Press the buttons gently. Pressing them or the screen too hard can damage the digital photo frame.
- Do not use the product in an extremely dry environment as this can lead to static discharge, which can damage the digital photo frame.
- Do not subject the product to harsh impacts. Do not drop the product. These may result in damage to the product and loss of data.
- Do not attempt to repair or disassemble the unit yourself. Only qualified service personnel should perform repairs.
- The digital photo frame is for indoor use only.
- Use only the DC 5V power adapter supplied with this product. Do not unplug the adapter while viewing the pictures.
- Do not block the ventilation holes on the back of the digital photo frame.
- Children should be supervised to ensure that they do not play with the product.
- To prevent overheating and damage to the screen, unplug the product when you do not intend to use it for a long period of time.
- Please insert the plug into the DC IN jack completely on the unit before connecting the AC adapter to an electrical outlet.
- This product can only display files with compatible formats.
- Do not use the product in temperatures over 105° F (40° C).
- Do not allow metallic objects to touch the DC plug when the player is on.

Contents [hide](#)

- [1 Care and Maintenance](#)
- [2 Package Contents](#)
- [3 Rear Panel View](#)
- [4 Getting Started](#)
- [5 Display Source](#)
- [6 Main Menu](#)
- [7 Photo](#)
- [8 Music](#)
- [9 Video](#)
- [10 Calendar](#)
- [11 File](#)
- [12 Setting](#)
- [13 Specifications:](#)
- [14 Troubleshooting:](#)
- [15 Additional instructions:](#)
- [16 Documents / Resources](#)
- [17 Related Posts](#)

Care and Maintenance

- Always turn off the unit and remove the power adaptor from the electrical outlet before cleaning the unit.
- Use a soft dry cloth to clean this product.
- Never spray or pour liquids directly onto the screen or casing.
- Do not use abrasive materials or chemical cleaners such as alcohol, benzene, etc. Do not allow any water or other liquid to enter the device.
- Do not drop the device; it contains complicated electronics and cannot withstand shock from falls.
- Do not hit or scratch the screen. Handle it with care. The LCD panel of the photo frame is made of glass and therefore is sensitive to excessive force and contact with sharp objects.

Product Features

- 10.1 inch TFT LCD screen
- Compatible with most JPEG images, Audio, Video
- Automatic slide show with multiple transition effects and display intervals
- Picture enhancements including photo rotation
- Slideshow with background music
- Should operate with key switch and remove-control
- Compatible with SD/MMC memory cards up to 16GB; USB slot for most USB devices up to 32GB
- Wall mount hole on the rear of the digital photo frame

Package Contents

 
Make sure that the items shown below are included in the package. If an item is missing, contact the retailer where you purchased this product.

1. Digital Photo Frame
2. Power Adapter
3. Quick Start Guide
4. Remote control
5. Stand



*Required but not included: SD Card / USB Stick

Rear Panel View

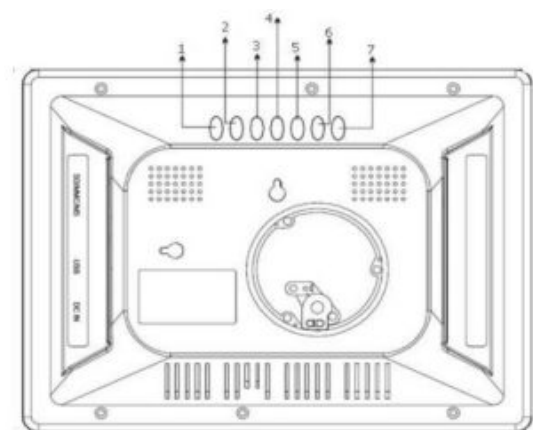

- | | | |
|---|-------------|------------------------------|
| 1 | | Play and Pause |
| 2 | | MENU and Power on/off |
| 3 | EXIT | EXIT |
| 4 | | Right |
| 5 | | Left |
| 6 | | Down |
| 7 | | UP |

Getting Started

1. Attach the included stand to the rear of the Digital Photo Frame in either horizontal or vertical position. To wall-mount, the Digital Photo Frame instead, see the section below on wall mounting.
2. Insert your memory card or your USB flash drive.
3. Connect the power adapter to the photo frame and plug it into an electrical outlet.

Wall Mounting



 
1. Insert a nail, screw, or hook into the wall in a location that will support the frame's weight.

2. Leave at least "1/2" (about 12mm) of the nail or screw exposed.
3. Hang the Digital Photo Frame onto the nail or screw.

Connecting the Power Supply

1. Place the frame on a flat, stable surface.
2. Plug the DC plug of the adapter to the jack marked "DC IN 5V" on the side of the digital photo frame, and then connect the power adapter to a standard 120-Volt AC electrical outlet. The player will power on.
3. Press and hold the **⏻/MENU** button to power the frame on or off.
4. When the unit is not being used for a long time, press the **⏻/MENU** button on the unit to power it off and unplug the AC adapter from the electrical outlet.

Connecting a USB Drive

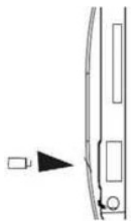


To view photos from a USB flash drive, insert them into the USB port on the side of the frame.

NOTE:

- Not all USB storage devices are compatible with this digital photo frame.
- The USB drive must be formatted using the FAT32 file system. Drives formatted as NTFS or exFAT will not be recognized.

 Inserting a Memory Card

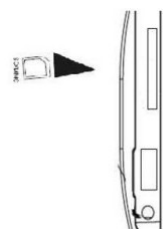


To view the pictures from a Secure Digital (SD) or Multimedia Card (MMC), insert it into the memory card slot on the side of the Digital Photo Frame with the metal contacts of the card facing away from the LCD Display.

NOTE:

- Do not force the memory card into the slot. If you are not able to insert the memory card easily, you may have inserted it incorrectly; turn the card over and try again.
- Do not remove a memory card immediately after inserting it or when the frame is processing files. Wait until the screen is stable.
- The maximum SD/MMC card size is 16GB; the maximum USB flash drive size is 8GB.

 
Display Source

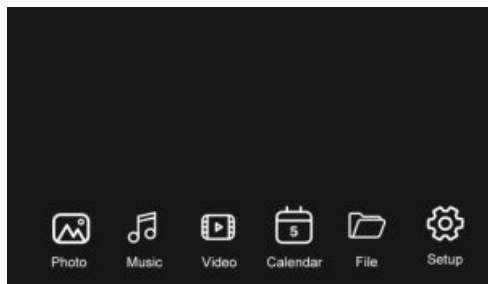

Insert a memory card or USB flash drive; after the card/drive is read, a slide show will start. Press the **EXIT** button to stop the slide show and enter thumbnail mode. Press the **EXIT** Button again to access the main menu. Press the **EXIT** Button a third time to enter Source Mode, in which you can select a photo source from the memory devices inserted into the frame— memory card, USB flash drive, or the frame's built-in memory. Press the **▶||** button to return to the main menu.

NOTE: The Digital Photo Frame may be slow to read some large-capacity memory cards and USB drives.

 Main Menu

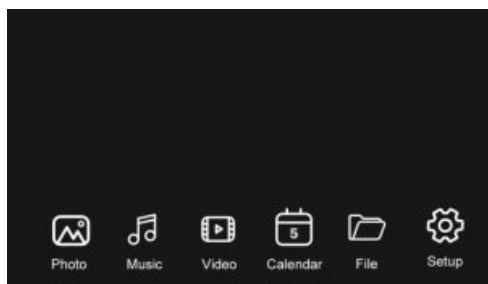

1. Press the **▶||** and **◀◀** buttons to choose an input source: Memory Card, USB device, or built-in memory. Press the **▶||** button to confirm and return to the Main Menu screen.
2. Press the **▶||** and **◀◀** buttons to select File, Photo, Calendar, or Setup. Press the **▶||** button to confirm. See below for descriptions of each of the three display modes.

Photo


Displays a photo thumbnail gallery. Press the **▶▶** and **◀◀** buttons to select a photo.
Press the **▶|** button to confirm and begin a Slide Show starting with the selected picture.
Press the **▶|** button again to pause the slideshow. Press the **EXIT** button to return to the thumbnail gallery view.



To rotate a photo: During a Slide Show, press the **▶|** button to pause, press the **▶▶** and **◀◀** buttons to rotate the photo 90°/180°/270°/360°.


Music

 From the main menu, press the **▶▶** and **◀◀** buttons to select "Music" and then press the button to enter "Music" mode. In this mode, the song list will be displayed on the left. Press the **▶▶** and **◀◀** buttons to play the song. Press the **EXIT** Button to exit "Music mode" and return to the main menu.

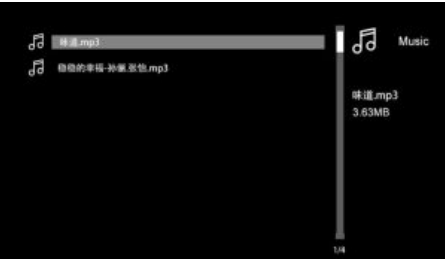

Video

 From the main menu, press the and buttons to select "Video" and then press the button to enter "Video mode". In this mode, the video list will be displayed on the left. Press the and buttons to play the video. Press the EXIT Button to exit "Video mode" and return to the main menu.

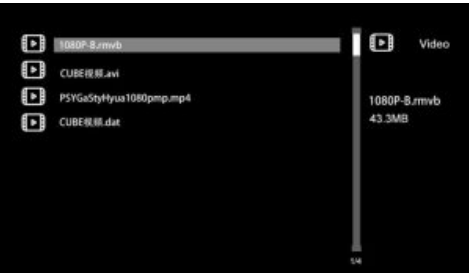


Calendar

From the main menu, press the **▶▶** and **◀◀** buttons to select "Calendar" and then press the **▶|** Button to enter Calendar mode. In this mode, your photos will display as a small slide show on the right while a monthly calendar displays on the left. Press the **▶▶** and **◀◀** buttons to adjust the date. Press the EXIT Button to exit Calendar mode and return to the main menu.



File

 From the main menu, press the **▶▶** and **◀◀** buttons to select "File" and then press the button to confirm. To delete a file from the selected source, press the **⏻**/MENU button to display the Delete menu. Use the **↑** and **↓** buttons to select "Delete File" and press the button to confirm. To cancel without deleting a file, select **Exit**.

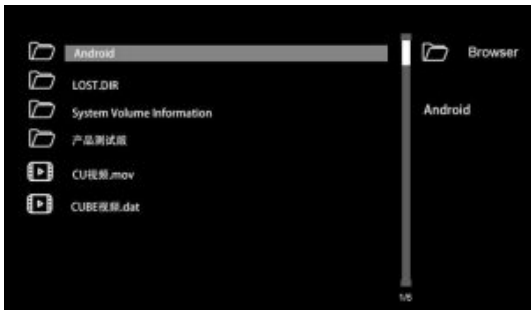

Setting

From the main menu, press the **▶▶** and **◀◀** buttons to select “Setup” and then press the **▶||** button to enter “Setting mode”, press the **⬇** and **⬆** buttons to select photo/music /video /date & time /System setup . Then press the **▶||** button to confirm. Press the **EXIT** Button to exit “Setup” mode and return to the main menu.




Photo Setup: Press the **⬇** and **⬆** buttons to select “Photo setup”, and press the **▶||** button to set: Display Mode / Cycle Mode /Slide Interval / Effect setting, press the **▶▶** and buttons to set.

Music Setup: Press the **⬇** and **⬆** buttons to select “Music setup”, and press the **▶||** Button to set Cycle Model, press the **▶▶** and **▶▶** buttons to set;

Video Setup: Press the **⬇** and **⬆** buttons to select “Video setup”, and press the **▶||** Button to set Cycle Model and Display Mode, press the **▶▶** and **▶▶** buttons to set.;

Date & Time: Press the **⬇** and **⬆** buttons to select “Date & Time setup”, and press the **▶||** Button to set Date / Clock Mode / Time / Alarm Status /Alarm Time /Alarm Frequency, press the **▶▶** and **▶▶** buttons to set.

System Setup: Press the **⬇** and **⬆** buttons to select “System setup”, and press the **▶||** Button to set Language /Brightness /Contrast /Saturation /Power on /Auto Boot Time/Power off/Auto Shut Time, press the **▶▶** and **◀◀** Buttons to set and press the EXIT button to exit.

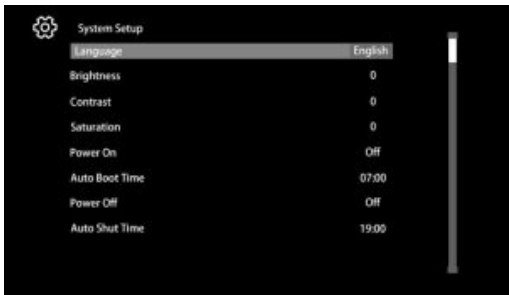 

Note: After you set an item and enter it into the next item, the set mode/data will auto saved.

Specifications:

Display	10.1" Digital TFT Screen aspect ratio: 16:9 Display Resolution: 1024 x 600 pixels
Power adapter	Input: 100-240VAC, 50/60Hz Output: 5VDC 1500mA
USB slot	USB 2.0 slot supports most USB flash drives
Supported memory cards	SD(Secure Digital Card), MMC(Multimedia Card)
Supported file format	JPEG,Mp3&WMA,MPEG1 , MPEG2, MPEG4 (Divx4.0,Divx5.0, Xvid) AVI, M-JPEG and H.264
Operating temperature	40° – 95° F (5° – 35° C)
File Size Limit	64MB (8000 x 8000 pixels)

For more information, please visit: www.maxtdigital.com/kodakframes
All information contained in this document is subject to change without notice


Troubleshooting:

Problem	Cause/Solution
No power	The power connector is not completely inserted into the DC IN Jack.
Screen freezes	The unit may have malfunctioned. Switch it off and wait a few minutes before turning it on again.
Characters in the display are incorrect	Make sure that you have selected the correct language.
Unable to insert a memory card or USB device.	Memory card or USB device is not inserted correctly; insert the card in the opposite side.
The unit cannot recognize the memory device inserted.	<ol style="list-style-type: none"> 1. Memory card or USB device is not inserted correctly. 2. The memory device may be damaged. Try a different card/device. 3. Make sure that you are using a memory card type that is compatible (SD/MMC). 4. It is slow to read the large capacity memory device; wait for a moment. 5. USB drive is formatted with an incompatible file system. Make sure the drive is formatted as FAT32. NOTE: Not all USB devices or memory cards are recognized by this digital photo frame.
A memory card or USB device is inserted in the frame, but it is not able to read the card or USB device.	<ol style="list-style-type: none"> 1. Make sure you are using a memory card or USB device that is compatible. 2. Make sure that the memory card or USB device is inserted completely. 3. The memory card or USB device is damaged.
NOTE: As a result of continual improvements, the design and specifications of this product may differ slightly from the unit illustrated on the packaging and are subject to change without notice.	

Additional instructions:

There is a button cell inside remote control, In order to reduce the risk of accidental ingestion by children, please note:

 1. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention."
2. Replaceable button cells should be noted: even used cells may cause damage, so please do not throw away optionally; Batteries should be disposed of properly and kept away from children.
3. If not used for a long time, please insert the insulation piece into the box.

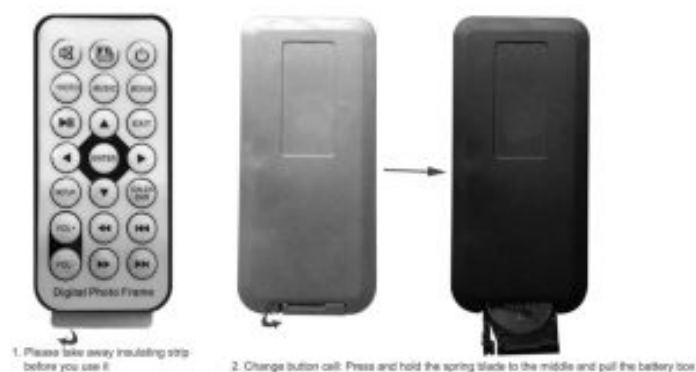

The Kodak trademark, logo, and trade dress are used under license from Kodak.
 © 2018 Maxtalent Industrial Ltd, Spa Centre 53-55 Lockhart Road Wanchai HK.
 All information contained in this document is subject to change without notice.
 Made in China



Documents / Resources



[KODAK RDPF-1020W Digital Photo Frame \[pdf\] User Manual](#)
 RDPF-1020W, Digital Photo Frame

Manuals+,

- [home](#)
- [privacy](#)