



KODAK Smile+ Digital Instant Print Camera User Guide


[Home](#) » [Kodak](#) » KODAK Smile+ Digital Instant Print Camera User Guide 



Contents

- [1 Product Overview](#)
- [2 Getting Started](#)
- [3 Photo Tips](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


Product Overview

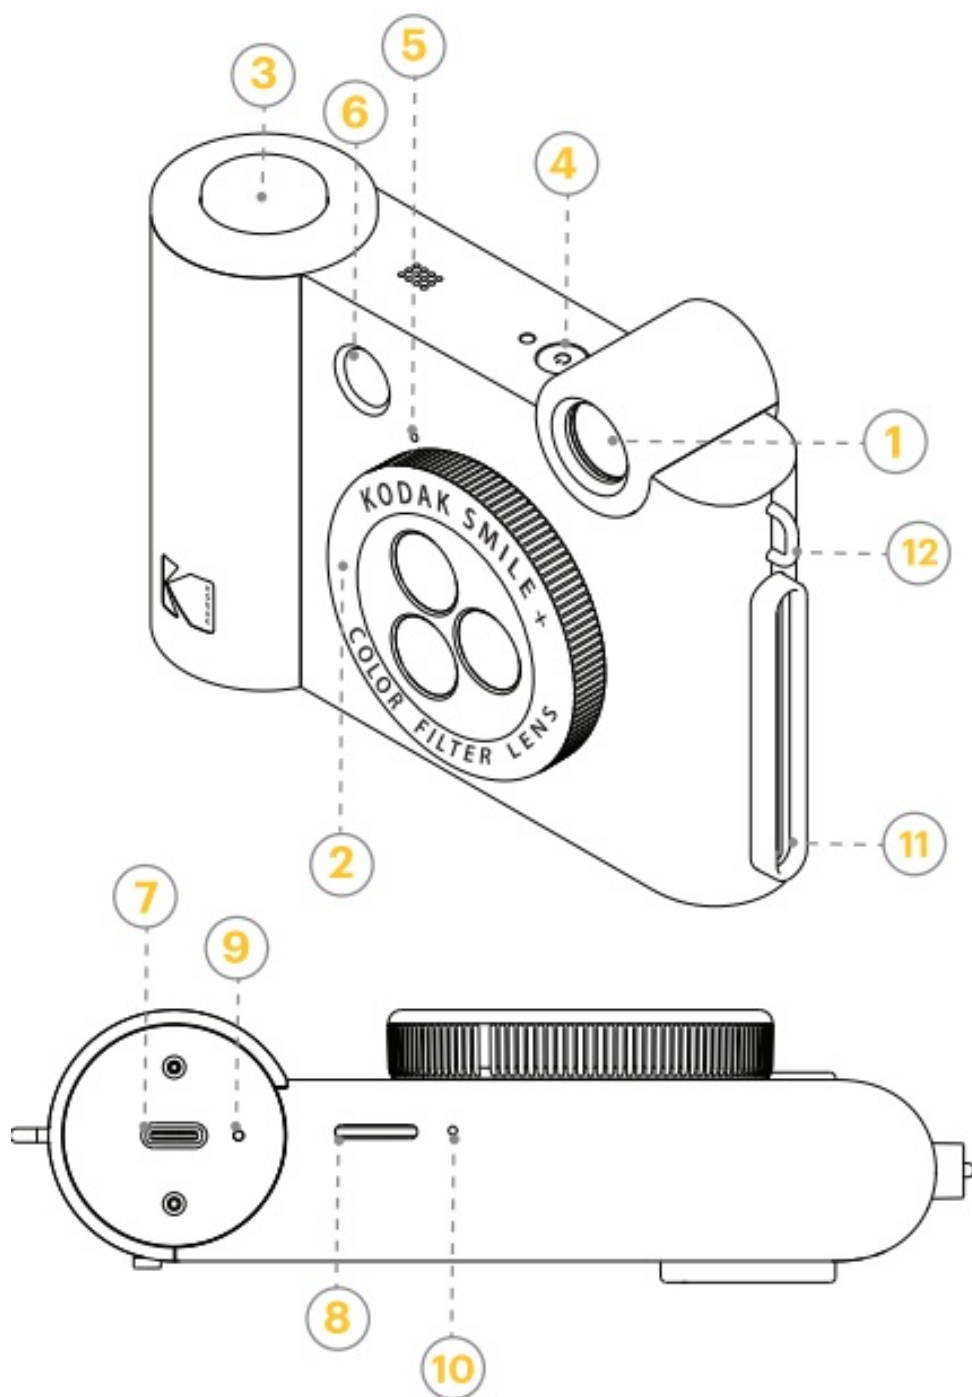


1 Viewfinder
 2 Filter-changing Lens
 3 Shutter Button
 4 Power Button
 5 Lens Alignment Dot
 6 Flash

7 USB Port
 8 MicroSD Card Slot
 9 Charging LED
 10 Reset Button
 11 Printing Slot
 12 Strap Loop


Getting Started

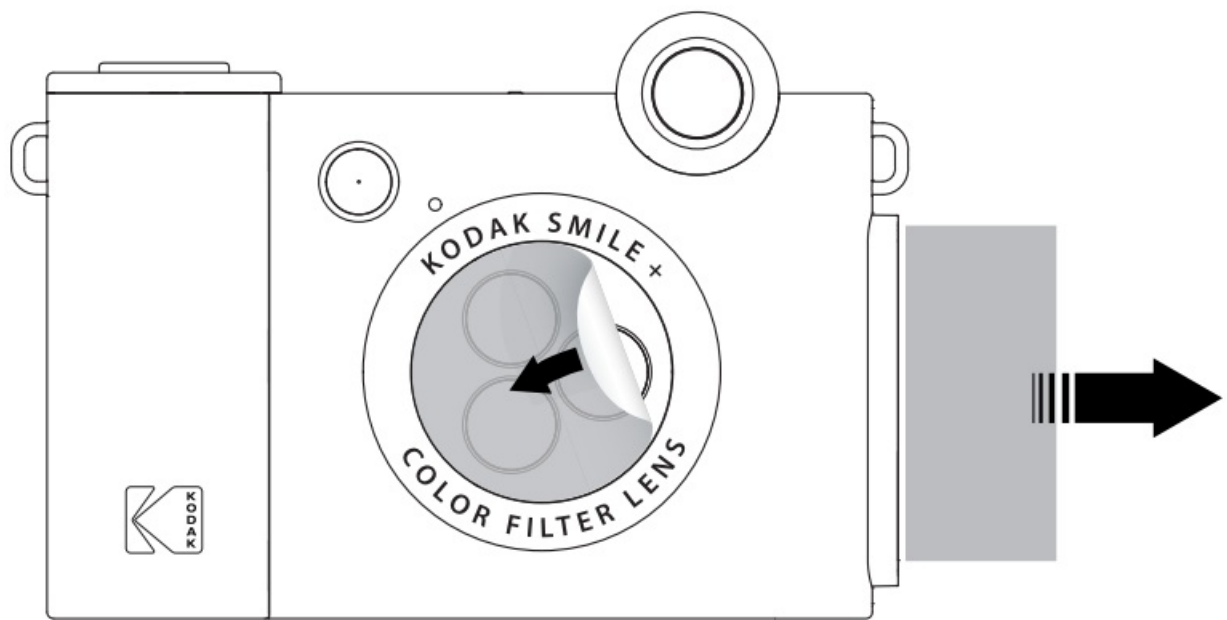


Remove plastic from camera lens and photo cardboard.

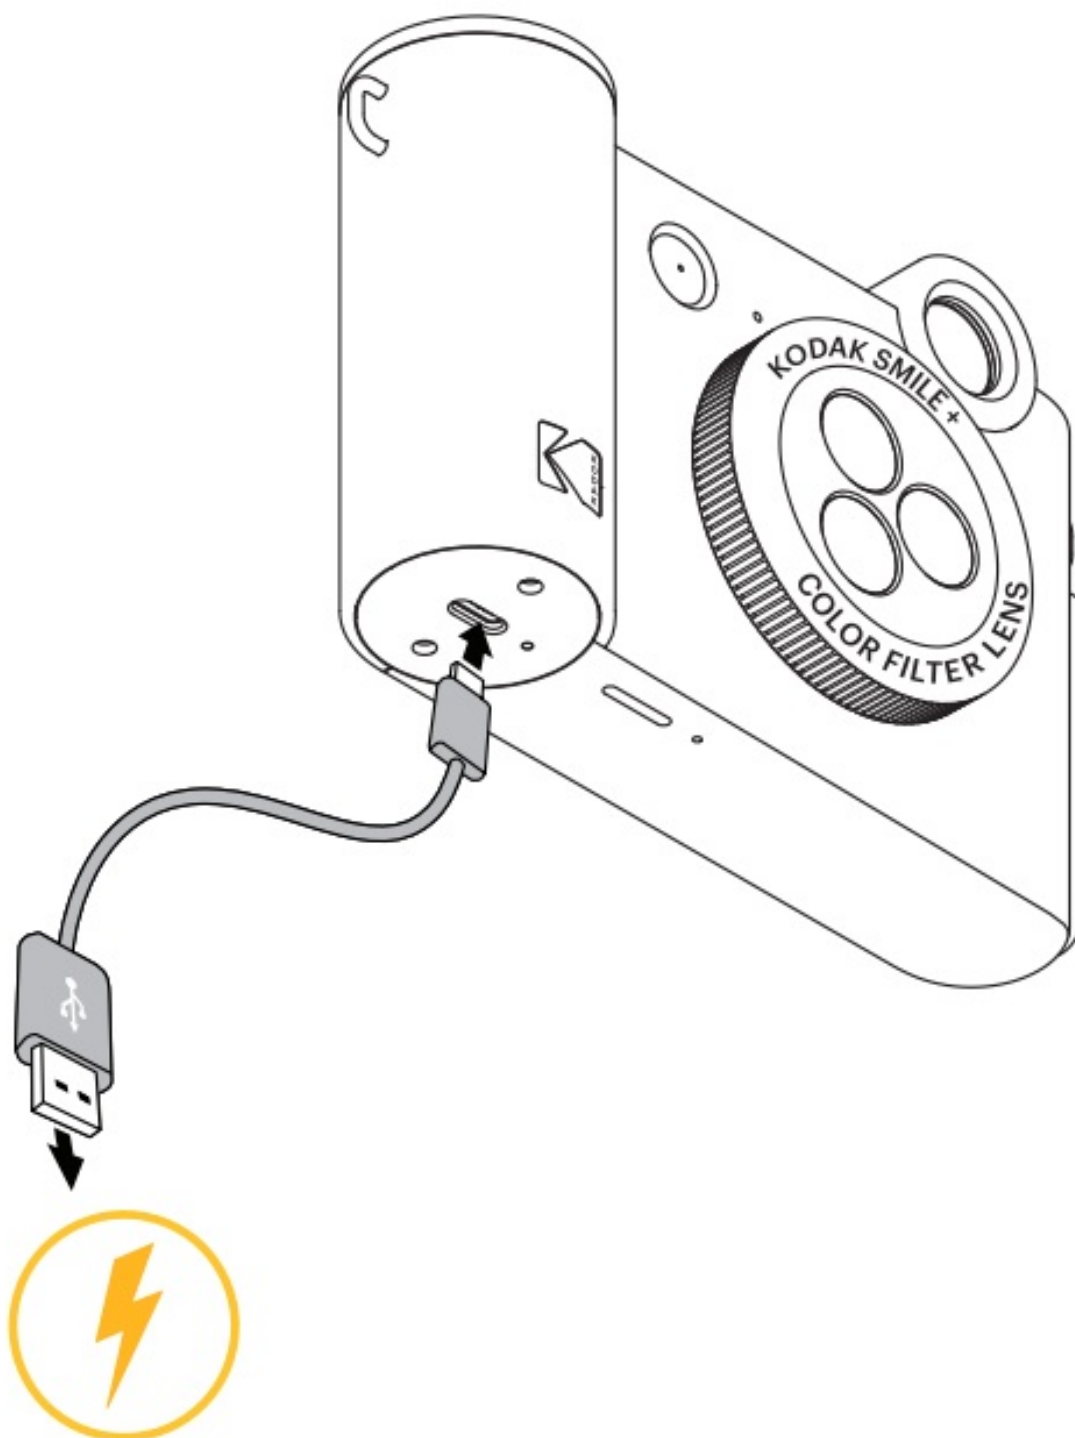

Charge the camera with a USB cable before use.

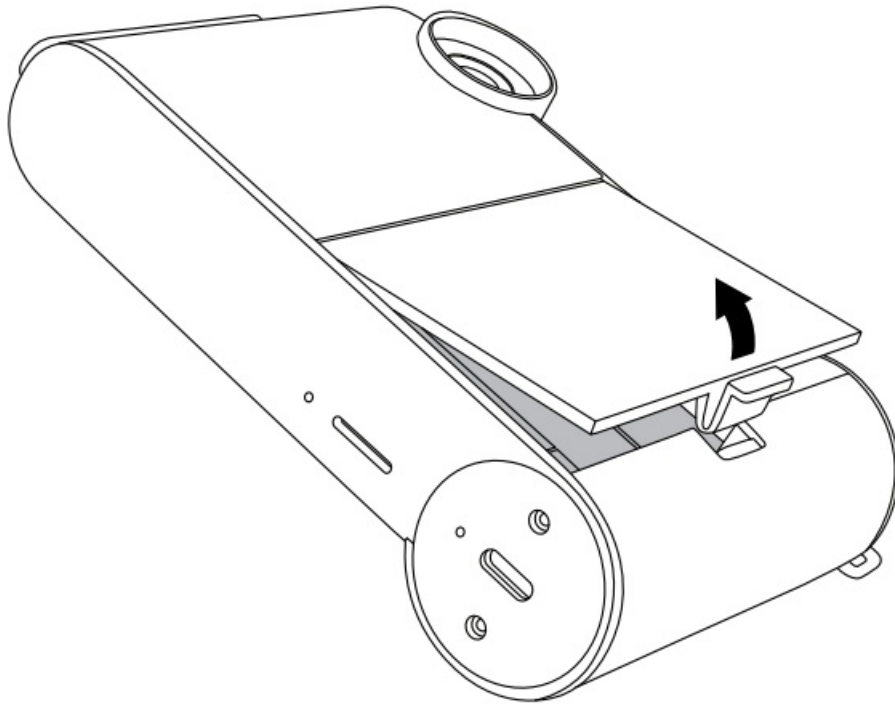


Lift tab to remove the camera door.

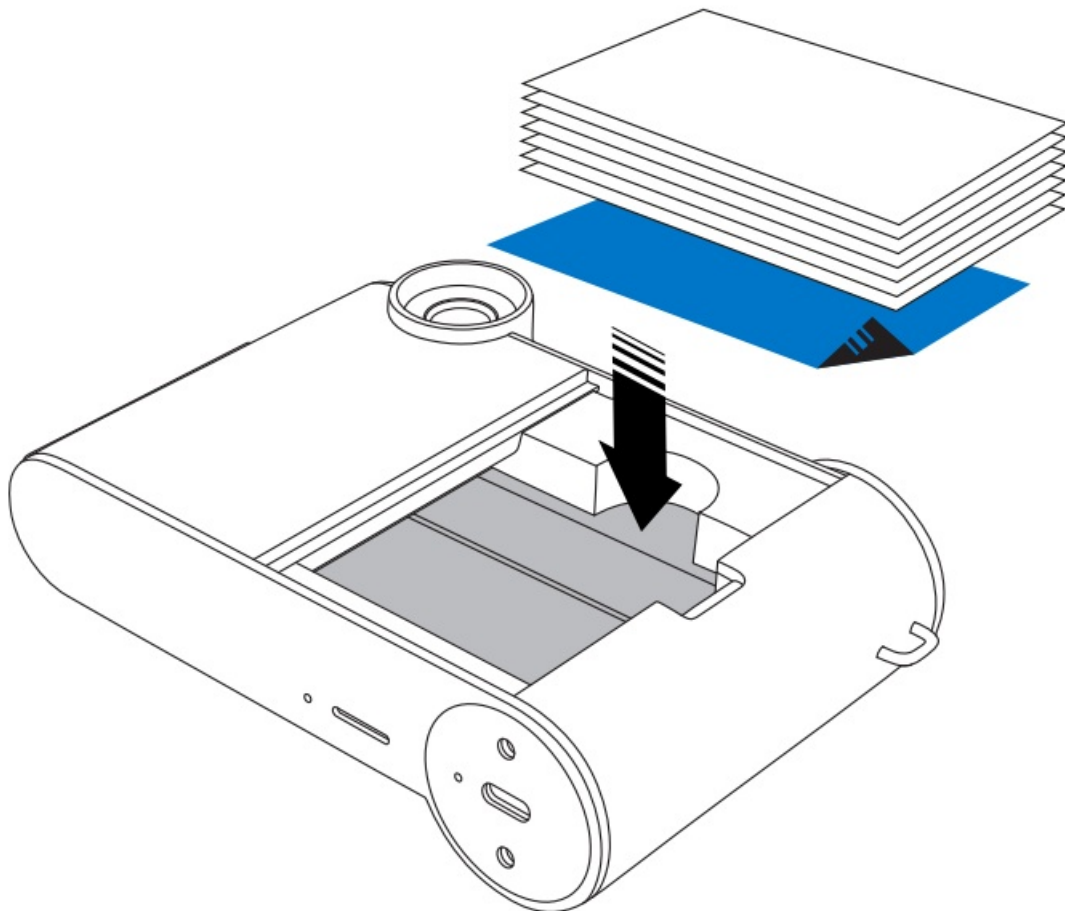


Insert paper into the paper compartment.


NOTE: Blue sheet should be at the bottom of the paper stack facing down.

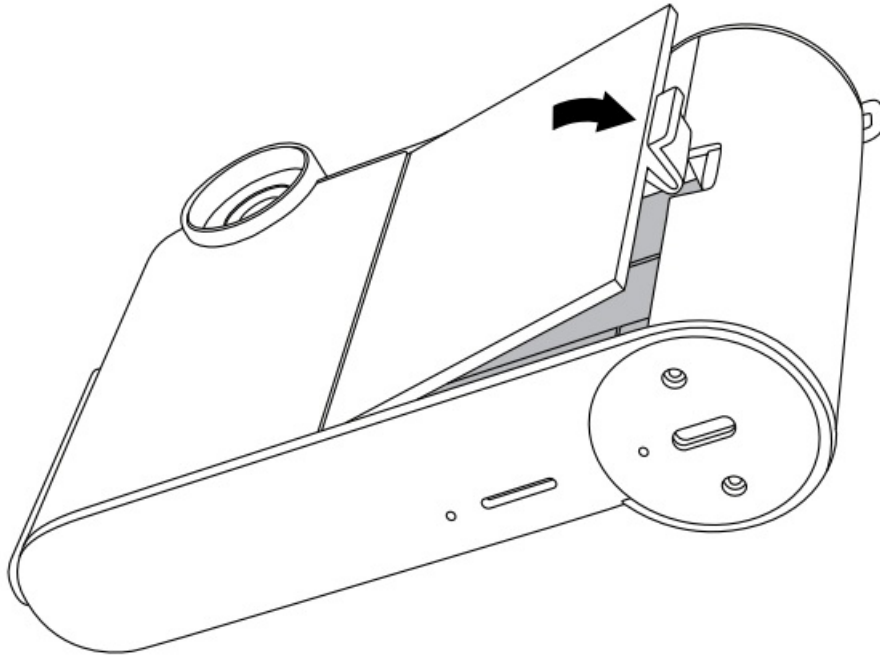

Place the camera door back onto the camera.

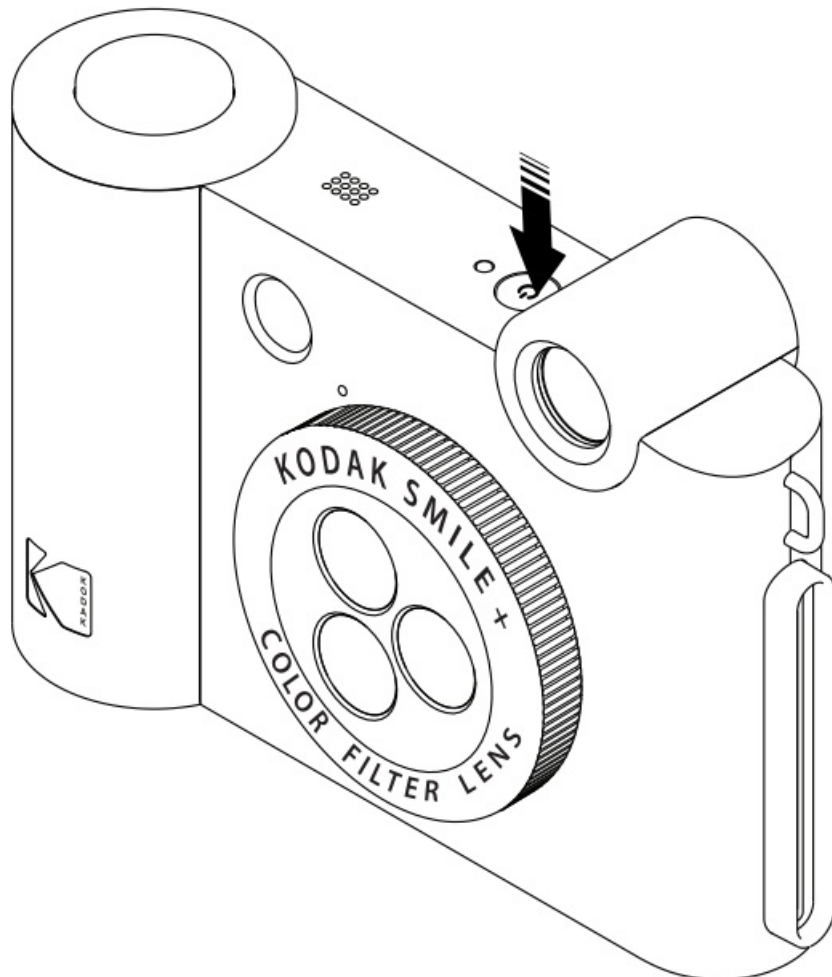


Press the power button for 3 seconds to turn on the camera.

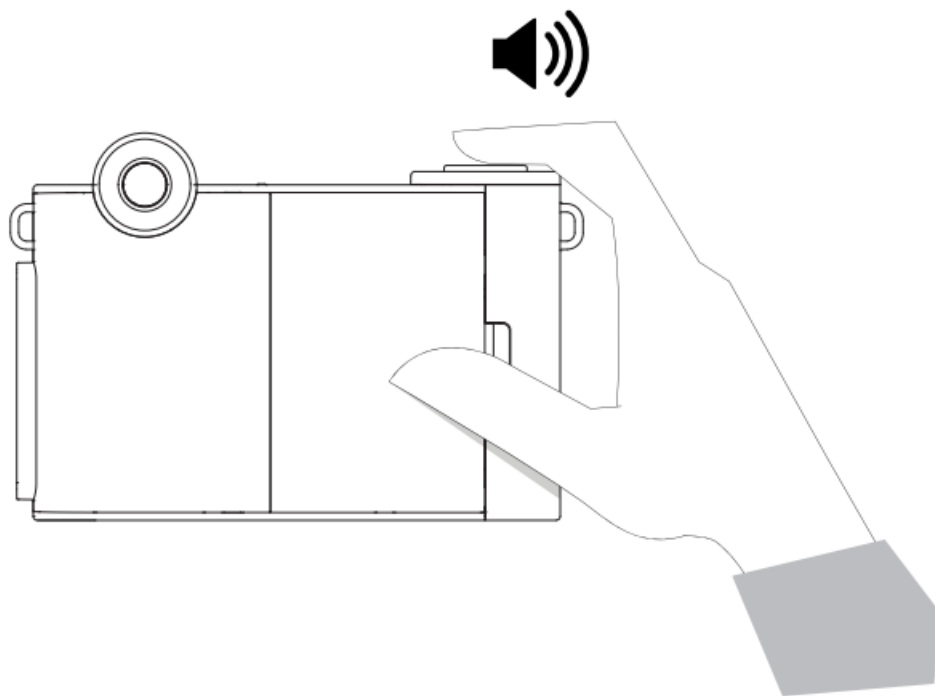

When you're ready to take a photo, press down on the shutter button and hold the camera still until you hear an alert.


Natural

Magenta

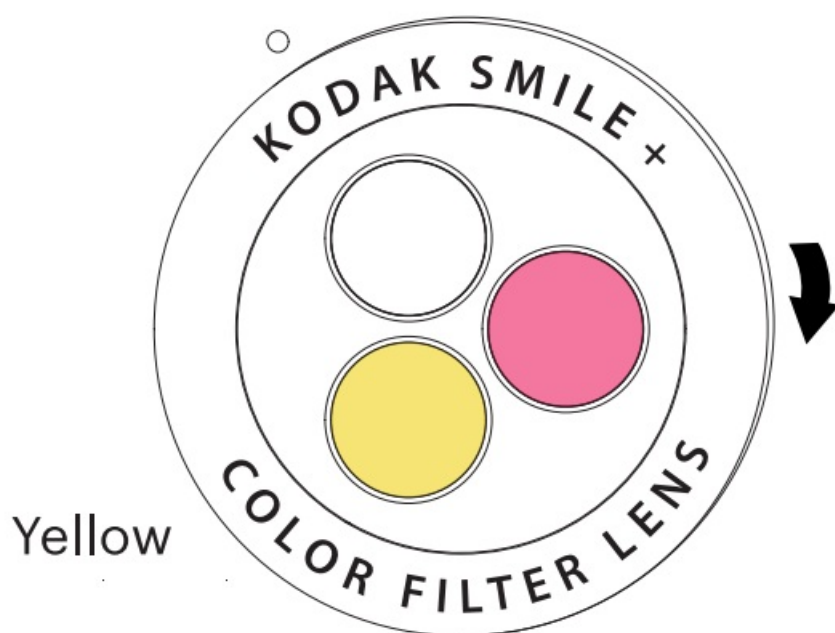


Yellow

Turn the lens on the front of the camera to select a different color filter: Natural, Yellow, or Magenta.

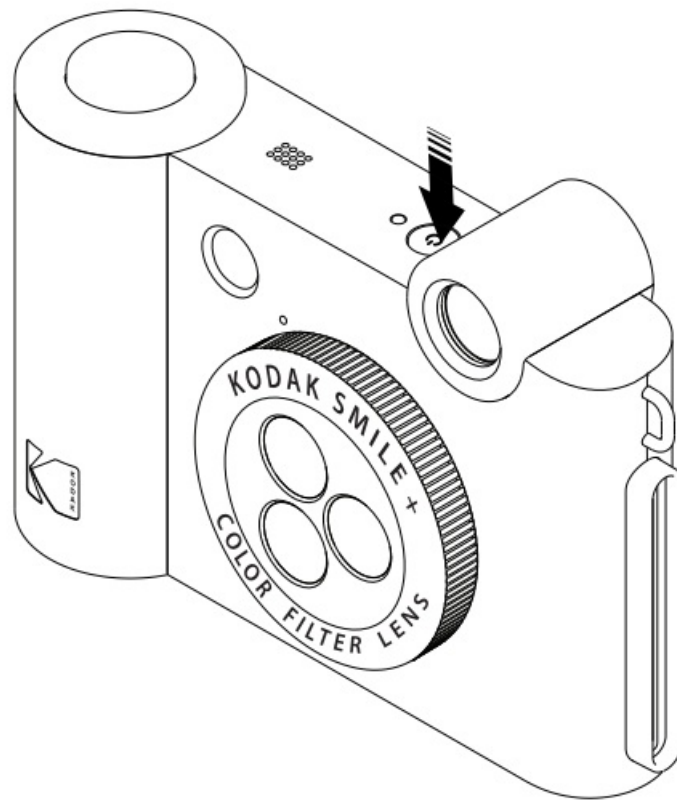

When you're done, press and hold the power button to turn off the camera.

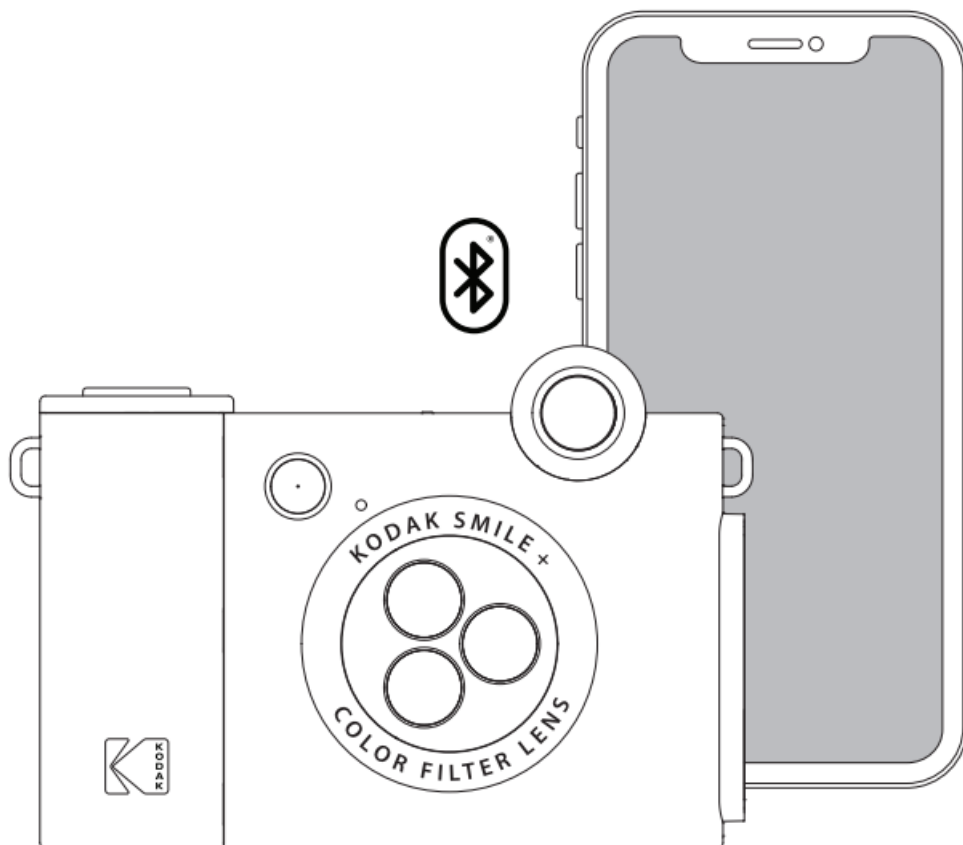

Connect your smartphone to the camera via Bluetooth® to print photos from your smartphone.
To download the Kodak Smile app, scan the Apple or Android QR code below:



KODAK Smile App



https://play.google.com/store/apps/details?id=com.kodaksmile&hl=en_US&gl=US
<https://apps.apple.com/us/app/kodak-smile/id1447241173>

Photo Tips

Be aware that the blue sheet will print out first.

To reset camera, press and hold the reset button for 2 seconds using a pin.

When using a SD card, photos can only be saved to the SD card. You can't print photos from the SD card.

The flash will automatically turn on when the camera senses the environment is dark.

Make sure not to cover printing slot with hand when photo is printing.

The Kodak trademark, logo, and trade dress are used under license from Eastman Kodak Company.

ZINK, ZERO INK, and the ZINK logo are trademarks of ZINK Holdings, LLC.

Bluetooth is a trademark of Bluetooth SIG, Inc. USA.

Android and Google Play are trademarks of Google LLC.

Apple, iOS, and App Store are trademarks of Apple Inc. in the U.S. and other countries.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to

connote any sponsorship, endorsement, or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837

©2022, C&A I P Holdings LLC. All Rights Reserved.

MADE IN VIETNAM

Get the Style that's Right for You!

Available in Pink, Green, Blue, Black, White, or Fuchsia



Customer Service:

U.S. Support: kodak@camarketing.com

844-516-1539

International Support: kodakintl@camarketing.com

844-516-1540

MORE Information

For further information, scan the QR code below to visit our support page.



<https://www.kodakphotoplus.com/pages/kodak-smile-support>



[kodakphotoplus.com](https://www.kodakphotoplus.com)

Documents / Resources



[KODAK Smile+ Digital Instant Print Camera](#) [pdf] User Guide

RODSMPCAM, 2AD2W-RODSMPCAM, 2AD2WRODSMPCAM, Smile Digital Instant Print Camera, Digital Instant Print Camera, Instant Print Camera, Print Camera, Camera