

kogan
kogan.com
KAMN40DQUCWA 40
Inch Curved Ultrawide
WUHD 5k USB-C
Freesync Monitor



kogan.com KAMN40DQUCWA 40 Inch Curved Ultrawide WUHD 5k USB-C Freesync Monitor User Guide

[Home](#) » [Kogan.com](#) » kogan.com KAMN40DQUCWA 40 Inch Curved Ultrawide WUHD 5k USB-C Freesync Monitor User Guide 

Contents

- 1 kogan.com KAMN40DQUCWA 40 Inch Curved Ultrawide WUHD 5k USB-C Freesync Monitor
- 2 Product Usage Instructions
- 3 SAFETY & WARNINGS
- 4 COMPONENTS
- 5 OVERVIEW
- 6 ASSEMBLY
- 7 OPERATION
- 8 SPECIFICATIONS
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

kogan

kogan.com KAMN40DQUCWA 40 Inch Curved Ultrawide WUHD 5k USB-C Freesync Monitor



Product Usage Instructions

Safety & Warnings

Ensure the monitor is not plugged in when not in use. Before connecting the monitor to your computer, make sure to shut off the power to both the computer and the monitor.

Components

The package includes:

- Monitor
- Stand Stem
- Stand Base
- M6 x 24mm Screws (x2)
- Power Cord
- Power Adapter
- DP1.4 Cable
- Decorative VESA Cover (x2)
- User Guide

Assembly

1. Place a cloth on a flat table to protect the monitor.
2. Lay the monitor on the cloth with the screen facing down.
3. Secure the stand stem to the stand base using the provided screws.
4. Attach the assembled stand to the monitor and place it on the table.
5. Attach the decorative VESA covers to the rear of the monitor.

Operation

1. Connect one end of the DP 1.4 cable to your computer's graphics card and the other end to the DP port on the

monitor.

2. Connect the power adapter to the monitor, then connect it to the power cord and finally to a power source using a surge protector if needed.
3. Press the 'Power' button on the monitor to turn it on.

Using OSD Menu

1. To access the OSD menu, press the 'Power' button right.
2. Navigate and configure options using the 'Power' button in various directions.
3. To return to the previous menu, move the 'Power' button left.
4. To exit the OSD menu, continue moving the 'Power' button left until you exit.

FAQ

- **Q: How do I enable FreeSync/G-Sync?**

A: Ensure FreeSync/G-Sync is enabled in your computer's graphics card menu. If not prompted, check your graphics card settings.

- **Q: What is PBP/PIP and how do I use it?**

A: PBP (Picture-by-Picture) and PIP (Picture-in-Picture) are display modes that show multiple inputs simultaneously. Refer to your user guide for specific instructions on enabling and using these features.

USER GUIDE

- 40" CURVED ULTRAWIDE WUHD
- 5K USB-C FREESYNC MONITOR
- 5120 X 2160
- KAMN40DQUCWA

SAFETY & WARNINGS

- Read all instructions before use and retain this user guide for future reference.
- Unplug the monitor before cleaning it with a slightly damp, clean cloth.
- Wiping the screen with a dry microfibre cloth once the monitor has been turned on is recommended.
- Do not use cleaning alcohol, ammonia-based liquids or other harsh cleaners.
- Do not cover or block the ventilation holes in the monitor casing.
- Do not place the monitor near heaters, stoves, fireplaces or other sources of heat, as well as in rooms lacking adequate ventilation.
- Do not insert any objects or spray any liquid into the vents.
- Do not position the monitor in unsafe locations. If the monitor falls, it may be damaged and may injure nearby people.
- Unplug the monitor if it is not going to be used for an extended period.
- Do not place heavy objects on the monitor, its power cord or any connected cables.
- Do not open the back panel of the monitor, as it contains a high-voltage current even when not plugged in.

COMPONENTS



Monitor



 
Stand Stem




Stand Base




M6 x 24mm
Screws (x2)



Power Cord

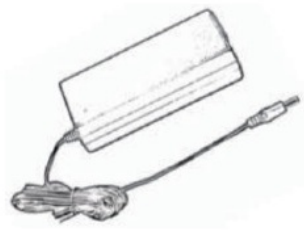 

Power Adapter

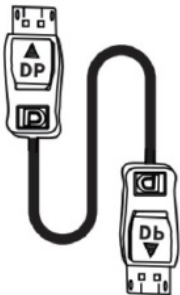 

DP1.4 Cable

 


Decorative VESA
Cover (x2)



User Guide

OVERVIEW

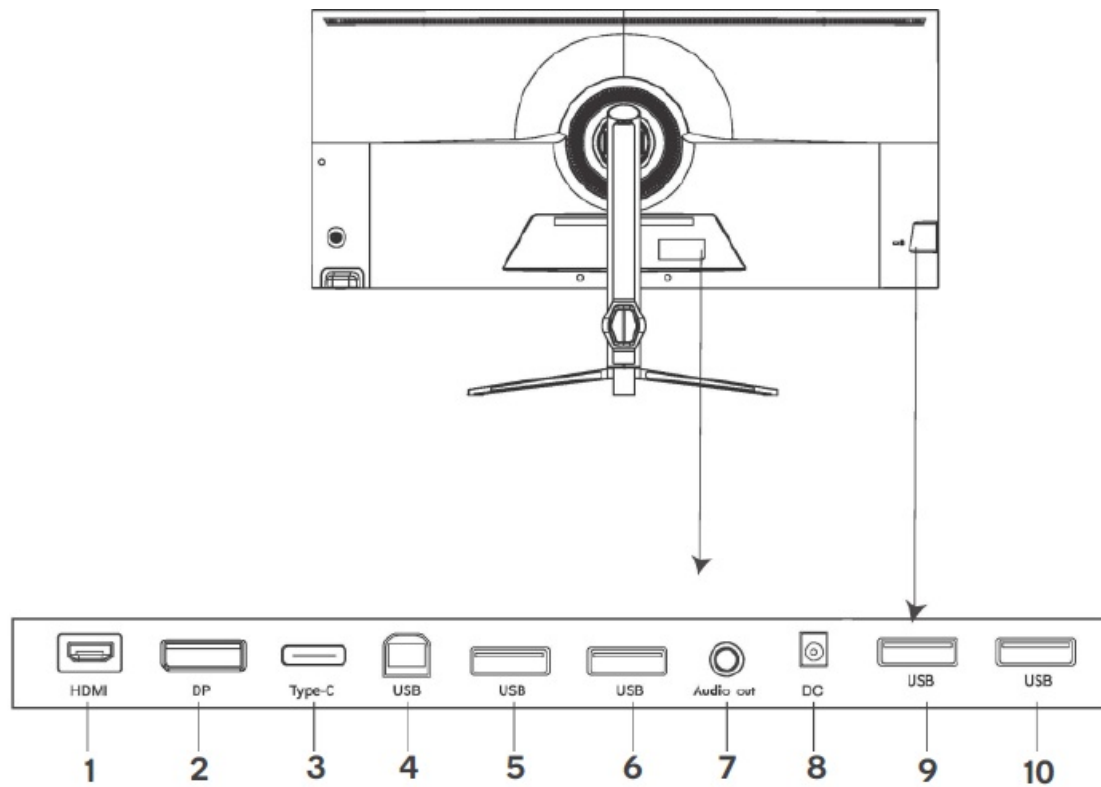

1. HDMI
2. DP
3. USB-C
4. USB-B
5. USB-A
6. USB-A
7. Audio Out
8. DC (Power Input)
9. USB-A
10. USB-A

- For best results, an HDMI 2.1 cable is recommended when connecting to the monitor.
- When connecting devices to the monitor, it is recommended to connect the USB-B first. Then, the USB-A ports can be used.
- USB-B is commonly used for printers, monitors and other devices.
- USB-A is commonly used for mice, keyboards, U disks and other devices.

 
WARNING: Before connecting the monitor to your computer, shut off the power to the computer and the monitor.

- **Users Controls**

Press the 'Power' button to turn the monitor on/off.

- **Note:**

To access the monitor settings, ensure you first have a source connected to one of the monitor ports.


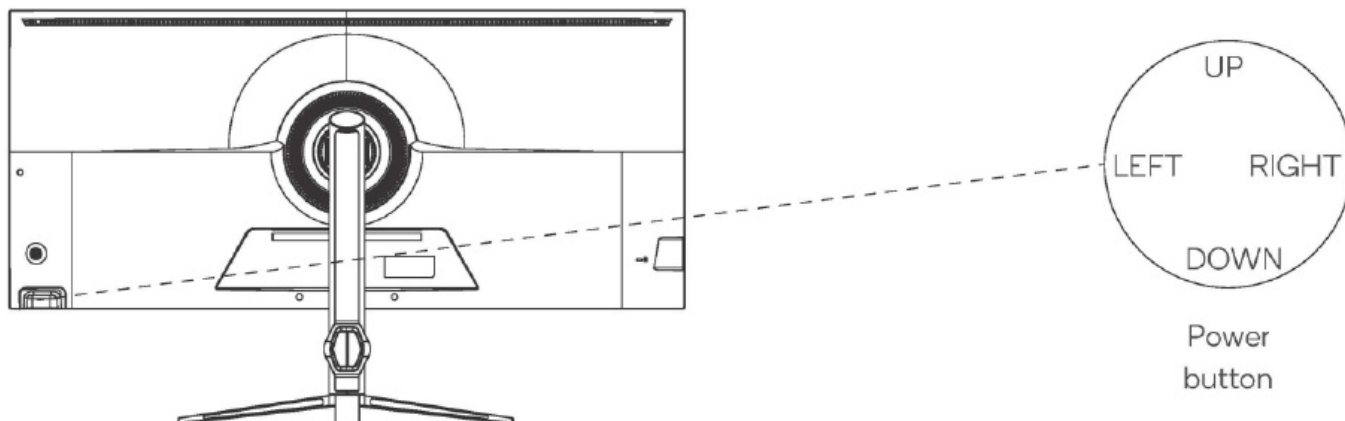


Control	Description
Indicator	Blue – Power on.
	Red – Standby.
Press LEFT	Return to the previous menu level or exit the OSD menu.
Press RIGHT	Enter the OSD menu and confirm key.
Press UP & DOWN	Adjust OSD menu settings.
Press in	Power on/off.



ASSEMBLY

Stand Assembly

  
1. Place a cloth on a flat table. Ensure there are no hard objects, such as screws, on the table.
2. Gently lay the monitor on the cloth with the screen facing down.

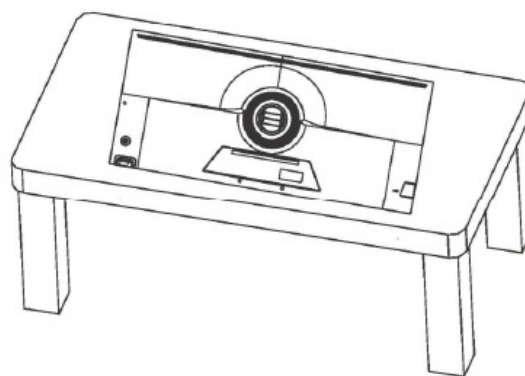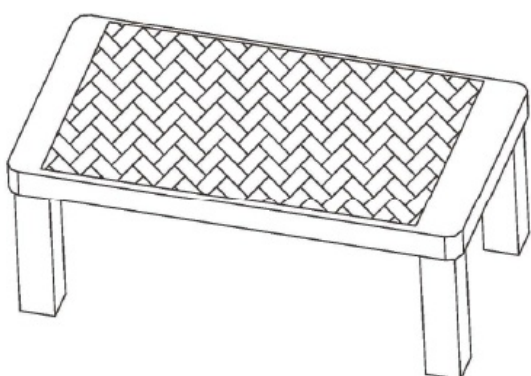

  3. Secure the stand stem to the stand base using the provided rotary screw.
4. Slot the assembled stand into the monitor. Lift the monitor by holding the stand and place it on the table.

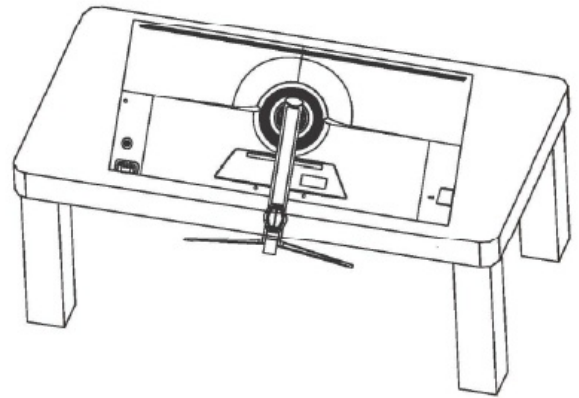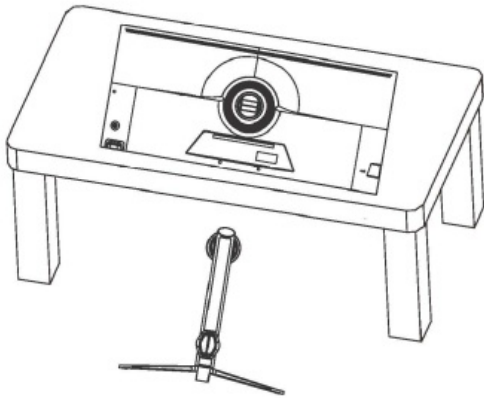

5. Attach the x2 decorative VESA covers to the rear of the monitor.

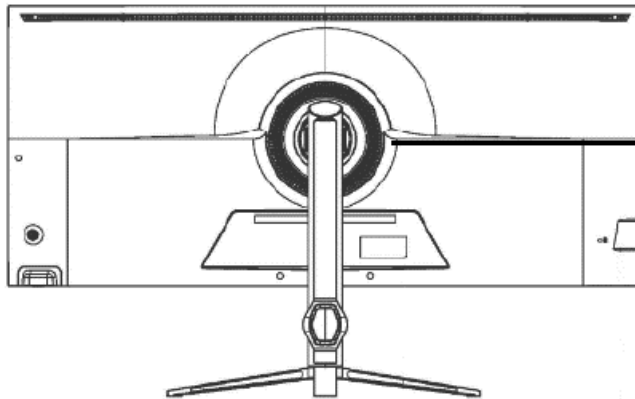 



Decorative VESA
Cover (x2)

Adjust The Angle

The angle of the screen can be adjusted forward 5° or backward 15° to create the ideal viewing experience.

Notes:

  - Do not touch or press the screen when adjusting the angle of the monitor.
- The images below are for illustrative purposes only. The actual monitor may differ slightly.

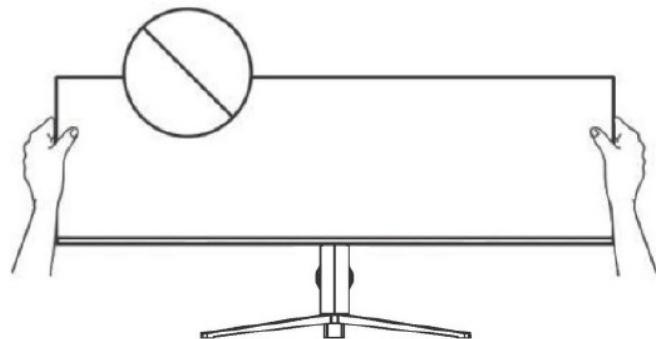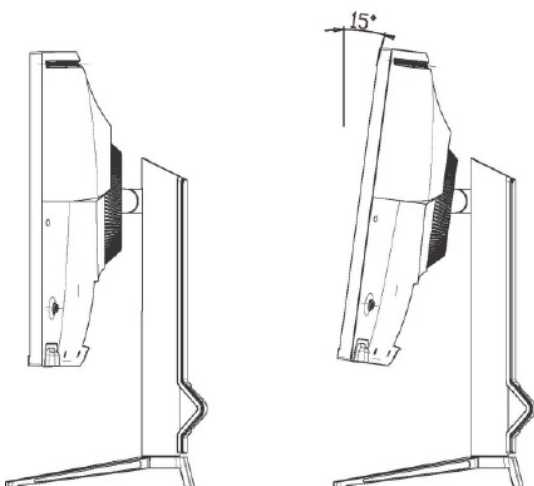


Wall Mounting

- To ensure sufficient ventilation, install the monitor at least 10cm away from the wall and leave about 10cm of space on each side of the monitor.
- If you are not confident in wall mounting this monitor, consult a licensed trade professional.

WARNING: Before installing the monitor on the wall, detach the stand from the monitor.

 1. Place a clean, dry and lint-free cloth on a flat, stable surface.
2. Gently lay the monitor on the cloth with the screen facing down.
3. Identify the four wall mounting screw holes on the back of the monitor.
4. Install the wall mounting bracket (not provided) on the back of the monitor and attach the monitor to the wall according to the mounting bracket's instructions.
5. Ensure that all screws (not provided) are tightened and secured.

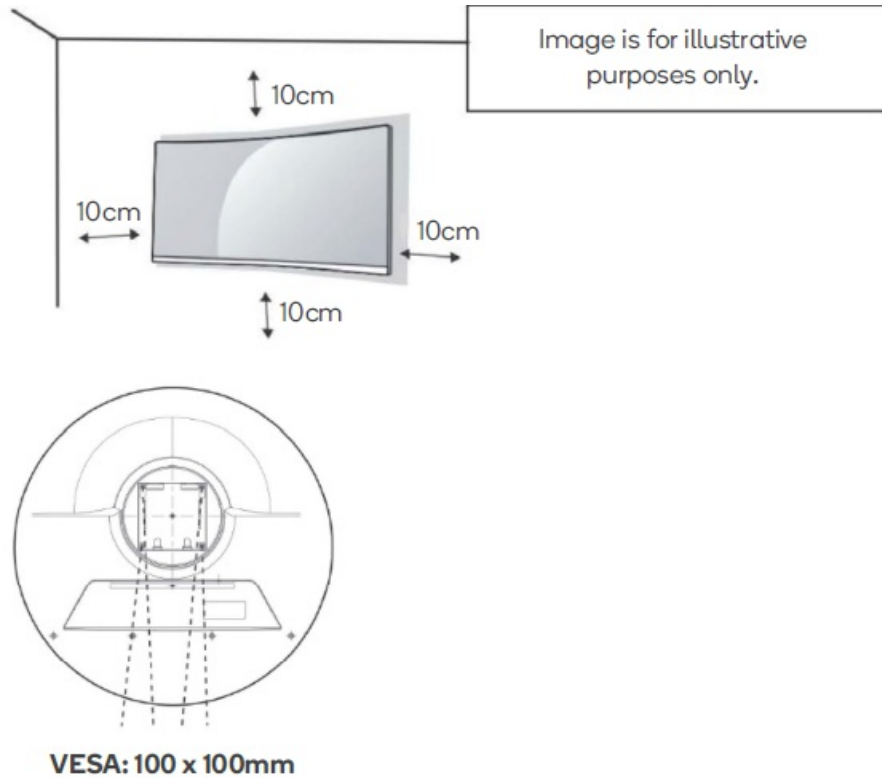

Recommended screw size:

- Plate thickness 2mm – M4 x 6mm
- Plate thickness 3mm – M4 x 7mm

Notes:

- Use a wall mounting bracket and screws that conform to VESA standards. Ensure that the plate fits appropriately.
- For more information, refer to the user guide for the wall mounting bracket.
- This monitor does support wall mounting, however, due to its size, it is recommended to use a stand.

OPERATION

1. Insert one end of the provided DP 1.4 cable into your computer's graphics card. Insert the other end of the cable into the DP port on your monitor.
2. Connect the power adapter to the monitor and then connect the other end of the power adapter to the power cord. Then, connect the power cord to your power source. It is recommended that you use a surge protector

with adequate voltage if an electrical outlet cannot be directly reached.

3. Locate the 'Power' button on the monitor and press it to turn the monitor on.

FreeSync/G-Sync


- Ensure your computer has FreeSync/G-Sync capability, a DP 1.4 port and the latest graphic drivers.
- FreeSync/G-Sync is on by default when setting 60Hz refresh rate.
- To use FreeSync/G-Sync, connect your computer and monitor with a DP 1.4 cable.
- After connecting, you will receive a prompt to enable FreeSync/G-Sync on your computer. If you do not receive the prompt, you may need to enable the function in your graphics card menu.

PBP/PIP

- Wide screen monitors offer Picture-by-Picture (PBP) and Picture-in-Picture (PIP) display modes that allow users to view multiple videos or devices simultaneously on a single monitor.
- PBP divides the screen into sections, enabling side-by-side display of different video signals from separate sources, while PIP overlays windows on top of each other, useful for tasks like video conferencing. These functions let you connect and display various devices on one monitor, such as a computer and a gaming console, maximising screen real estate and enhancing multitasking or entertainment experiences.

Using the OSD Menu

 1. To view the OSD menu, press the 'Power' button right.
2. Configure the options by moving the 'Power' button up, down, left and right.
3. To return to the previous menu, move the 'Power' button left.
4. To exit the OSD menu, move the 'Power' button left until you exit.

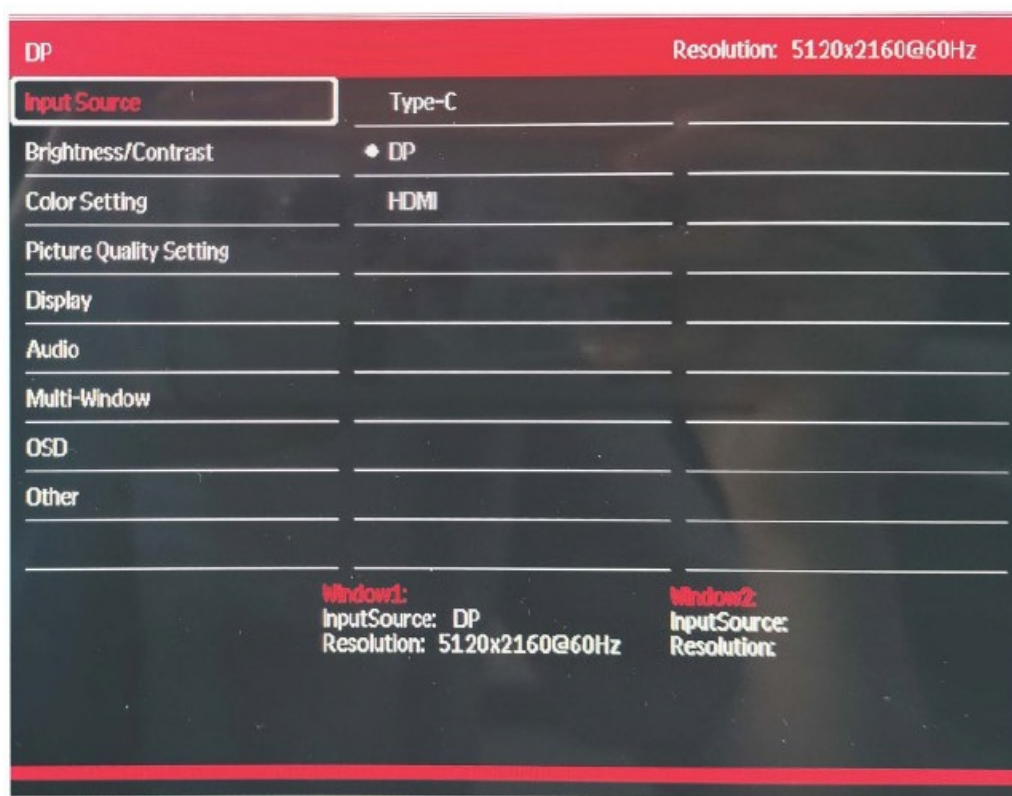


SPECIFICATIONS

Panel	
Panel type	IPS
Curvature	R2500 (TYPE)
Aspect ratio	21:09
Size (inch)	40"
Resolution	5120 x 2160
Refresh rate	75Hz
Brightness (typ.)	300cd/M2 (max)
Contrast ratio static	TYP 1000:1
Colour support	1.07B (8-BIT + HI-FRC)
Viewing angle (HIV)	178/178 (HIV)
Response time (GTG)	14 (typ.) (G to G) (ms)
Input/Output	
Interface	HDM + DP + USB-C + 3 – 1 x USB-B + 2 x USB-A + AUDIO OUT + 2 x USB EXTENSION + DC
USB extension	USB-A (x2)
Speaker	2
Power	
Power supply	100-240AC, 50/60HZ
Type	DC 24V-5A
Consumption	Input power: 125W (max)
	Standby power: S0.5W

Physical Specifications	
Monitor colour	Black
Dimension	Packaging dimension: 1130 × 165 × 530mm (±5mm)
Weight	Net weight: 9.4 kg (±0.5 kg)
	Gross weight: 12.8 kg (±0.5 kg)
Wall mount size	100 x 100mm
Stand	Tilt: -5°-15°
	Up & down: yes
	Swivel: yes
	Pivot: yes
FreeSync Range	<ul style="list-style-type: none"> • DP support up to 75Hz at 5120 x 2160 • HDMI support up to 45Hz at 5120 x 2160

- Need more information?
- We hope that this user guide has given you the assistance needed for a simple set-up.
- For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help.kogan.com
- kogan.com

Documents / Resources

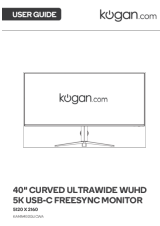	<p>kogan.com KAMN40DQUCWA 40 Inch Curved Ultrawide WUHD 5k USB-C Freesync Monitor [pdf] User Guide</p> <p>KAMN40DQUCWA, KAMN40DQUCWA 40 Inch Curved Ultrawide WUHD 5k USB-C Freesync Monitor, 40 Inch Curved Ultrawide WUHD 5k USB-C Freesync Monitor, Ultrawide WUHD 5k USB-C Freesync Monitor, WUHD 5k USB-C Freesync Monitor, USB-C Freesync Monitor, Freesync Monitor, Monitor</p>
---	--

References

- [Kogan Help Centre](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.