



## kogan 2.1 Wireless Soundbar with Bluetooth User Guide

[Home](#) » [Kogan](#) » kogan 2.1 Wireless Soundbar with Bluetooth User Guide



### 2.1 Wireless Soundbar with Bluetooth KASBRBT21A Quick Start Guide

#### Contents [ [hide](#) ]

 
- [1 Product Specifications](#)
- [2 Controls and Functions](#)
- [3 Rear Panel Attention](#)
- [4 Safety Precautions](#)
- [5 Remote Control](#)
- [6 Remote control battery replacement](#)
- [7 Pairing the Soundbar & Subwoofer](#)
- [8 System Connection Instructions](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

## Product Specifications


Power Supply	AC 100-240V / 50-60Hz
Total Power Consumption	80W
Input Sensitivity (Subwoofer)	300mV -/+ 20mV
Input Sensitivity (Satellite)	800mV -/+ 50mV
Speaker impedance of Satellite	4 Ohm
S/N (A Weight)	8 Ohm
THD (1kHz, 1W)	0.50%
Frequency Response	45Hz ~ 20KhzdB
L/R Separation (1kHz)	30dB
L/R Balance (Stereo)	+/- 2dB
Bluetooth Transmission Distance	CSR 2.1m
2.4G Between wireless subwoofer transmission distance	5 metres

## Controls and Functions

### Front Panel

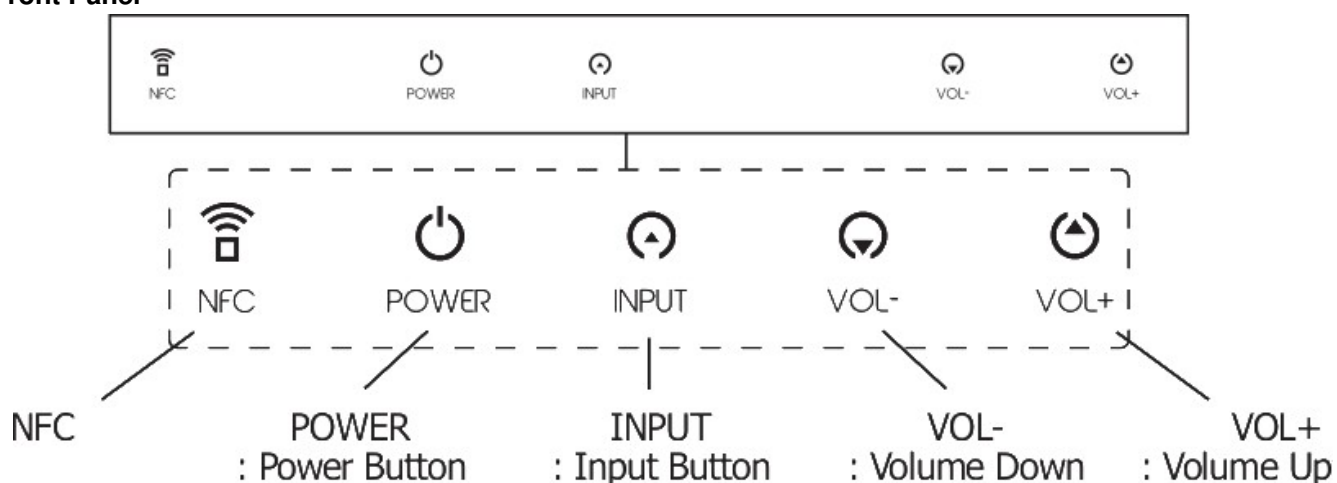

### Rear Panel

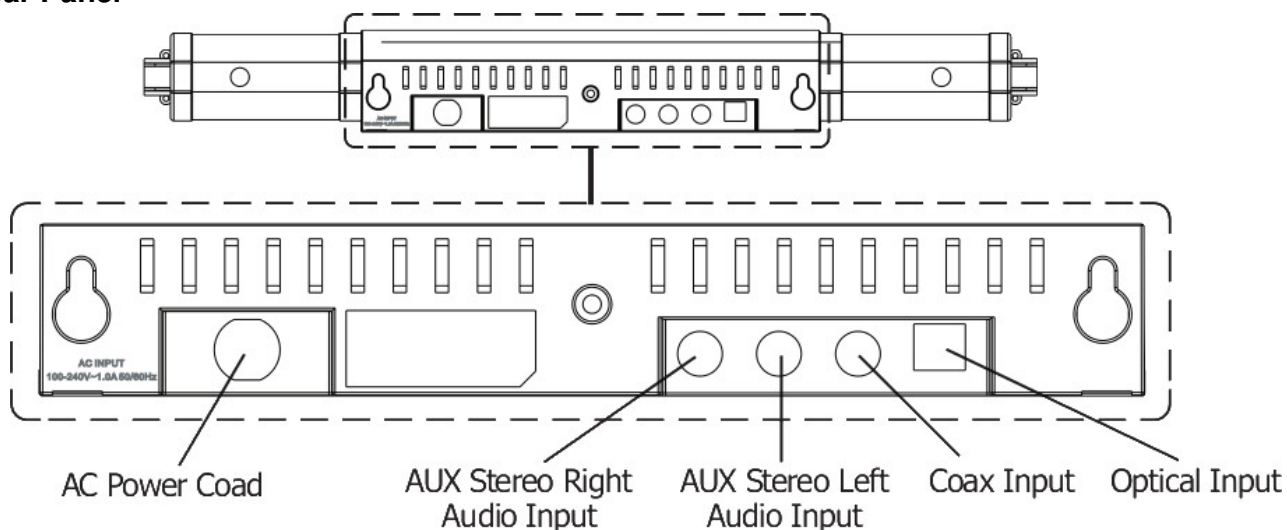

### Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order. If the product, power supply cord, or plug shows any signs of damage: stop use, unplug, and contact Kogan.com support.

## **Safety Precautions**

All safety and operating instructions should be read before the unit is used. A copy of these instructions should be kept for future reference.

- **Power & Power Cord:** connect the device to the power type as advised. Do not place objects on top of the power cord.
- **Water & Moisture:** the device should not be used near water (for example, near a bathtub, sink, laundry, near a swimming pool, etc..)
- **Ventilation:** The device should be situated so that its location or position does not interfere with its proper ventilation.

Do not use the device on a bed, sofa, rug, or similar surface that may block the ventilation openings.


- **Heat:** Keep the device away from heat sources such as radiators, heaters, stoves, or other appliances that generate heat.
- **Damage requiring service:** The appliance should be serviced by the Kogan customer support technicians when:
  - 1) The power-supply cord or the plug has been damaged; or
  - 2) Objects or liquids have fallen into the device; or
  - 3) The device has been exposed to rain; or
  - 4) The device is not operating normally or exhibits a marked change in performance; or
  - 5) The device has been dropped or damaged.
- Clean only with a dry cloth.
- Unplug the device during lightning storms or when it will remain unused for extended periods of time.

## **Remote Control**



1	Standby (On/Off)
2	Normal Mode
3	Reset (location retrieval button)
4	Bluetooth track Prev
5	Volume down
6	Bass down
7	Music mode
8	Input
9	Bluetooth track next
10	Mute mode
11	Movie mode
12	EQ adjust sound effect
13	Short press: Bluetooth Play/Pause Long press: Bluetooth Pair/Disconnect
14	Volume up
15	Bass up

## Remote control battery replacement

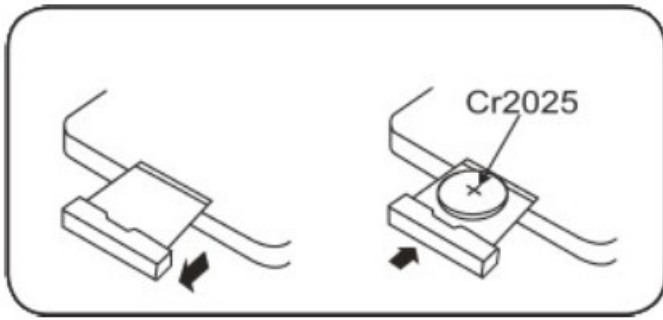

1. Replace the remote control battery when the range is reduced considerably.
2. Use only Cr2025 or D12032 3V lithium batteries.
3. Bear in mind that lighting and other room conditions, in addition to battery age, can affect the operating range of an infrared remote control.

#### **WARNING – KEEP BATTERIES OUT OF REACH OF CHILDREN**

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if the compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be
- Tell others about the risk associated with button batteries and how to keep their children




#### **Pairing the Soundbar & Subwoofer**

To use the wireless subwoofer, you must ensure that the soundbar itself has been powered up and is ready for pairing. To do this, simply turn the soundbar on, then switch the subwoofer on 30 seconds later.

If you turn the subwoofer on before the soundbar has booted up, the units will not pair and you will not get any sound from the subwoofer. The failure to pair will be indicated by the small blue LED light in the rear of the subwoofer flashing.

If the units fail to pair correctly, turn the subwoofer off, wait for 10 seconds, then switch it back on again.

#### **System Connection Instructions**

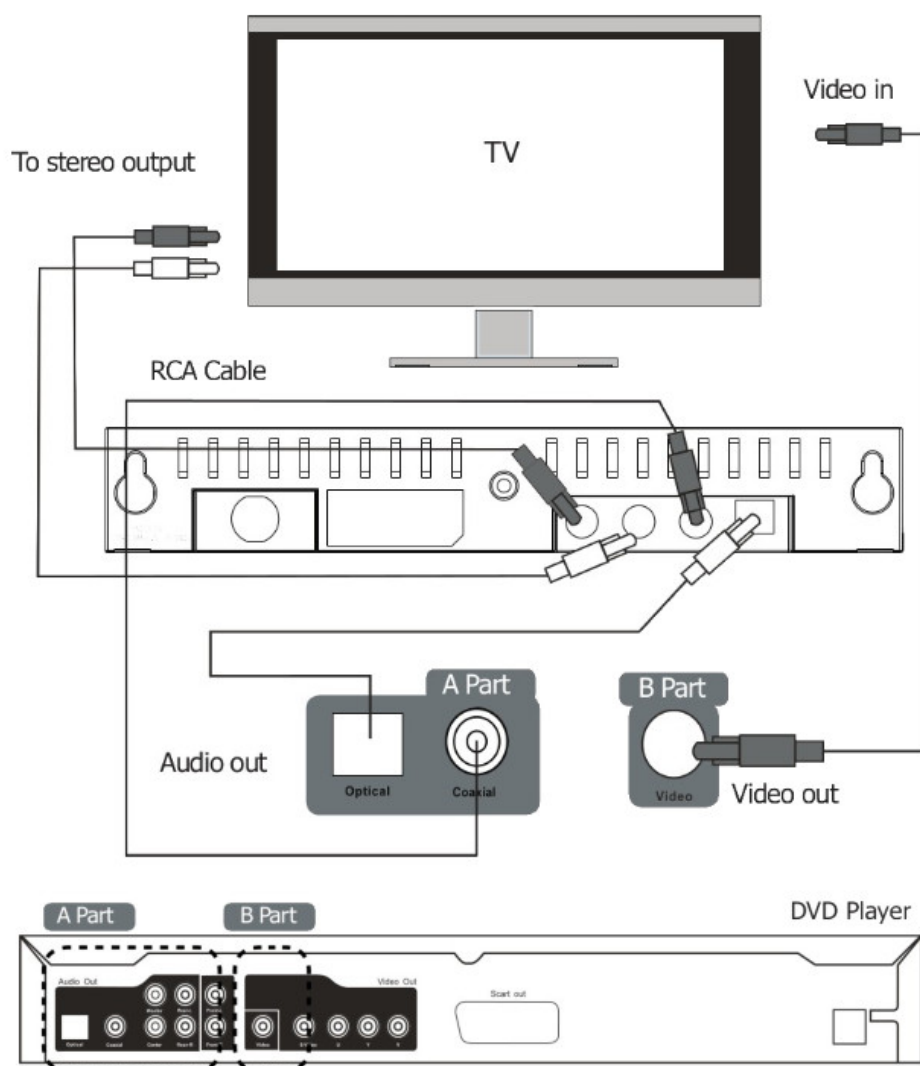

## Basic Status

Connected AUX single, Optical and Coaxial signal on the rear panel of the Sound Bar.  
The LED display will display “- -” to show it is in standby mode.


## LED Digit Status and Function

LED DIGIT	FUNCTION	LED DIGIT	FUNCTION
AU	AUX audio signal input	EQ	Adjust Equaliser mode
OP	Optical audio signal input	E1	Normal sound effect
CO	Coaxial signal input	E2	Music sound effect
BL	Bluetooth audio signal input	E3	Movie sound effect
Number	Volume label		

## EQ Setting

Treble setting: press the EQ button on the remote control, then press the VOL+ button and the VOL- button to adjust the treble, with the range increasing or decreasing by 7db. (Reset: Press EQ, then press the reset button).

## Documents / Resources

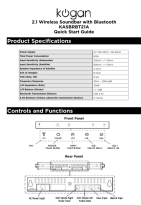

[kogan 2.1 Wireless Soundbar with Bluetooth](#) [pdf] User Guide  
2.1 Wireless Soundbar with Bluetooth, KASBRT21A