



kogan CTLADD Series Multipurpose Telescopic Foldable Ladder User Guide

[Home](#) » [Kogan](#) » kogan CTLADD Series Multipurpose Telescopic Foldable Ladder User Guide 

kogan



User Guide
MULTIPURPOSE TELESCOPIC
FOLDABLE LADDER
WITH PLATFORM
CTLADDLM405,
CTLADDLM404 & CTLADDRM28A



Contents

1 SAFETY & WARNINGS

2 BEFORE USE

3 OPERATION

4 Documents / Resources

4.1 References

SAFETY & WARNINGS

WARNING: To avoid serious injury or death, read all instructions and observe all warning labels before use. Retain this user guide for future reference.

- Always check that the stabiliser bars are secure before placing any weight on the ladder.
- Always ensure that all ladder hinges are locked into position before use. Each pair of hinges must be locked simultaneously.
- The hinges may let out an audible 'click', but always visually check the locking indicators to ensure that the locking mechanism is fully locked.
- Never use the ladder while under influence of alcohol or drugs of any kind.
- Never set up the ladder in front of doors that are not locked.
- Do not use ladder jacks with this ladder.
- Pushing or pulling anything while on the ladder may cause the ladder to tip and you to fall. Use extreme caution if you must push or pull from the ladder.
- Never attempt to jump, walk or move the ladder while you are on it. If you need to move the ladder, get off first. Move it and then reposition by yourself.

- To avoid losing balance and/or tipping the ladder or scaffold, never overreach. Always stay balanced while on the ladder. Keep your body centred between the side rails.
- Never use the ladder as a brace in any way.
- Never place yourself or allow anyone to stand or walk under the ladder whilst in use.
- This ladder is not a toy and is not meant for use by or near children. Never leave the ladder and scaffold set up and unattended.
- Do not stand on the ladder while releasing the locking mechanisms.
- Do not attempt to switch ladder positions whilst on the ladder.
- Never use stairs if they are not level. This could cause the ladder to tip or cause you to lose your balance.
- Only use the ladder assembled in the positions illustrated in this guide.
- Always wear shoes that have a good grip while using the product. Avoid wearing loose clothing that could dangle and get caught.
- It is always advisable in ladder positions to get someone to hold the bottom of the ladder for added security.



WARNING: Metal conducts electricity. Do not let this ladder or any of its parts contact live electrical wires.

- The maximum weight capacity for this ladder is 120kg. The weight of the user plus tools and materials should not exceed 120kg.
- Always ensure all locking mechanisms are in the locked position before stepping on it or applying the weight of any kind.
- The stabiliser bars must be properly and securely fitted before use.
- Do not use any attachments, components or accessories not sold or recommended by Kogan.com for use with this ladder.
- Inspect all parts before each use. Do not use if any parts of the ladder are missing, damaged or worn in any way.

BEFORE USE

Attach the Stabiliser Bars

- Before use, attach the stabiliser bars. Remove the transit protectors at each end of the ladder and secure with the nuts, bolts and washers provided. See the diagram below.
- Do not use the ladder without the stabiliser bars attached unless otherwise stated.
- Always check the stabiliser bars are secure before putting any weight on the ladder.
- Only use the stabiliser bars that were supplied with the ladder.
- Before using the ladder, lock the hinge mechanism in place. Each pair of hinges must be locked simultaneously.

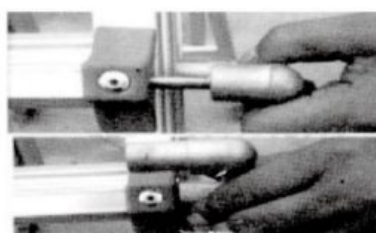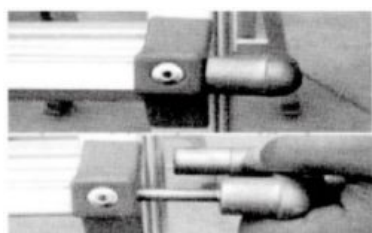

Activate the Hinge Lock

- To activate the hinge lock, pull out the locking levers to release a pair of hinges so that the locking pin is in the ' ' position, indicating the hinge is not locked.
- Fold the relevant sections of the ladder to form the position required. The hinges will automatically 'snap' into position at certain angles and the locking pin will enter the ' ' position, indicating that it is locked.
- The hinges may let out an audible 'lick', but always visually check the locking indicators to ensure that the locking mechanism is fully locked.



OPERATION

Ladder Positions

WARNING: Do not attempt to use the ladder in a position other than those illustrated here.



Folded




Step ladder




Wall flush ladder

Take extra care when using the shorter positions, as the stabiliser bar is not to be in contact with the wall.

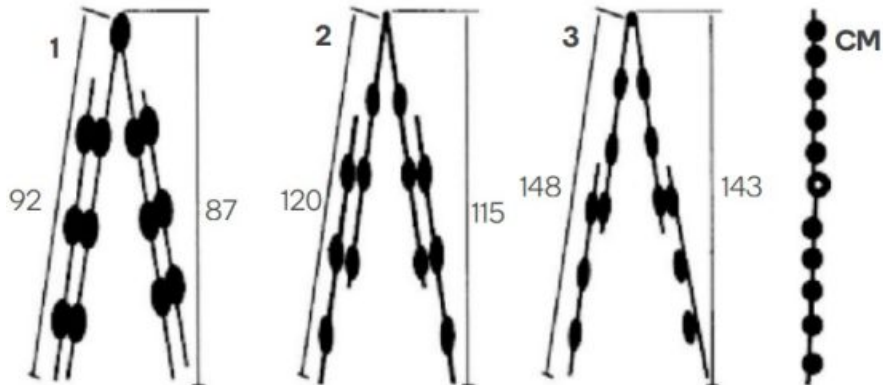


Step ladder position:

- Never stand straddling between the front and back sections of the ladder.
- Never stand on or above the second rung from the top.

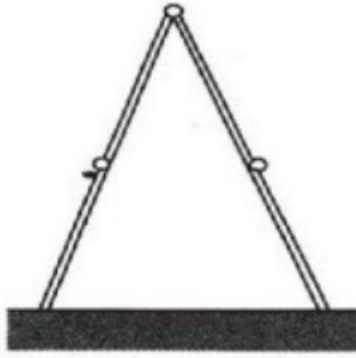

Wall flush ladder position:

- Never stand on the top three rungs.
- The ladder should sit at an angle of approximately 75°.
- Take extra care when using shorter positions.

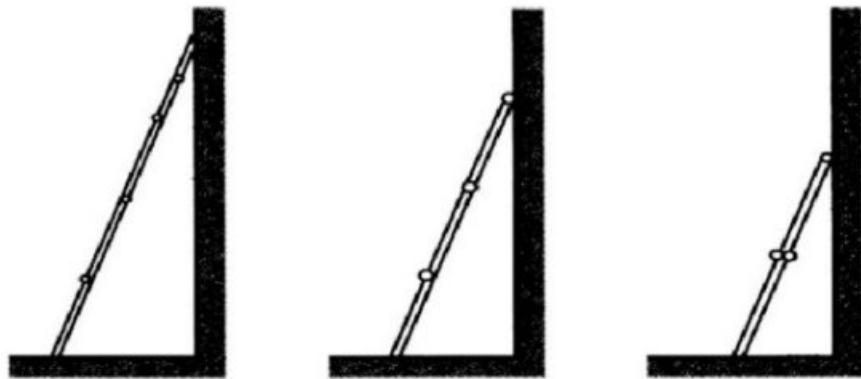


Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help.kogan.com



Documents / Resources

 <p>USER GUIDE CERTA</p> <p>MULTIPURPOSE TELESCOPIC FOLDABLE LADDER</p>	<p>kogan CTLADD Series Multipurpose Telescopic Foldable Ladder [pdf] User Guide CTLADDLM405, CTLADDLM404, CTLADDRM28A, CTLADD Series Multipurpose Telescopic Foldable Ladder, CTLADD Series, Multipurpose Telescopic Foldable Ladder, Telescopic Foldable Ladder, Foldable Ladder, Ladder</p>
---	--

References

- [🔌 Kogan Help Centre](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.