



kogan KA32LICEMKA Ice Cube Maker User Guide

 
[Home](#) » [Kogan](#) » kogan KA32LICEMKA Ice Cube Maker User Guide 

Contents

- [1 kogan KA32LICEMKA Ice Cube Maker](#)
- [2 SAFETY & WARNINGS](#)
- [3 COMPONENTS LIST](#)
- [4 OVERVIEW](#)
- [5 BEFORE USE](#)
- [6 OPERATION](#)
- [7 CLEANING & CARE](#)
- [8 Storage](#)
- [9 Disposal](#)
- [10 TROUBLESHOOTING](#)
- [11 SPECIFICATIONS](#)
- [12 CIRCUIT DIAGRAM](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)



kogan KA32LICEMKA Ice Cube Maker

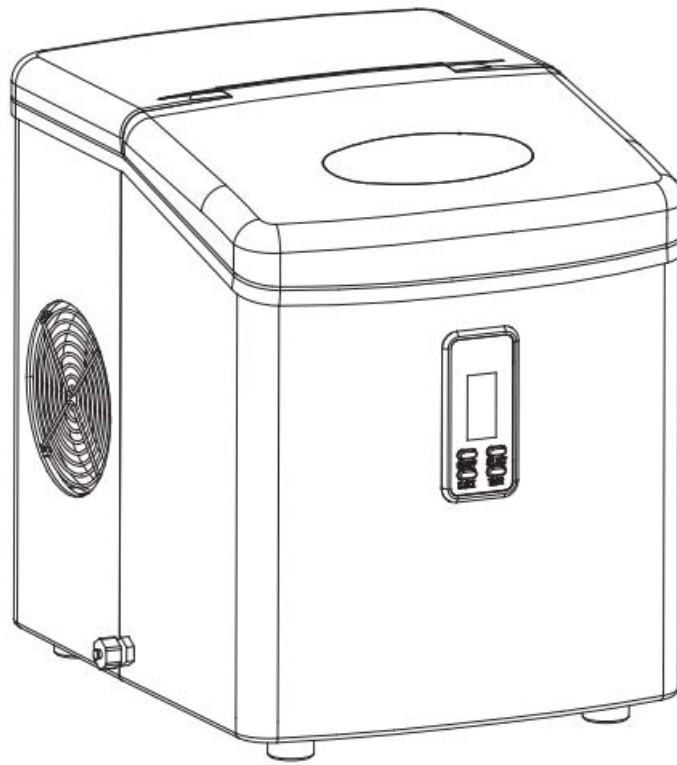

SAFETY & WARNINGS

Ensure to read all instructions and warnings in this user guide prior to first use. Retain this user guide for future reference.

Failure to follow these guidelines may result in serious injury or death.

- **WARNING:** Risk of fire/flammable materials used. If disposing, ensure to follow local regulations.
- **WARNING:** Keep ventilation openings of the appliance clear of obstructions.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process or ice making process.
- **WARNING:** Do not use other electrical appliances inside the ice cube maker.
- **WARNING:** Ensure this appliance is earthed.
- When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property.
- This ice cube maker can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given instructions concerning the use of the ice cube maker in a safe way and understand the hazards involved.
- Exercise caution and ensure there is constant adult supervision when the ice cube maker is used near children.
- Do not allow children to play with the ice cube maker.
- Improper use of the grounded plug can result in the risk of electrical shock.
- This ice cube maker supports voltages between 220–240V with a frequency of 50Hz.
- Do not operate the ice cube maker or any other appliance with a damaged cord. If the power cord is damaged, stop use immediately and contact help.Kogan.com for assistance.
- Do not place this ice cube maker on unstable surfaces.
- For safety, the ice cube maker must be properly grounded. The power cord of this appliance is equipped with a grounding plug for wall outlets to minimise the possibility of electric shock. Any questions concerning power

and/or grounding should be directed toward a certified electrician.

- This icemaker must be positioned in such a way that the plug is accessible.
- Ensure no other appliance is plugged into the same power outlet.
- Ensure the plug is fully inserted into the socket.
- Do not run the power cord over carpet or other heat insulators.
- Do not cover the power cord.
- Keep the power cord away from high traffic areas.
- Do not submerge the ice cube maker in water or any other liquids.
- Do not use an extension cord as it may overheat and become a fire risk.
- Ensure the ice cube maker is turned off and unplugged before cleaning or maintenance.
- Do not use the ice cube maker outdoors.
- Ensure there is at least a 10cm clearance between the back of the ice cube maker and any walls or obstructions.
- Only use water in the ice cube maker. Do not use other liquids.
- Do not store explosive substances (for example, aerosol cans) in the ice cube maker.
- Do not tip the ice cube maker over.

Important: The wires in this mains lead are coloured in accordance with the following code:


Green and yellow	Grounding
Blue	Neutral
Brown	Live

COMPONENTS LIST


- Ice cube maker
- Ice scoop
- User guide

OVERVIEW

 
Ice cube maker

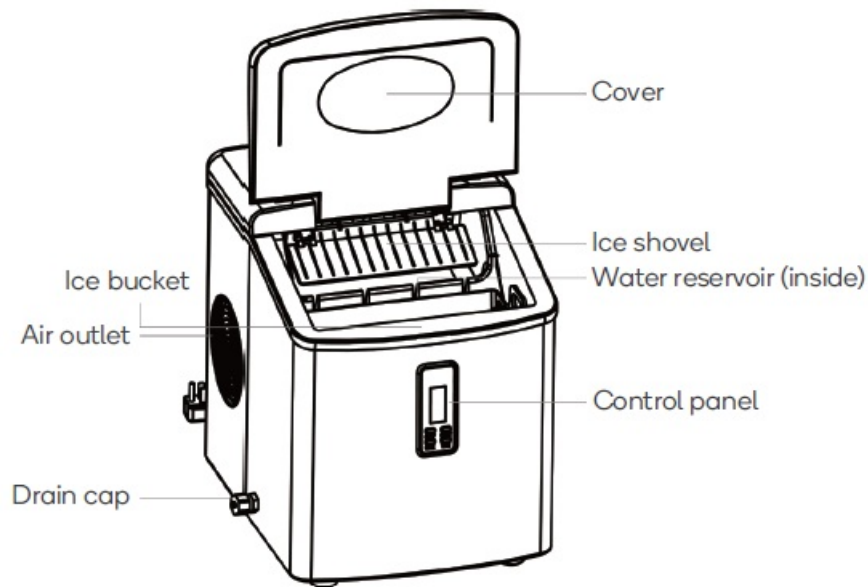

Control panel

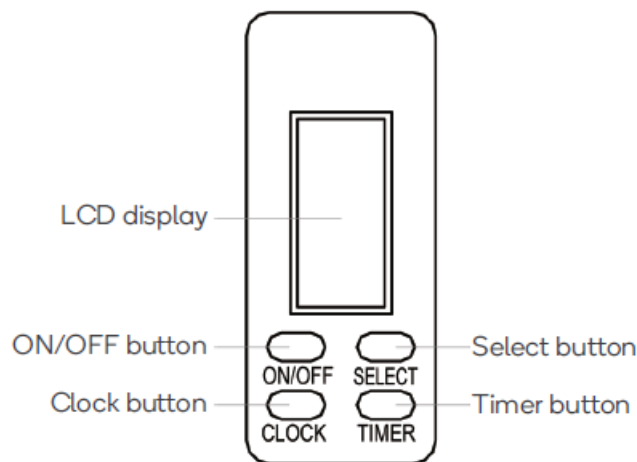 

LCD display

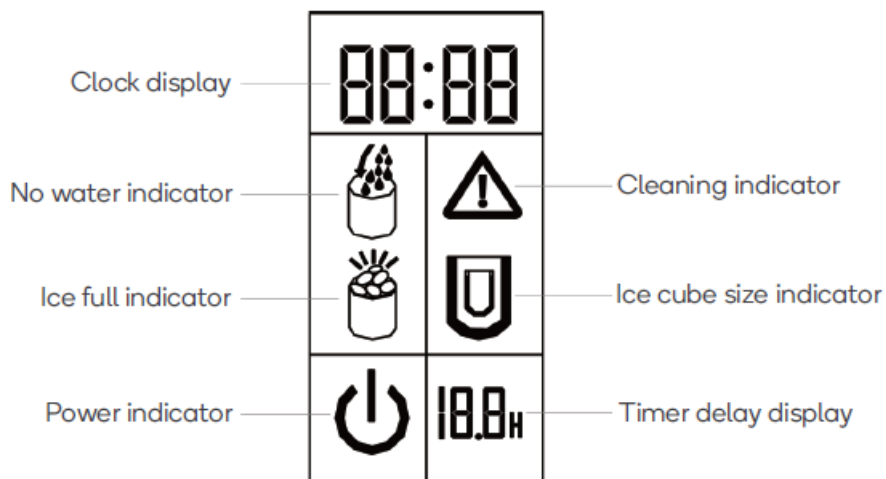 

• Name: Description

- Clock display: When the appliance is turned on, it will display the current time. This can be adjusted.
- No water indicator: When flashing, this means there is no water in the ice cube maker. Open the cover and pour water into the appliance.
- Ice full indicator: When illuminated, this means the ice bucket is full. Remove ice cubes from the ice bucket.
- Power indicator: This indicator will be solidly illuminated when the ice maker is turned on, and will be flashing when on standby.

- Cleaning indicator: When flashing, the ice cube maker needs to be cleaned
- Ice cube size indicator: This indicator will display the current set size of the ice cubes (small, medium, large).
- Timer delay display: When a timer is set, this will show the amount of time left before the timer is activated.

BEFORE USE

Remove the packaging and ensure all components are included. If any components are missing, contact help.Kogan.com for assistance.

Open the cover, remove the ice bucket, and clean with water thoroughly.

Clean the interior thoroughly with lukewarm water and a soft cloth.

Placement

Place the ice cube maker on a flat surface away from direct sunlight and other heat sources (for example, stoves, radiators). Ensure there is at least a 10cm clearance around the ice cube maker away from walls and other obstructions.

Allow one hour for the refrigerant liquid to settle before plugging the power cord into a socket.

Notes:

 
- Ensure the ice cube maker is positioned in way that the plug is accessible and visible.
- If the ice cube maker is being brought from the outdoors during winter, allow for a few hours for the appliance to warm to room temperature before plugging in.

OPERATION

Making ice cubes

WARNING: Do not use any liquid other than drinking water in the ice cube maker.

1. Ensure the power cord is securely plugged into a socket, then turn the socket on.
2. Open the cover and remove the ice basket. Pour drinking water into the water reservoir. Ensure the water level is below the 'MAX' line marked inside the reservoir.
3. Press the ON/OFF button on the control panel to turn on the ice cube maker and begin the ice-making cycle. You may select the size of the ice cubes by pressing the select button on the control panel. There are three sizes (small, medium, large). These are reflected by the ice cube size indicator on the LCD display. The ice-making cycle will take between 6–13 minutes. This variability depends on the selected ice cube size and ambient **temperature**.

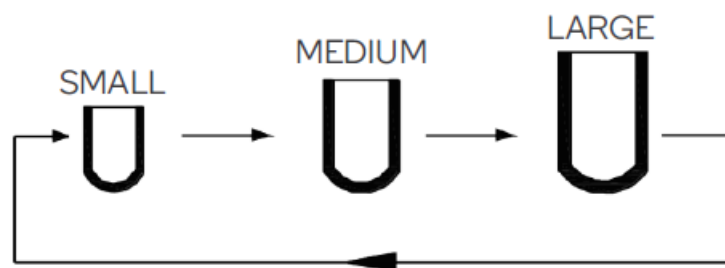

Note:

If the room temperature is lower than 15°C, it is recommended to select the small or medium ice cube sizes to avoid the ice cubes sticking together.

4. Open the cover and use the ice scoop to take out the ice cubes.

Note:

Change the water in the reservoir every 24 hours to ensure proper hygiene. If the unit will not be in use, drain all water out.

No water indicator

When making ice, check the water level periodically. If the water pump is unable to pump water, the ice maker will stop automatically. The no water indicator ' ' will start flashing on the control panel.

1. Refill the water up to the 'MAX' line, then wait for at least three minutes to allow the refrigerant liquid to settle.
2. Press the ON/OFF button to restart the ice cube maker and resume use.

Ice full indicator

The ice cube maker will automatically stop operating when the ice bucket is full. The ice full indicator ' ' will illuminate on the control panel.

- Using the ice scoop, remove ice from the appliance.

Setting the timer

Depending on whether the ice cube maker is currently on standby or operating, the timer can be set to start or stop operating the ice cube maker after a specified time (0.5–19.5 hours). The default time is set to three hours. To set the timer:

1. Press the timer button. The timer delay display will start flashing '3.0H' to indicate the default time.
2. Press the select button to set the desired time. Each press will increase the time by 0.5 hours. Holding down the select button for more than three seconds will adjust the timer in faster intervals. The change in time will be shown on the timer delay display.
3. After five seconds of flashing, the desired time will turn solid to confirm the timer set.

Cancelling the timer

To cancel the timer, press the timer button.

Clock display

The clock display will show the current time. To adjust the time:

1. Press the clock button and the hour setting will start flashing. Press the select button to adjust the hour setting. Each press will increase the setting by one.
2. Press the clock button again and the minute setting will start flashing. Press the select button again to adjust the minute setting. Press the select button to adjust the minute setting.
3. Press the clock button again to confirm the changes.

Note:

When adjusting the hour/minute settings, after flashing for five seconds, the setting will turn solid to confirm the adjustment is set.

CLEANING & CARE

When the cleaning indicator is flashing, this indicates the ice cube maker needs to be cleaned.

Note:

If the appliance has been cleaned, press and hold the timer button for five seconds and the cleaning indicator will disappear and reset.

Cleaning the interior

Ensure the ice cube maker is turned off and unplugged before cleaning.

1. Remove the ice bucket. Using a soft cloth, clean the interior with a solution of warm water and diluted detergent.
2. Rinse the interior with water, then unplug the drain cap to allow the water to flow out.
3. Wipe dry with a soft cloth.

Cleaning the exterior

Clean the exterior regularly with a solution of warm water and mild detergent. Wipe dry with a soft cloth.

Note:

Do not clean the ice cube maker with flammable substances as this may create a fire hazard.

Storage

If the ice cube maker will not be used for an extended period, unplug the drain cap, and ensure all water is drained out. Wipe the interior dry.

Store the appliance in a cool, dry place.

Disposal

- Gas inside the ice cube maker is flammable. Disposal shall be in accordance with national regulations.
- This marking indicates that this appliance should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.


TROUBLESHOOTING

Problem	Possible cause	Solution
The no water indicator '🚰' is flashing.	There is no water inside the ice cube maker.	Stop the ice cube maker, fill it with water, and press the power button again to restart the appliance.
The ice full indicator '🧊' is flashing.	The ice bucket is full/there is too much ice.	Remove ice from the ice bucket.
The ice cubes are sticking together.	The ice-making cycle is too long.	<ul style="list-style-type: none"> • Stop the ice cube maker and restart it when the ice cubes melt. • Adjust the ice cube size to small.
	The temperature of the water in the ice cube maker is too cold.	<ul style="list-style-type: none"> • Change the water. • Ensure the water is between 8–32°C.
The ice cube maker is operating but no ice is being made.	The ambient temperature is too high.	Ensure the ambient temperature is below 32°C.
	The temperature of the water in the ice cube maker is too hot.	Ensure the water is between 8–32°C.
	The refrigerant is leaking.	Stop use immediately and contact help.Kogan.com for assistance.
	The pipes in the cooling system are blocked.	Stop use immediately and contact help.Kogan.com for assistance.

SPECIFICATIONS

- Protection type: I
- Climate class: SN/N/ST
- Power supported: 220-240V, 50Hz
- Ice making current: 0.7A
- Ice collecting current: 1.2A
- Refrigerant: R600a/38g
- Net weight: 11.5kg
- Vesicant: C5H10
- Enclosure: Stainless steel

 
CIRCUIT DIAGRAM

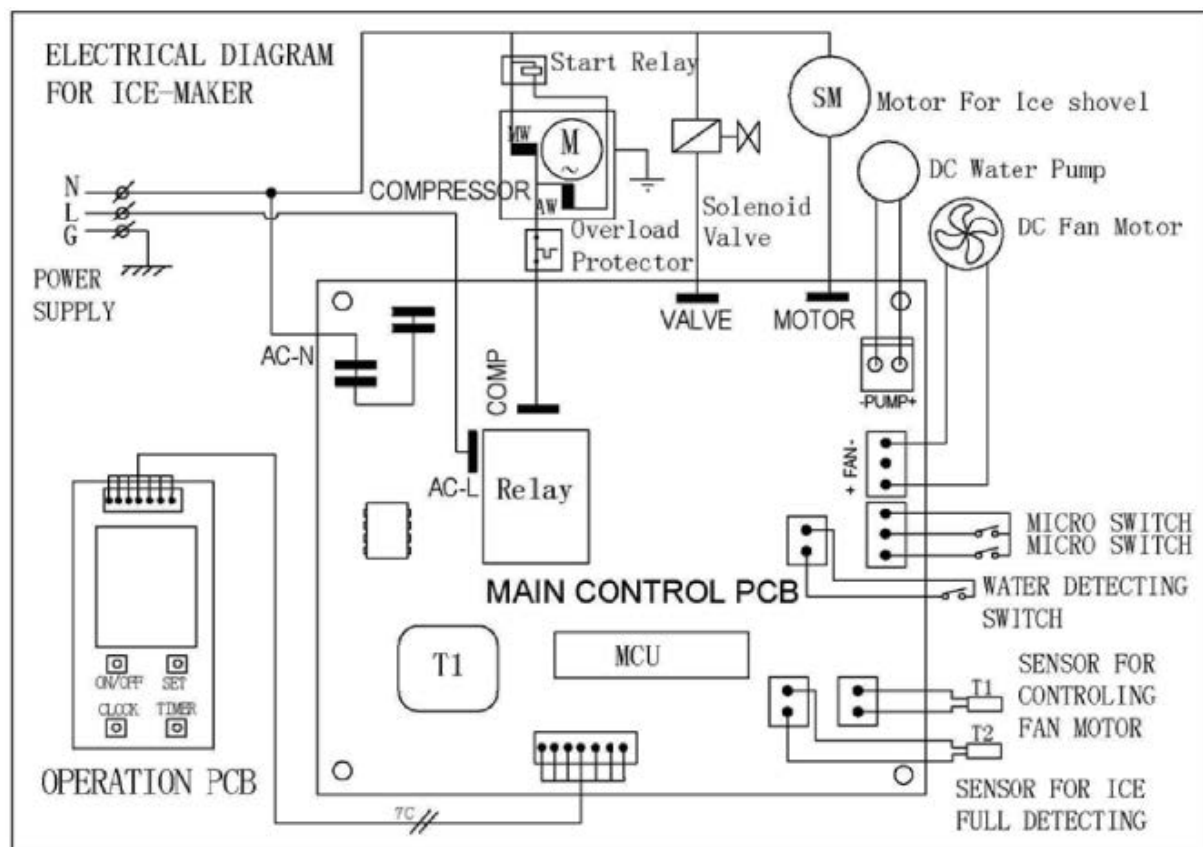

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help kogan.com

Documents / Resources

<p>USER GUIDE kogan.com</p>  <p>ICE CUBE MAKER 15KG BLACK</p>	<p>kogan KA32LICEMKA Ice Cube Maker [pdf] User Guide KA32LICEMKA, Ice Cube Maker, KA32LICEMKA Ice Cube Maker, Cube Maker, 15KG BLACK</p>
--	--