



kogan KA4SLTOASTB 4 Slice Toaster User Guide

[Home](#) » [Kogan](#) » kogan KA4SLTOASTB 4 Slice Toaster User Guide 

kogan.com

USER GUIDE



**Kogan 4 Slice Toaster (Silver)
KA4SLTOASTB**

Contents

- [1 SAFETY & WARNINGS](#)
- [2 OVERVIEW](#)
- [3 OPERATION](#)
- [4 FUNCTIONS](#)
- [5 CLEANING & CARE](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

SAFETY & WARNINGS

When using an electrical appliance basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Ensure that your power outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch any hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse the cord, plug or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug the unit from the power outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged or abnormal cord or plug. If the main cord is damaged, it must be replaced by [Kogan.com](https://www.kogan.com) or a service agent on [Kogan.com's](https://www.kogan.com) behalf.
8. Do not let the cord hang over the edge of a table or counter or touch any hot surfaces.
9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Do not use the appliance in any way other than its intended use.
11. Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, so toasters must not be used near or below curtains or any other combustible materials and should be watched at all times.
13. The use of accessory attachments is not recommended by Kogan.com and may cause injuries.
14. Do not attempt to dislodge food when the toaster is in operation.
15. Be sure to take the bread out carefully after toasting so as to avoid injuries.
16. Children aged 8 years and above or persons with reduced physical, sensory or mental capabilities should only use this appliance while under supervision or instruction from an adult or carer.
17. Children aged 8 and above should not clean or perform user maintenance on this appliance unless under supervision or instruction from an adult or carer.
18. Keep the appliance and its cord out of reach of children aged under 8 years.
19. **Warning:** When using any bread slices less than 85mm in length, care must be taken to avoid the potential risk of burning when removing the slices.
20. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
21. Don't use this appliance outdoors.
20. This appliance is intended to be used in households and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
21. The "Hot Surface" warning symbol on the appliance means some of the surfaces may get hot while the appliance is in use.
22. Do not discard these instructions.

Power Outlet Plug This appliance uses a plug that has been designed to fit the power outlet only one way. If the plug does not fit fully into the outlet, do not modify the plug in any way, it must be replaced by Kogan.com or a service agent on [Kogan.com's](https://www.kogan.com) behalf.

Power Cord A.

A short power-supply cord (or detached power-supply cord) has been provided to reduce risks resulting from

becoming entangled in or tripping over a long cord.

B. An extension cord may be used if care is exercised in their use.

C. If an extension cord is used;


I. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.

II. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

CAUTION!

1. Remove all protective wrappings prior to first use.
2. If the toaster begins to smoke, press the Cancel button to stop toasting immediately.
3. Avoid toasting any food with extremely runny ingredients such as butter.
4. Never attempt to remove any food jammed in the slots without unplugging the toaster from the electrical outlet first. Ensure not to damage the internal mechanism or heating elements when removing food.
5. The bread slot is intended for toasting regular-shaped bread slices. When using irregular or round bread, extra caution should be taken to avoid burning.
6. In order to achieve a uniform colour, it is recommended that you should wait a minimum of 30 seconds between each toasting so that colour control can reset automatically.

OVERVIEW

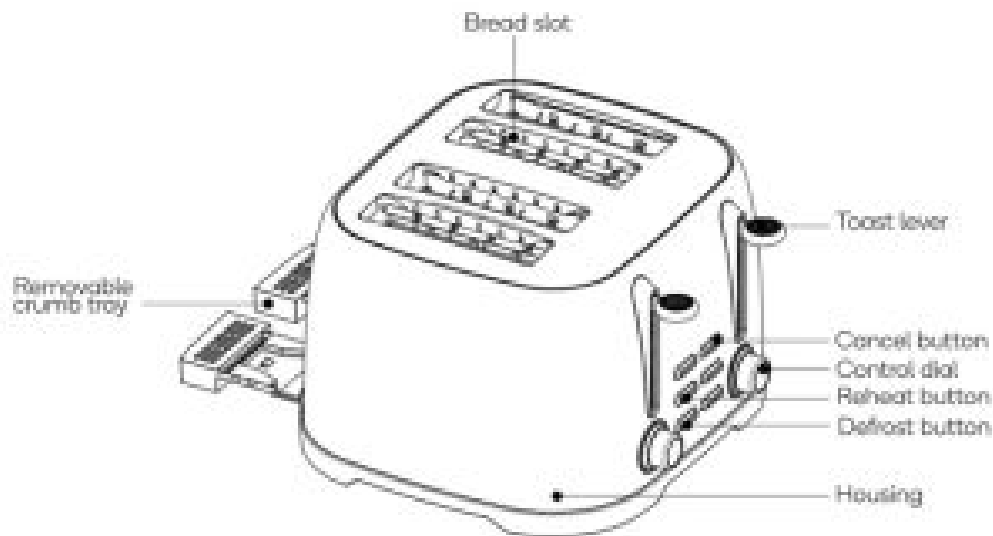

OPERATION

For the First Use

As there may be manufacturing residue or oil in the toaster or heat element, usually it will emit an odour during first use. This is normal and will not occur after several uses. For the first use it is suggested to follow the below steps, except without bread, then let the toaster cool down and begin toasting the first slice.

Using Your Toaster

1. Put bread slices into the bread slots. Ensure the Crumb trays are properly in place before using.
2. Plug the Power cord into the power outlet.
3. Set the Control dial to your desired colour. There are 7 levels of colour control, the lowest "1" is for light and the

highest “7” is for dark. The bread slice can be toasted to golden colour in the middle position. Toast colour for one slice will be darker than that of two slices at the same level. If toasting continuously, the colour for the latter bread is darker than that for the anterior bread at the same level.

4. Lower Toast lever down vertically until it is latched in place, the indicator on the Cancel button will be illuminated and the appliance will begin toasting at once.

Note: The Toast lever can only be latched when the appliance is plugged in.

5. Once the bread has been toasted to the pre-set colour, the Toast lever will automatically pop up. The Toast lever can be further lifted up to help remove the toast.

During toasting, you may also observe the toasting colour. If the desired level has been reached, you can press the Cancel button to cancel the operation at any time. Never lift the Toast lever to cancel toasting.

FUNCTIONS

1. If you want to toast frozen bread, firstly press the Defrost button and the indicator on the Defrost button will be illuminated, set the Control dial to your desired colour and then lower the Toast lever until it is latched in place. In this mode, the bread will be toasted to your desired colour.
2. If you want to warm cold toasted bread, firstly press the Reheat button and the indicator on the Reheat button will be illuminated, set the Control dial to your desired colour and then lower the Toast lever until it is latched in place. In this mode, toasting time is fixed. When time runs over, the Toast lever will automatically spring up and end up the reheating process.

CLEANING & CARE

1. Before cleaning, unplug the appliance from the power outlet and let the appliance cool down completely.
2. Wipe the outside with a soft dry cloth, never use metal polish.
3. Remove Crumb trays at the bottom of the toaster and empty them. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Ensure the Crumb trays are properly inserted before using the toaster again.
4. When not in use, the power cord may be wound under the bottom of the toaster for storage purposes.

Disposal



This marking indicates that this appliance should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Need more information?

We hope that this user guide has given you the assistance needed for a simple setup. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help.kogan.com
[Kogan.com](https://kogan.com)

Documents / Resources

<div data-bbox="124 100 287 123"><div>USER GUIDE</div><div>kogan.com</div></div> <div data-bbox="161 156 248 226"></div> <div data-bbox="130 293 253 309"><div>Kogan 4 Slice Toaster (Silver)</div><div>KA4SLTOASTB</div></div>	<div data-bbox="317 174 1011 241"><div>kogan KA4SLTOASTB 4 Slice Toaster [pdf] User Guide</div><div>KA4SLTOASTB, 4 Slice Toaster</div></div>
--	--