



kogan KABASCANS2A Battery Powered Wireless Camera Security System User Guide

[Home](#) » [Kogan](#) » kogan KABASCANS2A Battery Powered Wireless Camera Security System User Guide 

kogan KABASCANS2A Battery Powered Wireless Camera Security System



Contents

1 COMPONENTS

2 OVERVIEW

2.1 Base Station

2.2 Wi-Fi Security Camera

3 BASE STATION SETUP

4 CAMERA SETUP

4.1 Charge Cameras

4.2 Install Camera

5 CONNECT TO SMARTERHOME™ APP

5.1 Install App

5.2 Register

5.3 To register:

5.4 Set Base Station in Pairing Mode

5.5 Add Base Station through Network

5.6 Add Cameras

5.7 Notes for app usage:

6 AMAZON ALEXA CONTROL

6.1 Adding “SmarterHome” to the Alexa app

7 Documents / Resources

8 Related Posts

COMPONENTS



Base station



Wi-Fi security camera
(x2)



Camera adaptor
(5V)



 
Base station adaptor
(12V)



Magnetic mounting
base (x2)




Mounting bracket
(x2)

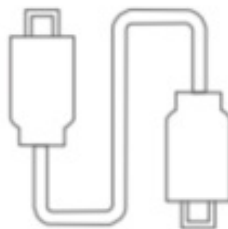


Camera micro-USB
cable



 Ethernet cable
(RJ45)

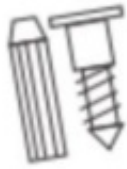

Screw sets
(x1 screw, x1 anchor)
(x2)

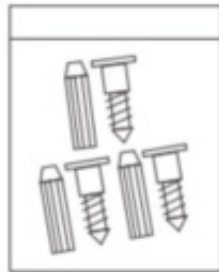 

Screw set for brackets
(x3 screws, x3 anchors)
(x2)



 
User guide




Warranty card

OVERVIEW

Base Station

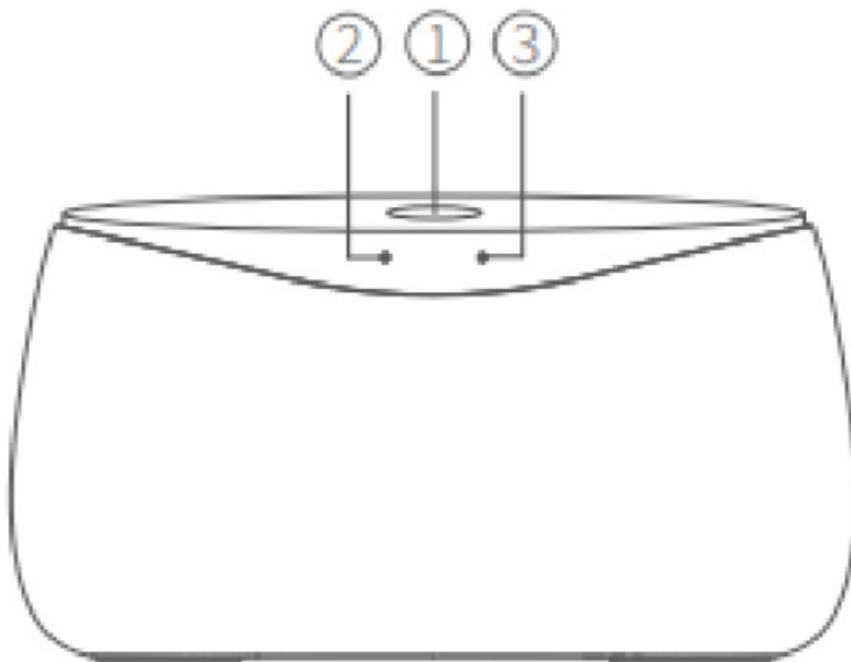


 
- 1 Sync Key
- 2 Indicator Light 1
- 3 Indicator Light 2

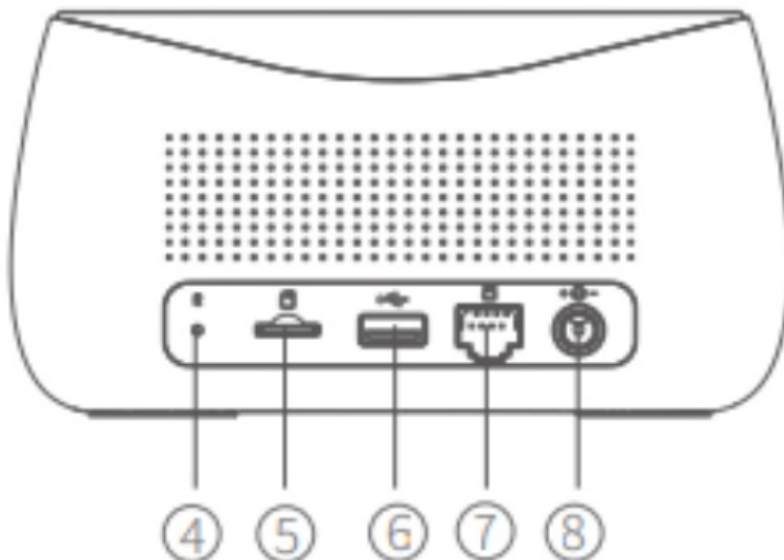

- 4 Reset Button
- 5 SD Card Slot
- 6 USB Port
- 7 Ethernet Port
- 8 Power Port

Indicator Light 1	Light	Status
	Quick Flashing Red:	Standby for Configuration
	Quick Flashing Green:	Waiting for Internet Pairing
	Solid Green:	Camera Online
	Slow Flashing Yellow:	Firmware Upgrade
	Slow Flashing Red:	Faulty Device
	Solid White:	Camera Charging
	Flashing Green:	Adding Camera
Indicator Light 2	The indicator light will turn off after completion	
Sync Key	Press the Sync key and the base station will enter the “Adding Camera” status.	
Power Port	For power supply	
SD Card Slot	For local storage (SD Card Max Capacity: 128GB)	
USBPort	For local storage. Connect USB storage device to perform a backup (up to 2TB)	
Ethernet Port	Port to connect router’s LAN port	
Reset Button	Press and hold for 3 seconds, the base station will be reset.	

  Wi-Fi Security Camera

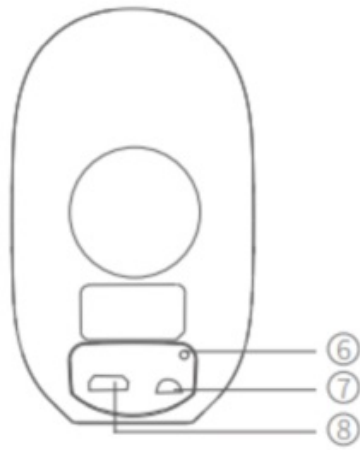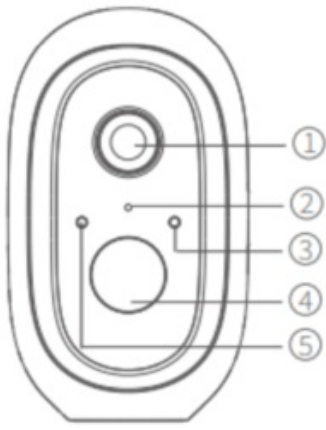


1. Lens
2. Microphone
3. Indicator Light c
4. PIR
5. Light Sensor
6. Reset Button
7. On/Off Button
8. USB Charging Port

	Light	Status
Indicator Light 1	Solid Red:	Activating
	Quick Flashing Red:	Waiting for Internet Pairing
	Quick Flashing Green:	In Pairing Mode
	Solid Green:	Connected to Server Successfully
	Slow Flashing Red:	Faulty Device
	Slow Flashing Green:	Device Upgrading
Indicator Light 2	Flashing Green: The indicator light will turn off after completion	Adding Camera
Sync Key	Press the Sync key and the base station will enter the “Adding Camera” status.	
Power Port	For power supply	
SD Card Slot	For local storage (SD Card Max Capacity: 128GB)	
USB Port	For local storage. Connect USB storage device to perform a backup (up to 2TB)	
Ethernet Port	Port to connect router's LAN port	
Reset Button	Press and hold for 3 seconds, the base station will be reset.	

BASE STATION SETUP

 1. Connect the base station to your router's LAN port using the ethernet cable.
2. Connect the base station to the power outlet using the base station adaptor and power on the base station.

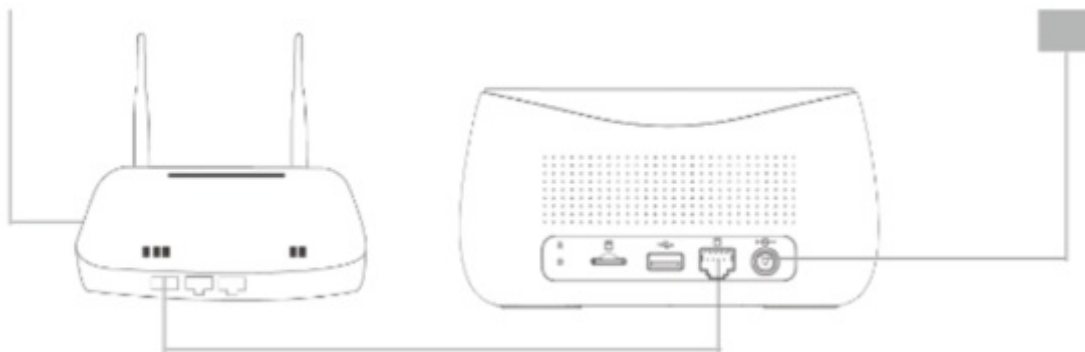

3. The Indicator Light 1 will change from solid red to quick flashing red when the base station is ready for pairing.

Note: The network upload speed must be at least 2mbps.

CAMERA SETUP

Charge Cameras

 
Note: The camera has built-in 6000mAh rechargeable battery.

1. Use the camera micro USB cable to connect the camera and camera adaptor.
2. Plug the adaptor into a power outlet for charging.
3. The Indicator Light on the camera will turn solid white indicating that the device is in charging. If the indicator light flashes when charging, contact Kogan.com.
4. It requires 4 hours for full charging. After fully charged, the Indicator Light will turn off.

Note: Each camera can be charged separately with one adaptor.

Install Camera

1. Drill or drive the screws into the wall. If it is a stone wall, then it requires screw anchor (supplied).
2. Install the mounting base with the screw.
3. Place the camera on the mounting base and adjust the camera angle.

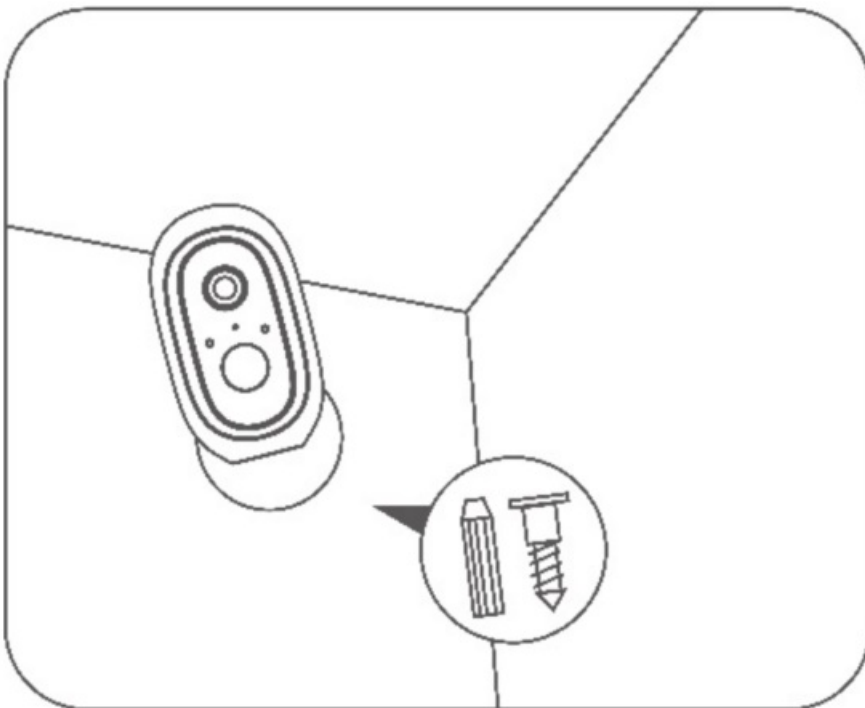

Note: The recommended mounting height is 2.3 metres.

CONNECT TO SMARTERHOME™ APP

Install App

 
Download the “Kogan SmarterHome” app from the Play Store (Android) or App Store (iOS).

Register

If you do not have a Kogan SmarterHome™ account, register or sign in with a verification code sent by SMS.

To register:

1. Tap to enter registration page.
2. The system automatically recognises your country/area. You can also select your country code manually. Enter your email address and tap 'Next.'
3. Alternatively, you can select 'Register by mobile number' and enter the verification code sent to you by SMS.
4. Create a profile on the next page to define your location and room.

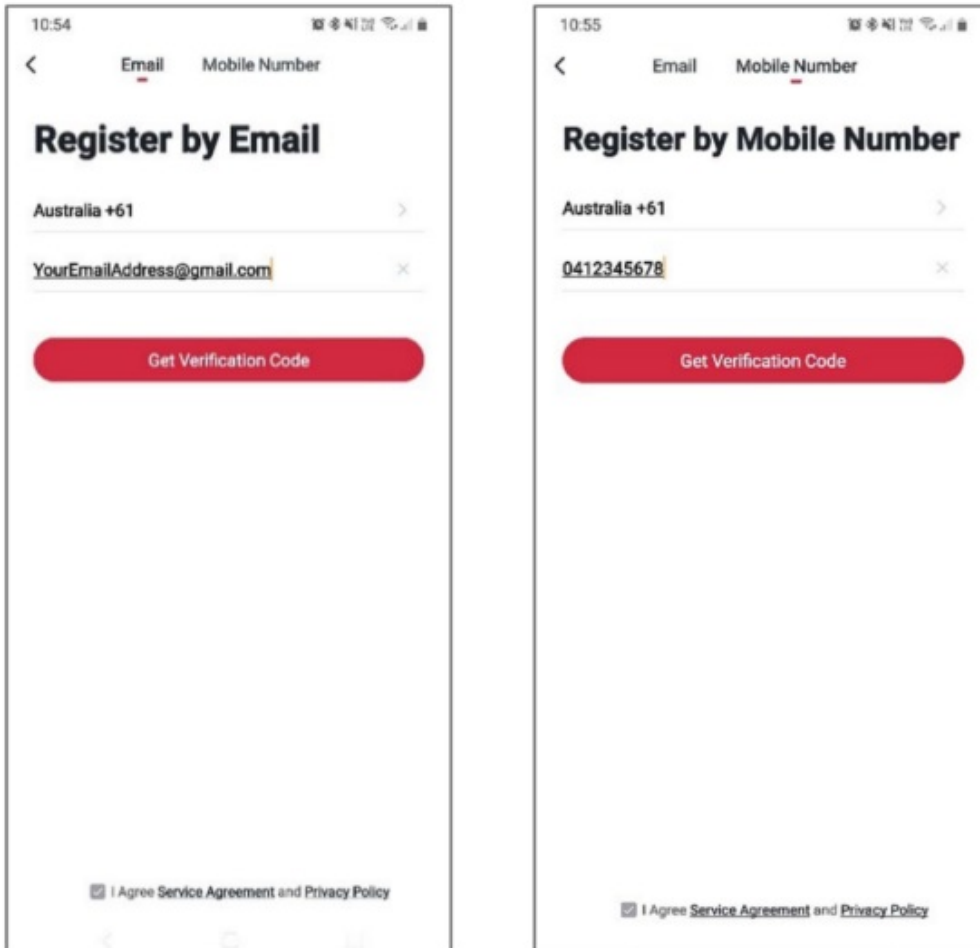


Set Base Station in Pairing Mode

When the base station is first turned on, it may automatically enter pairing mode. You will see the base station's Indicator Light 1 quickly flashing green.


If not automatically in pairing mode when powered on, you can manually set the device in pairing mode by pressing the Reset Button on the base station for 3 seconds until Indicator Light 1 flash green light.

Add Base Station through Network

 1. Once registered, tap "+" in the upper right corner of the app's home page to add a new device through the network.
2. Select the product type from the list of options in the opp (Home Security > Base Station).
3. Ensure that the base station is in pairing mode, with Indicator Light 1 quickly flashing green, and tap "Confirm the indicator is blinking rapidly".

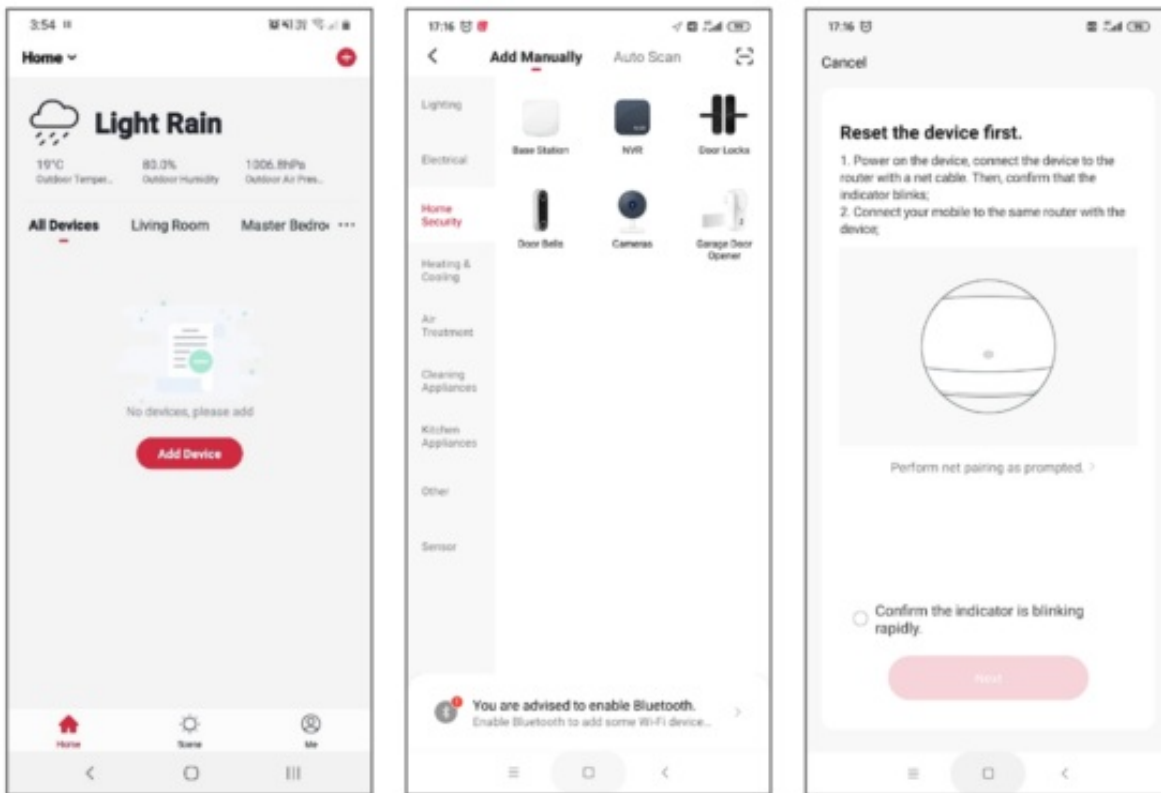

 4. Upon successfully confirming pairing mode, enter your Wi-Fi details. It is important that your base station and the app are connected to the same Wi-Fi network during setup.
5. The base station will commence the pairing process and connect to the app.
Ensure your Wi-Fi router, mobile phone, and the base station are kept close until connection is complete.
6. After successfully being added, you will have the option to rename the base station and assign it to a location. It will now be listed on the app's home page.
Tap the base station icon to enter its control page.

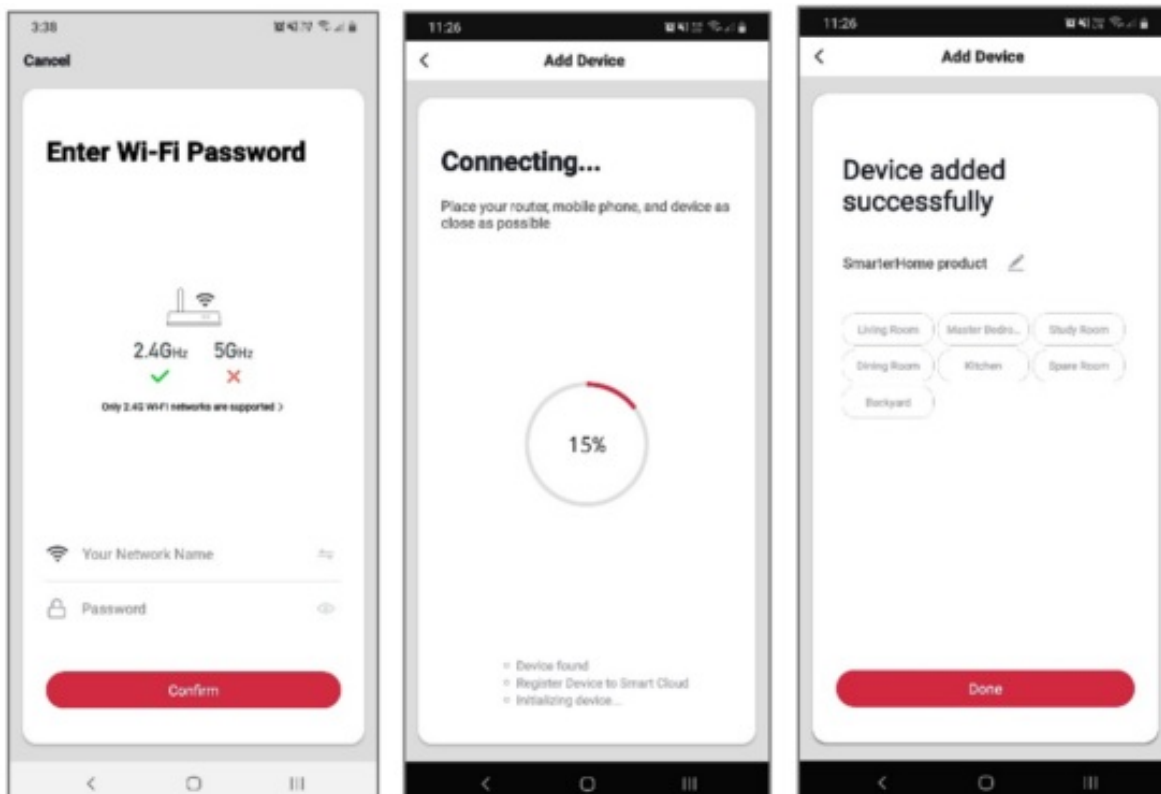


Notes:

- The device and the opp must use the same Wi-Fi network.
- The device is only compatible with 2.4Ghz networks.

Add Cameras


Note: Ensure the cameras have sufficient charge before pairing. See the Charge Cameras section of this user guide.

 1. Press the On/Off button on the cameras. The cameras will beep, and the cameras' Indicator Light will flash red.
2. If the cameras' Indicator Light does not flash red, press the Reset Button on the cameras for 5 seconds to reset.
3. Ensure the base station's Indicator Light 2 is flashing green.
4. In the Kogan SmarterHome™ opp, tap the Base Station icon to enter its control page.
5. Tap “+” in the upper right corner of the control page to add and pair the cameras with the base station.

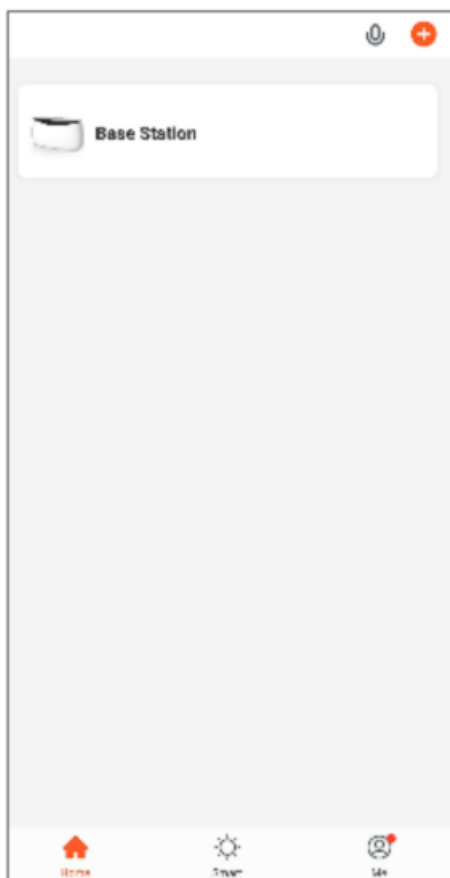

Once the cameras are paired with the base station:

 - A voice prompt will be heard from the cameras.
- Cameras' Indicator Light will turn green.
- The base station's Indicator Light 2 will turn off and base station will exit the pairing status.
- The added cameras will be displayed in the opp.

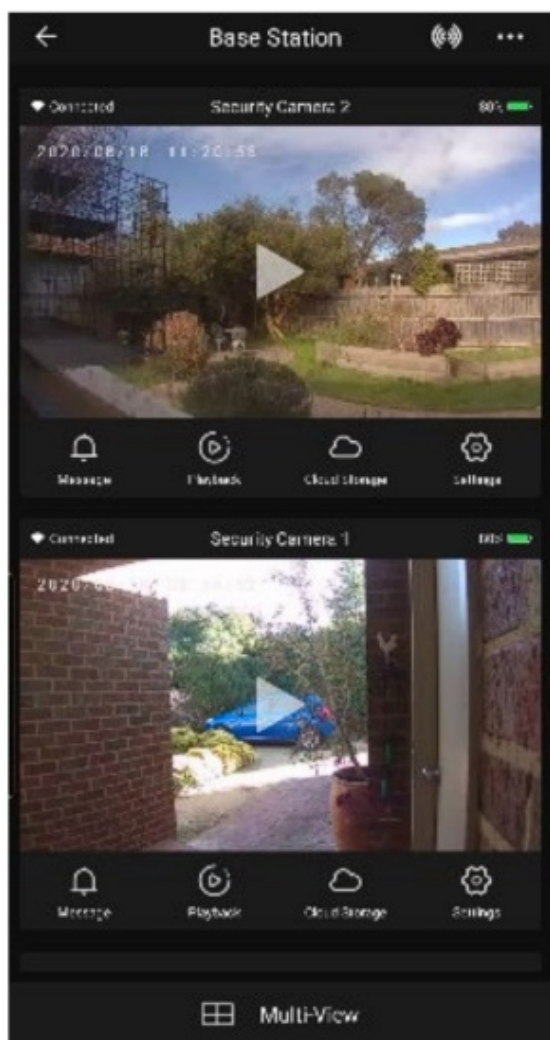

Notes for app usage:

- If any camera is not displayed in the app and is not paired with the base station, then repeat the steps in this section to add that camera.
- When selecting 'Download', you can select several videos to download and merge together, however we recommended downloading individually as there may be time gap between these videos when playing back.
- Note that the calculating method for the SD Card's "Used" capacity may differ from other models. All videos are recorded in different blocks. The Used capacity only changes once a new block has been created.

 
AMAZON ALEXA CONTROL

Note:


You will need to have set up an Alexa account prior to linking your Kogan SmarterHome™ device.

Adding "SmarterHome" to the Alexa app

1. From the home page of the Alexa app, select the "☰" icon in the top-right and select Skills & Games from the sidebar.
2. Select the search bar and type 'Smarter Home' to locate the Kogan SmarterHome™ skill.

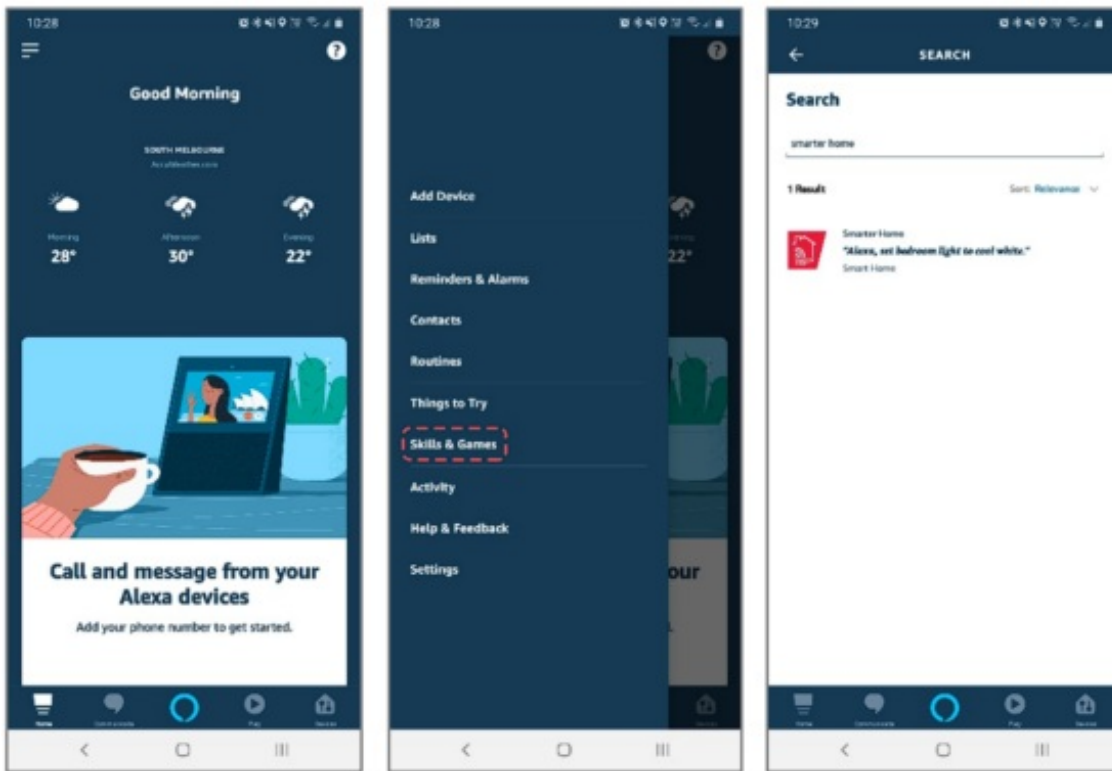


 3. Tap 'Enable to Use' to add the Kogan SmarterHome™ skill to Alexa.
4. From here, you will be prompted to sign into your SmarterHome™ account using either your email or mobile phone number, depending on which method you used to register your account.
5. Tap 'Authorise' to grant Alexa permission to access the Smarter Home TM opp and your devices.

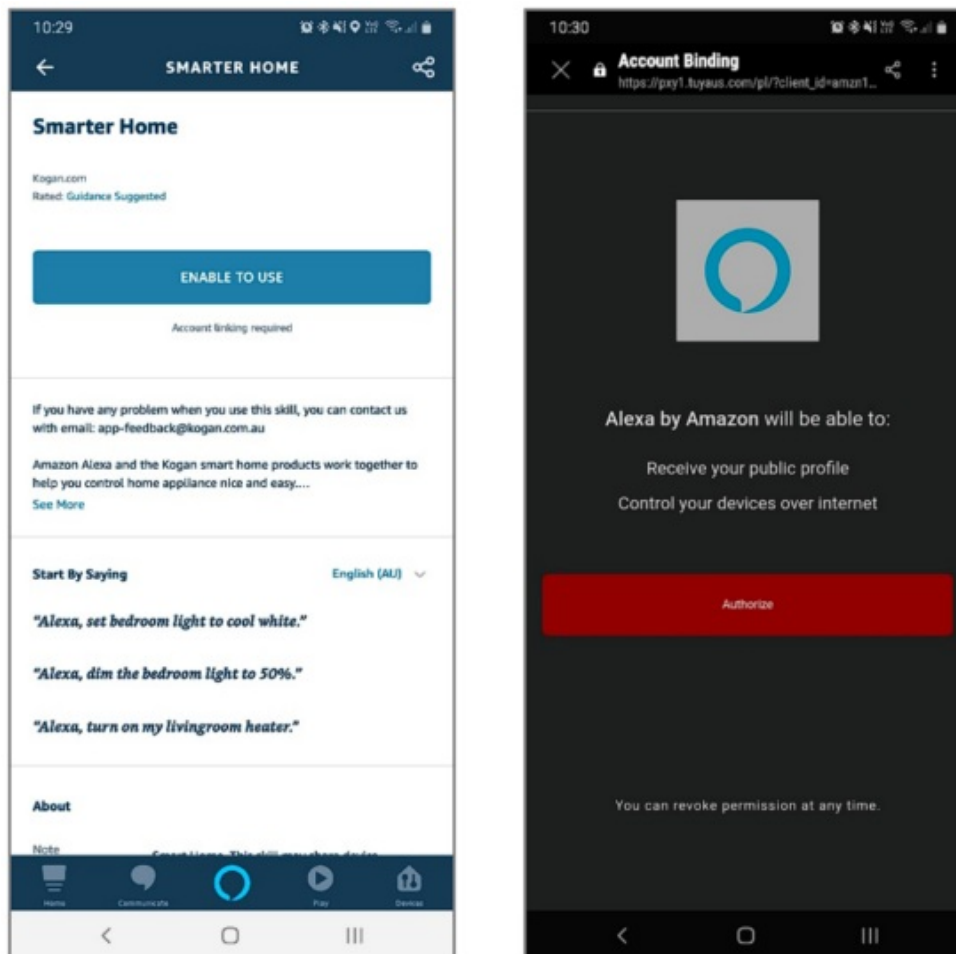

6. Once connected, the opp will perform a search and display the devices linked to your SmarterHome TM account.

 7. When your devices have successfully connected to the Alexa app, you will be able to control your Kogan SmarterHome™ devices via Alexa's voice commands.

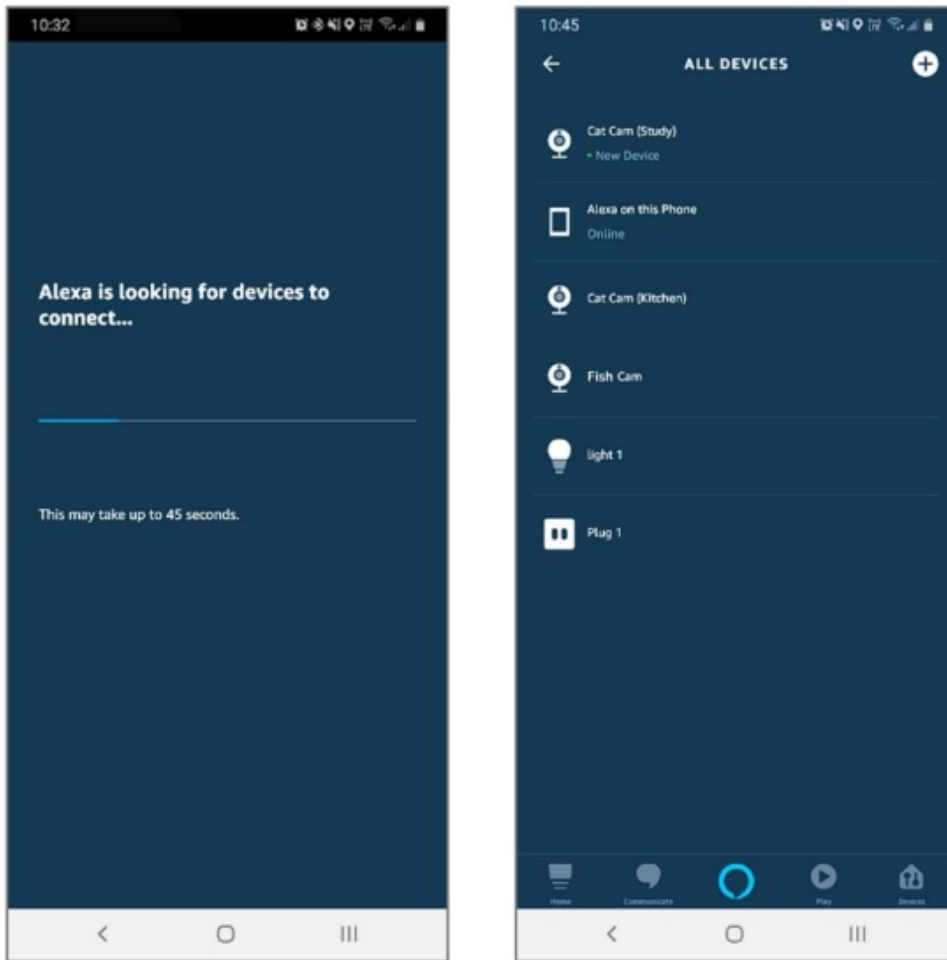

Note:


Please note that Alexa can only control the base/core functions of any compatible SmarterHome™ devices. To make full use of this product's smart functionality, please use the Kogan SmarterHome™ app.

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help.kogan.com

kogan.com

Documents / Resources

<div><div>USER GUIDE</div><div>kugon.com</div></div> <div></div> <div><div>KOGAN SMARTERHOME™ BATTERY POWERED WIRELESS CAMERA SECURITY SYSTEM <small>(COMPATIBLE WITH KOGAN SMARTERHOME HUB/CONTROLLER)</small></div></div>	<div>kogan KABASCANS2A Battery Powered Wireless Camera Security System [pdf] User Guide</div> <div>KABASCANS2A, Battery Powered Wireless Camera Security System, KABASCANS2A Battery Powered Wireless Camera Security System</div>
--	--