

kogan KAWKBZZANDB Deluxe Wireless Android Keyboard with Trackpad



kogan KAWKBZZANDB Deluxe Wireless Android Keyboard with Trackpad User Manual

[Home](#) » [Kogan](#) » kogan KAWKBZZANDB Deluxe Wireless Android Keyboard with Trackpad User Manual 

Contents

- [1 kogan KAWKBZZANDB Deluxe Wireless Android Keyboard with Trackpad](#)
- [2 Product Information](#)
- [3 FAQ](#)
- [4 Attention](#)
- [5 Product Image](#)
- [6 LED Guide](#)
- [7 Package Contents](#)
- [8 System Requirements](#)
- [9 Specifications](#)
- [10 Installation](#)
- [11 Multimedia Keys](#)
- [12 Touchpad](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



kogan KAWKBZZANDB Deluxe Wireless Android Keyboard with Trackpad



Product Information

Product Name: Kogan Deluxe Wireless Android Keyboard with Trackpad

Model Number: KAWKBZZANDB

Manufacturer: Kogan Australia

Website: <https://manual-hub.com/>

Specifications

- Package Contents:
 - Kogan Deluxe Wireless Android Keyboard with Trackpad
 - USB wireless receiver
 - 3.7V Lithium battery pack
 - USB charging cable
- System Requirements:
 1. Human Interface Device (HID) compatible device
 2. Full-sized USB port
- Disposal: Always dispose of this device at a recycling center. Do not dispose of this device with household waste.

Installation

1. Ensure your keyboard is fully charged before use.
2. Open the battery compartment location on the rear of the device.
3. Remove the USB wireless receiver from the battery compartment and replace the cover.
4. Connect the USB receiver to your HID-compatible device.
5. Turn your device on using the switch on the top-right of the keyboard – no further action is required. Your wireless keyboard is now ready for use.

Multimedia Keys

The keyboard features multimedia keys with the following functions in Android ICS:

- **Play/Pause:** Switches between Play and Pause of audio and video media. Once pause is pressed, pressing this button again resumes play.

- **Volume Up:** Increases the sound volume. Hold down to increase volume quickly.
- **Volume Down:** Decreases the sound volume. Hold down to decrease volume quickly.
- **Menu:** Toggles the menu available in certain applications, such as the internet browser, for more available options.
- **Search:** Perform a quick Google search using the internet browser.
- **Back Home Zoom In:** Takes you back to the previous screen, or if in the browser, the previous page. Takes you back to the home screen, regardless of which application you are using. Press to zoom in on a web page when using the browser.
- **Zoom Out:** Press to zoom out on a web page when using the browser.
- **Notification:** Display the notifications page.
- **Left click:** Left button click.
- **Right click:** Right button click.

Touchpad

A touchpad is a pointing device that uses a tactile sensor – a specialized surface that can translate the motion and position of a user's fingers to a relative position on your display device. Use it just like a mouse or a touchpad on a laptop computer.

FAQ

Q: Can I use this keyboard with devices other than Android?

A: The keyboard is designed to work with HID-compatible devices. While it is optimized for Android, it may also work with other operating systems that support HID devices.

Q: How do I charge the keyboard?

A: To charge the keyboard, connect the USB charging cable to the keyboard and a power source, such as a computer or a USB charger. The battery indicator will show the charging progress.

Q: How long does the battery last?

A: The battery life depends on usage, but on average, it should last several weeks before needing to be recharged.

Q: Can I connect the keyboard wirelessly to multiple devices?

A: No, the keyboard can only be paired with one device at a time. If you want to use it with another device, you need to unpair it from the current device and pair it with the new one.

Attention

This manual contains important security measures and instructions on the correct use of this product. In order to avoid harm to the device or yourself, please make sure to read this manual carefully before use.

- Do not use this device in moist, dusty or high-temperature environments.
- Avoid high-impact situations when using the device. Do not drop or throw the device.
- Although we always ensure our user manuals are up-to-date, this user manual is subject to change without notice.

All pictures used in this manual are for reference only. Images used may not be identical to your product, however

functionality and instructions will be accurate.

Product Image



LED Guide

1. **LED 1:** Power light – illuminates when the unit is turned on using the power switch on the top.
2. **LED 2:** Charging light – illuminates in red while keyboard is charging via USB.
3. **LED 3:** Input light – illuminates when any input is entered, even when the receiver isn't plugged in.

Package Contents

- Kogan Deluxe Wireless Android Keyboard with Trackpad
- USB wireless receiver
- 3.7V Lithium battery pack
- USB charging cable

System Requirements

1. Human Interface Device (HID) compatible device
2. Full-sized USB port

Specifications

- 92-key QWERTY keyboard
- Touchpad
- Left/right click keys
- Interface: Hi-Speed USB (USB 2.0)
- Peak force: 130g
- Total travel: 3.0 ± 0.5mm
- Switch life: 0.8 – 1 million cycles
- Operation frequency: 2.4GHz RF
- Dimensions: 146.8 x 97.5 x 19.0mm

 
- Dimensions (RF receiver): 19.0 x 14.3 x 6.15mm
- Weight: 110g

Disposal

Always dispose of this device at a recycling center. Do not dispose this device with household waste.


 
 




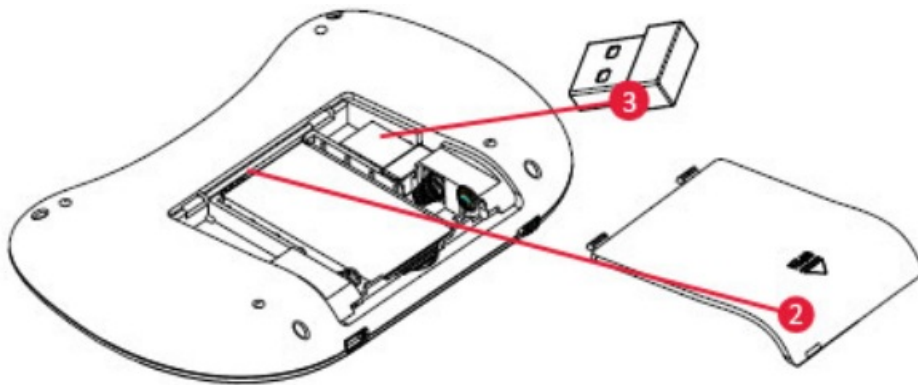




Installation

1. Ensure your keyboard is fully charged before use.
2. Open the battery compartment location on the rear of the device.
3. Remove the USB wireless receiver from the battery compartment and replace the cover.
4. Connect the USB receiver to your HID-compatible device.
5. Turn your device on using the switch on the top-right of the keyboard v- no further action is required. Your wireless keyboard is now ready for use.



Multimedia Keys


Multimedia keys and their functions in Android ICS.

	Play/Pause	Switches between Play and Pause of audio and video media. Once pause is pressed, pressing this button again resumes play.
	Volume Up	Increases the sound volume. Hold down to increase volume quickly.
	Volume Down	Decreased the sound volume. Hold down to decrease volume quickly.
	Menu	Toggles the menu available in certain applications, such as the internet browser, for more available options
	Search	Perform a quick Google search using the internet browser.
	Back	Takes you back to the previous screen, or if in the browser, the previous page.
	Home	Takes you back to the home screen, regardless of which application you are using.
	Zoom In	Press to zoom in on a web page when using the browser.
	Zoom Out	Press to zoom out on a web page when using the browser.
	Notification	Display the notifications page.
	Left click	Left button click.
	Right click	Right button click.

Touchpad

A touchpad is a pointing device that uses a tactile sensor – a specialized surface that can translate the motion and position of a user's fingers to a relative position on your display device. Use it just like a mouse or a touchpad on a laptop computer.

Documents / Resources

	<p>kogan KAWKBZZANDB Deluxe Wireless Android Keyboard with Trackpad [pdf] User Manual</p> <p>KAWKBZZANDB Deluxe Wireless Android Keyboard with Trackpad, KAWKBZZANDB, Deluxe Wireless Android Keyboard with Trackpad, Wireless Android Keyboard with Trackpad, Android Keyboard with Trackpad, Keyboard with Trackpad, Trackpad</p>
---	---

References

-  [Manual-Hub.com – Free PDF manuals!](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.