



[Home](#) » [Kogan](#) » **Kogan LPSTLBA Collapsible Stool User Guide** 

Kogan LPSTLBA Collapsible Stool User Guide

User Guide



Collapsible Stool

NBCLLPSTLBA

Contents [[hide](#)]

1 Assembly

2 Documents / Resources

2.1 References

Assembly

Expanding the Stool

1. Insert your thumb and index finger into the holes on both sides of the stool's top.



2. Pull outward to extend the stool. Adjust it to your preferred height.



3. Once adjusted, turn the stool clockwise to secure it in place.

Collapsing the Stool

1. Insert your thumb and index finger into the same holes. Pull outward slightly.


2. Rotate the stool anticlockwise to disengage the locking mechanism, then push inward to collapse.



3. Lock the stool in the collapsed position and wrap the carry strap around it for easy transport.



Documents / Resources

<div data-bbox="134 1778 240 1800">User Guide</div> <div data-bbox="156 1823 252 1921"></div> <div data-bbox="134 1951 209 1968">Collapsible Stool</div>	<p>Kogan LPSTLBA Collapsible Stool [pdf] User Guide</p> <p>LPSTLBA Collapsible Stool, LPSTLBA, Collapsible Stool, Stool</p>
---	---

References

- [User Manual](#)

📖 Collapsible Stool, Kogan, LPSTLBA, LPSTLBA Collapsible Stool,

📁 Kogan Stool

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.