



kogan MINIEBDSA Mini True Wireless Bluetooth Earbuds User Guide

August 8,
2025

Contents [[hide](#)]

- [1 MINIEBDSA Mini True Wireless Bluetooth Earbuds](#)
- [2 Mini True Wireless Bluetooth Earbuds with Lanyard](#)
 - [2.1 Specifications:](#)
 - [2.2 Product Usage Instructions:](#)
 - [2.2.1 Power On/Off and Basic Controls:](#)
 - [2.2.2 Pairing the Headphones:](#)
 - [2.2.3 Charging Instructions:](#)
 - [2.3 Frequently Asked Questions \(FAQ\):](#)
 - [2.3.1 Q: How do I know if my earbuds are fully charged?](#)
 - [2.3.2 Q: Can I use only one earbud at a time?](#)
 - [2.3.3 Documents / Resources](#)
 - [2.3.3.1 References](#)

MINIEBDSA Mini True Wireless Bluetooth Earbuds

“

Mini True Wireless Bluetooth Earbuds with Lanyard

Specifications:

- Bluetooth Frequency: 2.402GHz-2.480GHz
- Frequency Response: 20Hz-20KHz
- Speaker size: 6mm
- Playing time: 4.5-5.5 hours (High quality music and volume may accelerate battery consumption)
- Talk Time: 4.5 hours
- Earphone Charging Time: Approximately 1 hour
- Charging Case Charging Time: Approximately 2 hours

Product Usage Instructions:

Power On/Off and Basic Controls:

To power on, open the lid of the charging case and pick up the earphones. Alternatively, press and hold either earphone for 3 seconds. To power off, place the earphones in the charging case and close the lids or press and hold either earphone for 5 seconds.

Basic Controls:

- Answer/end call: Press left or right touch panel.
- Reject call: Press and hold left or right touch panel for 2 seconds.
- Play/pause: Press the left or right touch panel twice.
- Previous track: Press and hold left touch panel for 2 seconds while listening to music.
- Next track: Press and hold right touch panel for 2 seconds while listening to music.
- Voice assistant: Press the left touch panel 3 times.
- Gaming (low latency) mode: Press and hold the left touch panel

for 2 seconds.

- Active Noise Cancelling mode (ANC): Press and hold the right touch panel for 2 seconds to turn ANC on/off.

Pairing the Headphones:

1. Remove the earphones from the charging case. They will automatically power on, sync with each other, and enter pairing mode.
2. If earphones do not sync or become disconnected during use:
 1. Turn off both earphones and then turn them back on.
 2. If syncing fails, place both earphones back into the charging case, close it, then open it again.
 3. While outside the case, press and hold both earphones for 3 seconds to force them to power off and on for syncing.
 4. Enable Bluetooth on your phone, select 'TWS61' from the list of devices, and tap to connect.

Charging Instructions:

Charging the Earphones:

1. Open the charging case and place both earphones into their respective slots.
2. Ensure each earbud is properly aligned and seated on the charging contacts.

Charging the Charging Case:

1. Connect the supplied USB-C charging cable to the charging port on the case.
 2. Plug the other end into a USB power source such as a computer or power adapter (not supplied).
-

Frequently Asked Questions (FAQ):

Q: How do I know if my earbuds are fully charged?

A: When charging, the LED indicator on the earbuds will show red. Once fully charged, it will turn blue or green depending on the model.

Q: Can I use only one earbud at a time?

A: Yes, you can use either the left or right earbud independently for mono sound output.

“`

[View Fullscreen](#)

Mini True Wireless Bluetooth Earbuds with Lanyard

NBMINIEBDSA

Safety & Warnings

Read all safety notes and instructions before first use even if you are familiar with this product. Retain this user guide along with the product packaging for future reference. Use the product only as described in this user guide. Following these safety precautions will help reduce the risk of fire, injury, or damage. · Do not attempt to disassemble or modify the product under any circumstances. Doing so may cause damage or pose a safety hazard. · Avoid exposing the product to extreme temperatures. Do not store below 0°C or above 45°C. · Do not use the earphones during thunderstorms. Doing so may cause

malfunctions or

increase the risk of electric shock. · Do not use harsh chemicals, solvents, or strong detergents to clean the product. · Fully charge the earphones before first use. · If left unused for more than 2 weeks, recharge the product before use. · Do not use the earphones for extended periods without breaks. Prolonged use at high volume levels may damage your hearing. · Set listening durations appropriately and keep volume at safe levels to protect your hearing.

To Reduce the Risk of Injury

· Keep batteries out of reach of children. · Do not heat, open, or dispose of this product in a fire. · Do not allow metal objects to come into contact with the battery terminals on the device. · Do not expose the product to excessive heat.

Components

· Earphones (x2) · USB-C Charging Cable · Charging Case · User Guide

Operation

Power on: Open the lid and pick up earphones. Alternatively, press and hold either earphone for 3 seconds to turn on. Power off: Place earphones in the charging case and close the lids. Alternatively, press and hold either earphone for 5 seconds to turn off.

Answer/end call: Press left or right touch panel.

Reject call: Press and hold left or right touch panel for 2 seconds.

Play/pause: Press the left or right touch panel twice.

Previous track: While listening to music, press and hold left touch panel for 2 seconds.

Next track: While listening to music, press and hold right touch panel for 2 seconds.

Voice assistant: Press the left touch panel 3 times.

Gaming (low latency) mode: Press and hold the left touch panel for 2 seconds. Active

Noise Cancelling mode (ANC): Press and hold the right touch panel for 2 seconds to turn ANC on/off.

Pairing the Headphones

1. Remove the earphones from the charging case. They will automatically power on, sync with each other, and enter pairing mode.
2. If the earphones do not sync together or become disconnected during use: a. Turn off both earphones, then turn them back on. b. If syncing fails, place both earphones back

into the charging case, close the case, then open it again. c. While the earphones are outside the case, press and hold both earphones for 3 seconds. This will force them to power off and on, allowing them to sync. d. Ensure Bluetooth is enabled on your phone, select 'TWS61' from the list of devices and tap to connect.

Charging the Earphones

1. Open the charging case and place both earphones into their respective slots. 2. Ensure each earbud is properly aligned and seated on the charging contacts.

Charging the Charging Case

1. Connect the supplied USB-C charging cable to the charging port on the charging case.
2. Plug the other end into a USB power source such as a computer or power adapter (not supplied).

Specifications

Bluetooth Frequency Frequency Response Speaker size Playing time

Talk Time Earphone Charging Time Charging Case Charging Time



2.402GHz-2.480GHz 20Hz-20KHz 6mm 4.5-5.5 hours (High quality music and volume may accelerate battery consumption) 4.5hours Approximately 1 hour Approximately 2 hours

Notes

Need more information?


We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to [help.Kogan.com](https://help.kogan.com).


Documents / Resources

<div><div>User Guide</div><div></div><div></div><div>Mini True Wireless Bluetooth Earbuds with Lanyard</div></div>	<p>kogan MINIEBDSA Mini True Wireless Bluetooth Earbuds [pdf] User Guide</p> <p>e</p> <p>MINIEBDSA, MINIEBDSA Mini True Wireless Bluetooth Earbuds, Mini True Wireless Bluetooth Earbuds, True Wireless Bluetooth Earbud, Wireless Bluetooth Earbud, Bluetooth Earbud</p>
--	---

References

- [User Manual](#)

 Kogan

 Bluetooth Earbud, Kogan, Mini True Wireless Bluetooth Earbuds, MINIEBDSA, MINIEBDSA Mini True Wireless Bluetooth Earbuds, True Wireless Bluetooth Earbud, Wireless Bluetooth Earbud

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.