



[Home](#) » [Kogan](#) » **Kogan NBDIGICLCKA Rechargeable Digital Alarm Clock with Temperature**

Display User Guide 



User Guide



Rechargeable Digital Alarm Clock with Temperature Display NBDIGICLCKA

Contents [[hide](#)]

[1 Safety & Warnings](#)

[2 Overview](#)

[3 Operation](#)

[4 Cleaning & Care](#)

[5 Specifications](#)

[6 Documents / Resources](#)

[6.1 References](#)

Safety & Warnings

WARNING:


Do not disassemble the product yourself. Replacing the battery incorrectly may cause a risk of explosion.

Components


- Alarm Clock
- Charging Cable

Overview

Rear View

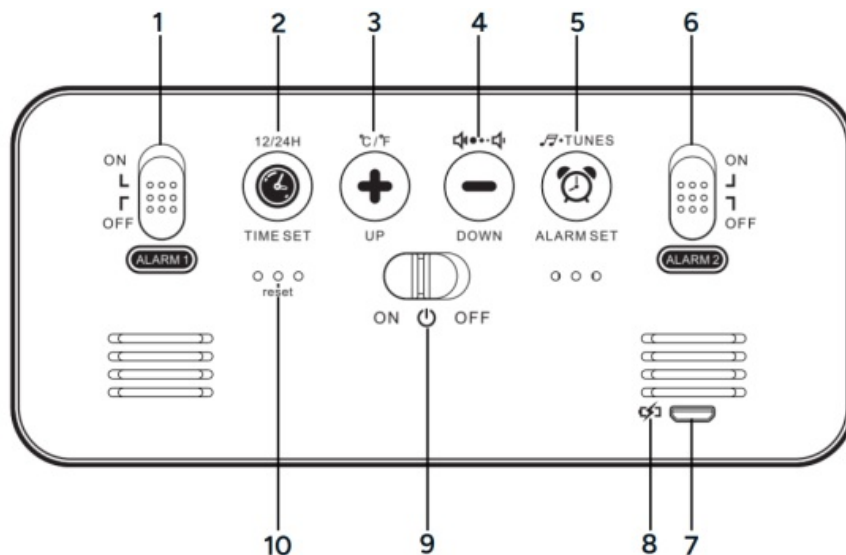

Top View

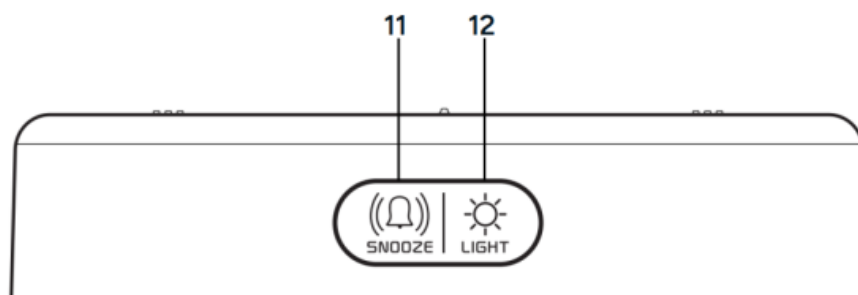

1. Alarm 1 Switch
2. Time Set Button
3. Up Button
4. Down Button

5. Alarm Set Button
6. Alarm 2 Switch
7. Charging Port
8. Charging Indicator
9. Power Switch
10. Reset Button
11. Snooze Button
12. Light Button

Operation

Power On/Off

- Slide the 'Power' switch to the 'On' position to turn the alarm clock on.
- Slide the 'Power' switch to the 'Off' position to turn the alarm clock off.

Charging

- Fully charge the battery before first use.
- Connect one end of the provided USB cable to the charging port on the alarm clock, and the other end to a 5V-1A/5V-2A adaptor (5V-1A recommended) (not provided).
- Warning: Do not use a higher-output adaptor. It may damage the device.
- The 'Charging' indicator stays on while charging and turns off when fully charged.
- If the 'Charging' indicator flashes or music does not play completely, charge the device.

Time Setting

1. Press and hold the 'Time Set' button for 3 seconds. The 'Hour' indicator will flash.
2. Use the '+/-' buttons to adjust the hour.
3. Press 'Time Set' again. The 'Minute' indicator will flash.
4. Use the '+/-' buttons to adjust the minute.
5. Press 'Time Set' again to confirm and exit Time Setting mode.

Dual Alarm Setup

Note:

Both Alarm 1 and Alarm 2 must be set during the initial alarm setup process. Once set, either alarm can be turned off individually using its corresponding switch without affecting the other.

Alarm 1

1. Press and hold the 'Alarm Set' button for 3 seconds. The 'Hour' indicator will flash.
2. Use the '+/-' buttons to set the hour. Confirm AM/PM.
3. Press 'Alarm Set' again. The 'Minute' indicator will flash.
4. Use the '+/-' buttons to set the minute.
5. Press 'Alarm Set' again to select the alarm ringtone. Use '+/-' to choose.
6. Press 'Alarm Set' to proceed to Alarm 2 setup.

Note:

The 'Time' indicator will flash during setting.

Alarm 2

1. The 'Hour' indicator will flash.
2. Use the '+/-' buttons to set the hour. Confirm AM/PM.
3. Press 'Alarm Set' again. The 'Minute' icon will flash.
4. Use the '+/-' buttons to set the minute.
5. Press 'Alarm Set' again to select the alarm ringtone. Use '+/-' to choose.
6. Press 'Alarm Set' again to exit alarm setting mode.

Turning Alarms On/Off

- Slide the Alarm 1 or Alarm 2 switch to the 'ON' position to activate the alarm. The 'Alarm' indicator will appear on the display.
- Slide the switch to the 'OFF' position to deactivate the alarm. The 'Alarm' indicator will turn off.

Stopping the Alarm

- When the alarm sounds, the 'Alarm' indicator will flash.

- Press any button on the rear of the alarm clock to stop the alarm manually.
- If no action is taken, the alarm will stop automatically after 2 minutes.

Snooze Mode

- When the alarm is ringing, press the 'Snooze' button to pause it. The 'Alarm' indicator will flash.
- The alarm will ring again after 5 minutes.
- Press any button at the rear of the alarm clock to turn off the alarm completely.

Volume Adjustment

- In Normal Time mode, press the '–' button to adjust the alarm/music volume.
- Press any button on the rear of the alarm clock to confirm and exit volume setting.

Brightness Adjustment

In Normal Time mode, press the 'Snooze/Light' button to adjust the screen brightness.

Temperature Display

In Normal Time mode, press the '+' button to toggle between °C and °F.

12/24 Hours Format

- In Normal Time mode, press the 'Time Set' button twice to switch between 12-hour and 24-hour formats.
- AM/PM will be displayed in 12-hour mode.

Music Mode

- Press the 'Alarm Set' button to play soothing music. Music will play for 5 minutes.
- There are 13 built-in tracks for sleep or wake-up assistance.

Intelligent Voice Control

- The display illuminates automatically when ambient noise exceeds 90dB or when the alarm clock is tapped.

- The display turns off after 6 seconds.

Note:

This function is disabled during charging. The display remains on in this mode.

Reset

If the device malfunctions, press the 'RESET' button to restart.

Cleaning & Care

- Clean with a soft tissue or cloth.
- Keep the clock clean and dry for optimal performance.

Disposal

This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.


Specifications

Power Input	5V1A
Working Current	110mA
Product Net Weight	160g
Product Dimension	145 x 65 x 32mm

Need more information?


We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to [help.Kogan.com](https://help.kogan.com).


Documents / Resources

	<p>Kogan NBDIGICLCKA Rechargeable Digital Alarm Clock with Temperature Display [pdf] User Guide</p> <p>NBDIGICLCKA Rechargeable Digital Alarm Clock with Temperature Display, NBDIGICLCKA, Rechargeable Digital Alarm Clock with Temperature Display, Alarm Clock with Temperature Display, Clock with Temperature Display, Temperature Display</p>
---	---

References

- [User Manual](#)

 Kogan

 Alarm Clock with Temperature Display, Clock with Temperature Display, Kogan, NBDIGICLCKA, NBDIGICLCKA Rechargeable Digital Alarm Clock with Temperature Display, Rechargeable Digital Alarm Clock with Temperature Display, Temperature Display

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.