



Contents [[hide](#)]

- [1 kogan NBMINIEBDSA Mini True Wireless Bluetooth Earbuds](#)
- [2 Product Usage Instructions](#)
- [3 Safety & Warnings](#)
- [4 Components](#)
- [5 Operation](#)
- [6 Pairing the Earphones](#)
- [7 Charging the Earphones](#)
- [8 Specifications](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



kogan NBMINIEBDSA Mini True Wireless Bluetooth Earbuds



Product Usage Instructions

- To power on, open the lid and pick up the earphones or press and hold either earphone for 3 seconds.
- To power off, place the earphones in the charging case and close the lids or press and hold either earphone for 5 seconds.
- Answer/end call: Press left or right touch panel. – Reject call: Press and hold left or right touch panel for 2 seconds.
- Play/pause: Press the left or right touch panel twice.
- Previous track: Press and hold left touch panel for 2 seconds.
- Next track: Press and hold right touch panel for 2 seconds.
- Voice assistant: Press the left touch panel 3 times.
- Remove the earphones from the charging case to automatically power on and enter pairing mode.
- If syncing issues occur:
 - Turn off both earphones and turn them back on.
 - If syncing fails, place both earphones back into the charging case, close it, then open it again.
 - While outside the case, press and hold both earphones for 3 seconds to force a reset.
- Enable Bluetooth on your phone, select 'TWS61' from the list of devices and tap to connect.
- Open the charging case and place both earphones into their slots.
- Ensure proper alignment on the charging contacts.
- Connect the supplied USB-C charging cable to the port on the case.
- Plug the other end into a USB power source like a computer or adapter.
- Press the left or right earphone once to adjust the volume.

Safety & Warnings

Read all safety notes and instructions before first use even if you are familiar with this product. Retain this user guide along with the product packaging for future reference. Use the product only as described in this user guide.

Following these safety precautions will help reduce the risk of fire, injury, or damage.

- Do not attempt to disassemble or modify the product under any circumstances. Doing

so may cause damage or pose a safety hazard.

- Avoid exposing the product to extreme temperatures. Do not store below 0°C or above 45°C.
- Do not use the earphones during thunderstorms. Doing so may cause malfunctions or increase the risk of electric shock.
- Do not use harsh chemicals, solvents, or strong detergents to clean the product.
- Fully charge the earphones before first use.
- If left unused for more than 2 weeks, recharge the product before use.
- Do not use the earphones for extended periods without breaks. Prolonged use at high volume levels may damage your hearing.
- Set listening durations appropriately and keep volume at safe levels to protect your hearing.









To Reduce the Risk of Injury

- Keep batteries out of reach of children.
- Do not heat, open, or dispose of this product in a fire.
- Do not allow metal objects to come into contact with the battery terminals on the device.
- Do not expose the product to excessive heat.

Components

- Earphones (x2)
- USB-C Charging Cable
- Charging Case
- User Guide

Operation

	Power on: Open the lid and pick up earphones. Alternatively, press and hold either earphone for 3 seconds to turn on.
	Power off: Place earphones in the charging case and close the lids. Alternatively, press and hold either earphone for 5 seconds to turn off.
	Answer/end call: Press left or right touch panel.
	Reject call: Press and hold left or right touch panel for 2 seconds.
	Play/pause: Press the left or right touch panel twice.
	Previous track: While listening to music, press and hold left touch panel for 2 seconds.
	Next track: While listening to music, press and hold right touch panel for 2 seconds.
	Voice assistant: Press the left touch panel 3 times.

Pairing the Earphones

1. Remove the earphones from the charging case. They will automatically power on, sync with each other, and enter pairing mode.
2. If the earphones do not sync together or become disconnected during use:
 - Turn off both earphones, then turn them back on.
 - If syncing fails, place both earphones back into the charging case, close the case, then open it again.
 - While the earphones are outside the case, press and hold both earphones for 3 seconds. This will force them to power off and on, allowing them to sync.
 - Ensure Bluetooth is enabled on your phone, select 'TWS61' from the list of devices and tap to connect.

Charging the Earphones

1. Open the charging case and place both earphones into their respective slots.
2. Ensure each earbud is properly aligned and seated on the charging contacts.

Charging the Charging Case

1. Connect the supplied USB-C charging cable to the charging port on the charging case.
2. Plug the other end into a USB power source such as a computer or power adapter (not supplied).

Adjusting the Volume

- Press the left or right earphone once to adjust the volume.

Specifications

- Bluetooth Frequency 2.402GHz-2.480GHz
- Frequency Response 20Hz-20KHz
- Speaker Size 6mm
- Playing Time 4.5-5.5 hours (High-quality music and volume may accelerate battery consumption)
- Talk Time 4.5 hours
- Earphone Charging Time: Approximately 1 hour
- Charging Case Charging Time Approximately 2 hours

Need more information?

- We hope that this user guide has given you the assistance needed for a simple setup.
- For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help.kogan.com.

FAQ


Q: What should I do if my earphones do not sync together?

A: If syncing issues occur, try turning off both earphones, placing them back in the case, reopening it, and following the reset steps mentioned in the user manual.

Q: How can I check the battery levels of my earbuds?

A: Check the battery levels through your connected device's Bluetooth settings or refer to any indicator lights on the charging case.


Documents / Resources

<div><div>User Guide</div><div></div><div>Mini True Wireless Bluetooth Earbuds with Lanyard</div></div>	kogan NBMINIEBDSA Mini True Wireless Bluetooth Earbuds [pdf] User Guide NBMINIEBDSA, NBMINIEBDSA Mini True Wireless Bluetooth Earbuds, Mini True Wireless Bluetooth Earbuds, True Wireless Bluetooth Earbuds, Wireless Bluetooth Earbuds, Bluetooth Earbuds
--	--

References

- [User Manual](#)

 Kogan

 Bluetooth Earbuds, Kogan, Mini True Wireless Bluetooth Earbuds, NBMINIEBDSA, NBMINIEBDSA Mini True Wireless Bluetooth Earbuds, True Wireless Bluetooth Earbuds, Wireless Bluetooth Earbuds

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.