



## kolin RG57B2 Remote Controller User Manual

[Home](#) » [kolin](#) » kolin RG57B2 Remote Controller User Manual 

### Contents

- 1 kolin RG57B2 Remote Controller
- 2 Remote Controller Specifications
- 3 INTRODUCTION
- 4 Remote Controller Specifications
- 5 Operation of buttons
- 6 Indicators on LCD
- 7 Mode display
- 8 Fan speed indication
- 9 How to use the buttons
- 10 Timer operation
- 11 Example of timer setting
- 12 Handling the remote controller
- 13 Documents / Resources
  - 13.1 References
- 14 Related Posts



**kolin RG57B2 Remote Controller**



## Remote Controller Specifications

- Model:
- Rated Voltage:
- Signal Receiving Range:
- Environment: -5°C~60°C

### ON/OFF Button

This button turns the air conditioner ON and OFF.

### MODE Button

Press this button to modify the air conditioner mode in the following sequence:

- AUTO
- COO
- DRY
- HEAT
- FAN

**Note:** Do not select HEAT mode if your machine is cooling only type.

### FAN Button

Used to select the fan speed in four steps:

 
## INTRODUCTION

**NOTE**


- Buttons design is based on typical model and might be slightly different from the actual one you purchased the actual shape shall prevail.
- All the functions described are accomplished by the unit. If the unit has no this feature, there is no corresponding operation happened when press the relative button on the remote controller.
- When there are wide differences between Remote controller Illustration and USER’S MANUAL on function description, the description of USER’S MANUAL shall prevail.

**Remote Controller Specifications**

Model	RG57B2/BGE
Rated Voltage	3.0V(Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C~60°C

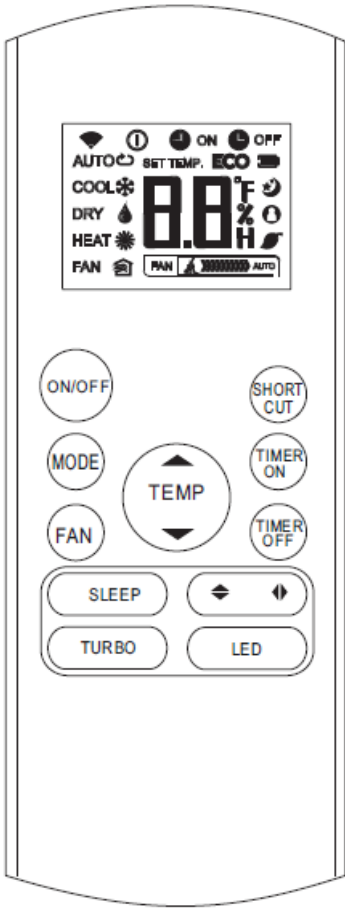

**Operation of buttons**

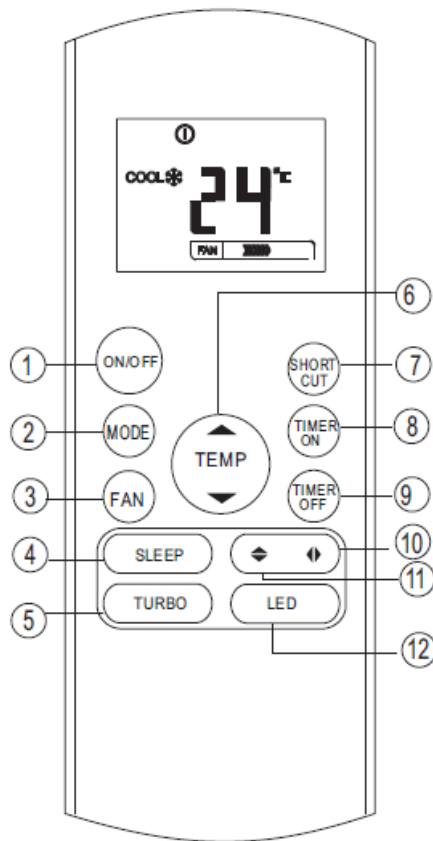 


#### 1. ON/OFF Button

This button turns the air conditioner ON and OFF.

#### 2. MODE Button

 
Press this button to modify the air conditioner mode in a sequence of following:



**NOTE** Please do not select HEAT mode if the machine you purchased is cooling only type. Heat mode is not supported by the cooling only appliance.

#### 3. FAN Button

 Used to select the fan speed in four steps:



AUTO LOW MED HIGH

**NOTE:** You can not switch the fan speed in AUTO or DRY mode.


#### 4. SLEEP Button

 Active/Disable sleep function. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only .

For the detail, see sleep operation in USER S MANUAL. ,

**NOTE:** While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.

5. Active/Disable Turbo function. Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time(if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)

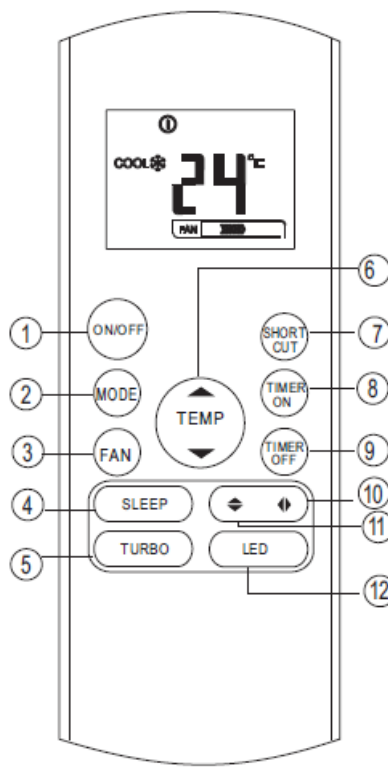

## 6. UP Button( ▲ )

Push this button to increase the indoor temperature setting in 1oC increments to 30oC.

**DOWN Button( ▼ )** Push this button to decrease the indoor temperature setting in 1oC increments to 17oC.

NOTE Temperature control is not available in Fan mode.

## 7. SHORTCUT Button

Used to restore the current settings or resume previous settings.

On the first time connecting to the power, if push the SHORTCUT button, the unit will operate on AUTO mode, 26OC, and fan speed is Auto.

Push this button when remote controller is on, the system will automatically revert back to the previous settings including operating mode, setting temperature, fan speed level and sleep feature(if activated).

If pushing more than 2 seconds, the system will automatically restore the current operation settings including operating mode, setting temperature, fan speed level and sleep feature(if activated ).

 
## 8. TIMER ON Button


Press this button to initiate the auto-on time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments.

To cancel the auto-timed program, simply adjust the auto-on time to 0.0.

## 9. TIMER OFF Button

Press this button to initiate the auto-off time sequence. Each press will increase the auto -timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0

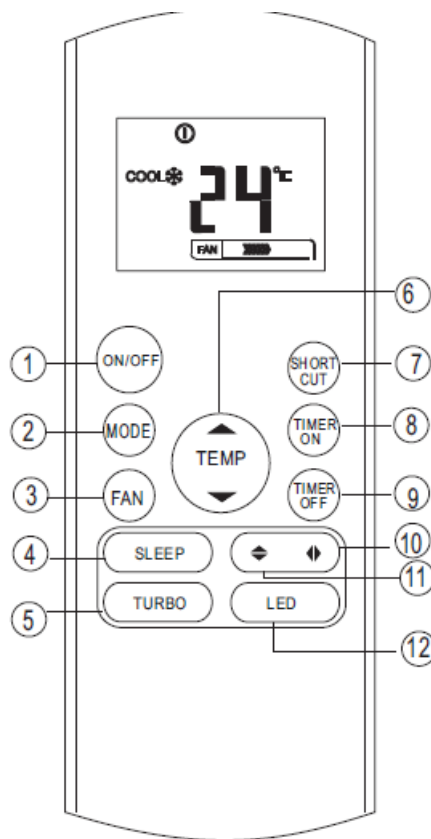

10. **Swing**  **Button** Used to stop or start vertical louver movement and set the desired left/right air flow direction. The vertical louver changes 6 degree in angle for each press. ,And the temperature display, area of indoor unit displays for one second. If keep pushing more than 2 seconds, the vertical louver swing feature is activated. And the display area of indoor unit displays  
 IIII , flashes four times, then the tempera setting reverts back. If the vertical louver swing feature is stopped, it displays LC and remains **on** for 3 seconds.

**NOTE:** For some units , the indoor units display when the swing feature is activated, and display when the swing feature is stopped .activated, and display swing feature is stopped.

11. **Swing**  **Button**


Used to stop or start horizontal louver move-ment or set the desired up/down air flow direction. The louver changes 6 degree in angle for each press. If keep pushing more than 2 seconds, the louver will swing up and down automatically.

12. **LED Button**

Disable/Active indoor screen Display. When pushing the button, the indoor screen display is cleared, press it again to light the display.

## Indicators on LCD

 Information are displayed when the remote controller is powered up.

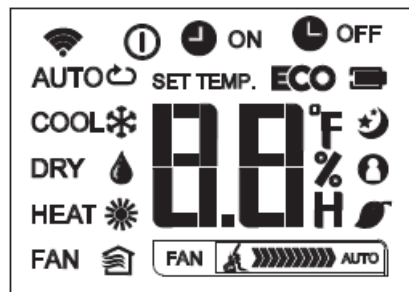


## Mode display


AUTO 


COOL 

DRY 


HEAT 

FAN 

AUTO 

COOL 

DRY 

HEAT 

FAN 



Displayed when data transmitted.



Displayed when remote controller is ON.



Battery display(low battery detection)

**ECO**

Not available for this unit



Displayed when TIMER ON time is set.



Displayed when TIMER OFF time is set.



Show set temperature or room temperature, or time under TIMER setting.



Displayed in Sleep Mode operation.



Not available for this unit

 


Not available for this unit



Not available for this unit


## Fan speed indication

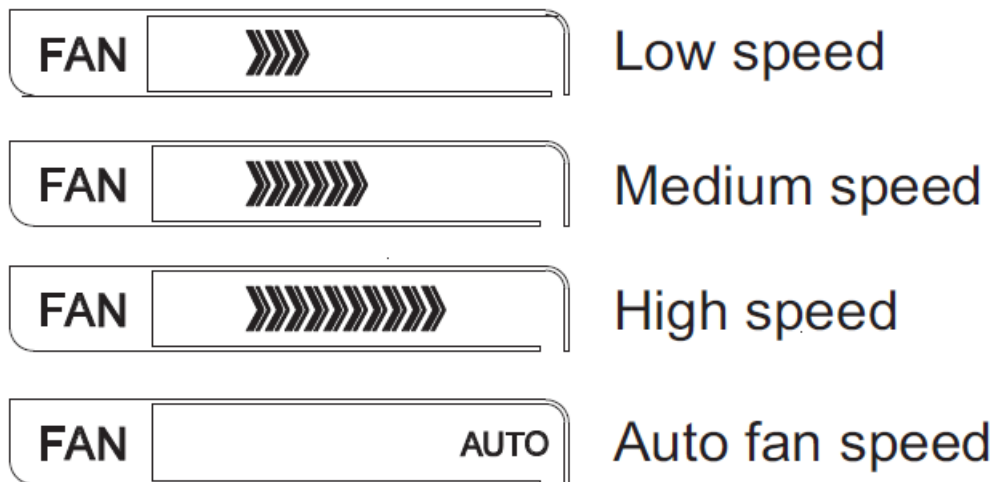

### Note:

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation only the relative functional signs are shown on the display window.
 
## How to use the buttons

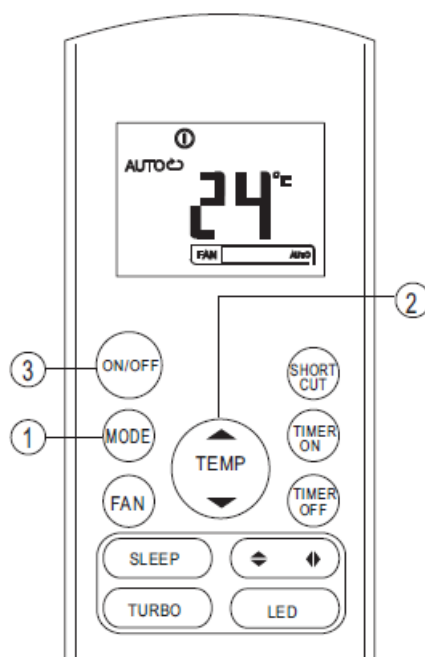

## Auto operation

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

 
1. Press the MODE button to select Auto.
2. Press the UP/DOWN button to set the desired temperature. The temperature can be set within a range of 17°C~ 30°C in 1°C increments.
3. Press the ON/OFF button to start the air conditioner.

## NOTE



1. . In the Auto mode, the air conditioner can logically choose the mode of Cooling, Fan, and Heating by sensing the difference between the actual ambient room temperature and the setting temperature on the remote controller.
2. . In the Auto mode, you can not switch the fan speed.  
It has already been automatically controlled.
3. If the Auto mode is not comfortable for you , the desired mode can be selected manually.

### Cooling /Heating/Fan operation

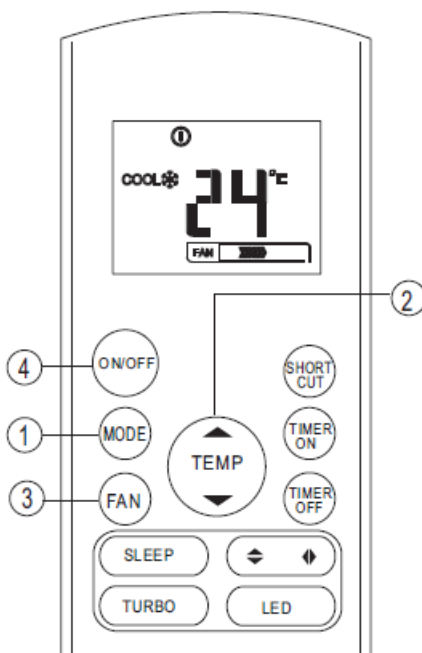


Ensure the unit is plugged in and power is available.


1. Press the MODE button to select COOL, HEAT(cooling & heating models only) or FAN mode.
2. Press the UP/DOWN buttons to set the desired temperature. The temperature can be set within a range of 17OC~ 30OC in 1OC increments.
3. Press the FAN button to select the fan speed in four steps- Auto, Low, Med, or High.
4. Press the ON/OFF button to start the air conditioner.

### NOTE

 In the FAN mode, the setting temperature is not displayed in the remote controller and you are not able to control the room temperature either. In this case, only step 1, 3 and 4 may be performed.

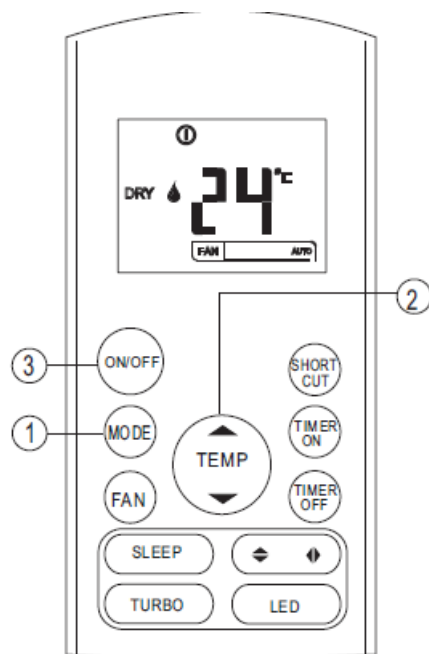

## Dehumidifying operation

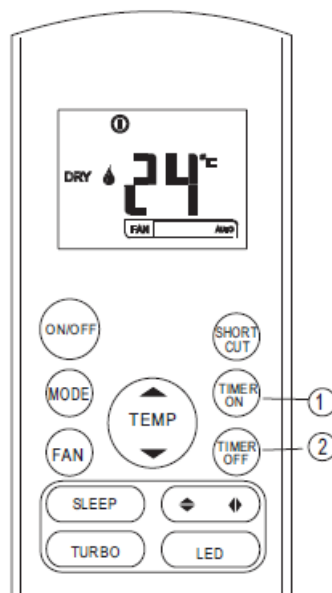 



Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

1. Press the MODE button to select DRY mode.
2. Press the UP/DOWN buttons to set the desired temperature. The temperature can be set within a range of 17OC~ 30OC in 1OC increments.
3. Press the ON/OFF button to start the air conditioner.


### NOTE

In the Dehumidifying mode, you can not switch the fan speed. It has already been automatically controlled.

## Adjusting air flow direction

 
Use the SWING  4  2 button to adjust the desired airflow direction.

1. Up/Down direction can be adjusted with the button on the remote controller. Each time when you press the button, the louver moves an angle of 6 degree. If pressing more than 2 seconds ,the louver will swing up and down automatically.

2. . Left/Right direction can be adjusted with the  button on the remote controller. Each time when you press the button, the louver moves an angle of 6 degree. If pressing more than 2 seconds ,the louver will swing up and down automatically.

**NOTE:** When the louver swing or move to a position which would affect the cooling or heating effect of the air conditioner, it would automatically change the swing/moving direction.

## Timer operation

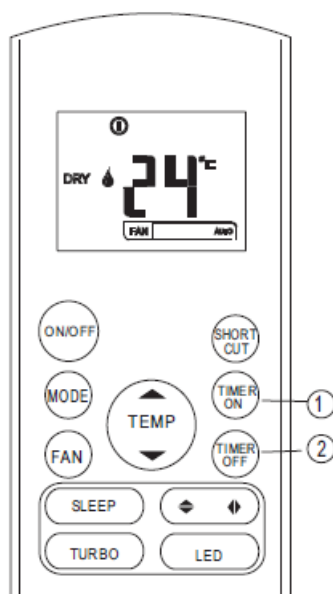

Press the TIMER ON button can set the auto-on time of the unit. Press the TIMER OFF button can set the auto-off time of the unit.

### To set the Auto-on time.

1. Press the TIMER ON button. The remote controller shows TIMER ON, the last Auto-on setting time and the signal “H” will be shown on the LCD display area. Now it is ready to reset the Auto-on time to START the operation.
2. Push the TIMER ON button again to set desired Auto-on time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the TIMER ON ,there will be a one second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal “h” will disappear and the set temperature will re-appear on the LCD display window.

 
### To set the Auto-off time.

1. Press the TIMER OFF button. The remote controller shows TIMER OFF, the last Auto-off setting time and the signal “H” will be shown on the LCD display area. Now it is ready to reset the Auto-off time to stop the operation.
2. Push the TIMER OFF button again to set desired Auto-off time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the TIMER OFF, there will be a one second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal “H ” will disappear and the set temperature will re-appear on the LCD display window.

### CAUTION

When you select the timer operation, the remote controller automatically transmits the timer signal to the indoor unit for the specified time. Therefore, keep the remote controller in a location where it can transmit the signal to the indoor unit properly. The effective operation time set by the remote controller for the timer function is limited to the following settings: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 and 24.

### Example of timer setting

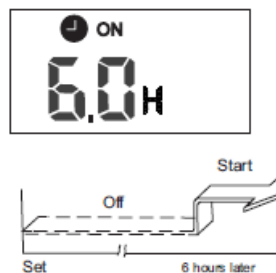

#### TIMER ON (Auto-on Operation)

The TIMER ON feature is useful when you want the unit to turn on automatically before you return home. The air conditioner will automatically start operating at the set time.

#### Example

To start the air conditioner in 6 hours.

 
 
1. Press the TIMER ON button, the last setting of starting operation time and the signal “H” will show on the display area.
2. Press the TIMER ON button to display “6.0H ” on the TIMER ON display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The TIMER ON” indicator remains on and this function is activated

#### TIMER OFF (Auto-off Operation)

The TIMER OFF feature is useful when you want the unit to turn off automatically after you go to bed. The air conditioner will stop automatically at the set time.

#### Example

To stop the air conditioner in 10 hours. .

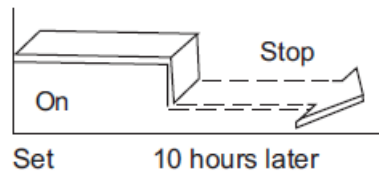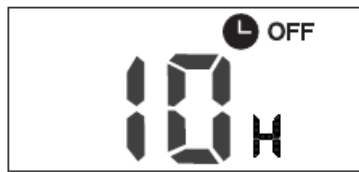

1. Press the TIMER OFF button, the last setting of stopping operation time and the signal “H” will show on the display area.
2. Press the TIMER OFF button to display “10H ” on the TIMER OFF display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The “TIMER OFF” indicator remains on and this function is activated.

## COMBINED TIMER

(Setting both ON and OFF timers simultaneously)

 
TIMER OFF → TIMER ON

(On → Stop → Start operation)

This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

### Example:

To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

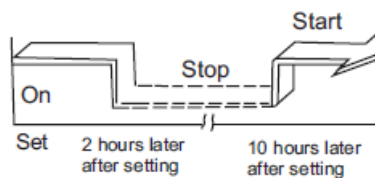

1. Press the TIMER OFF button.
2. Press the TIMER OFF button again to display 2.0H on the TIMER OFF display.
3. Press the TIMER ON button.
4. Press the TIMER ON button again to display 10H on the TIMER ON display .
5. Wait for 3 seconds and the digital display area will show the temperature again. The “TIMER ON OFF” indicator remains on and this function is activated


## TIMER ON → TIMER OFF

 (Off → Start → Stop operation)

This feature is useful when you want to start the air conditioner before you wake up and stop it after you leave the house.


**Example:**

To start the air conditioner 2 hours after setting, and stop it 5 hours after setting.

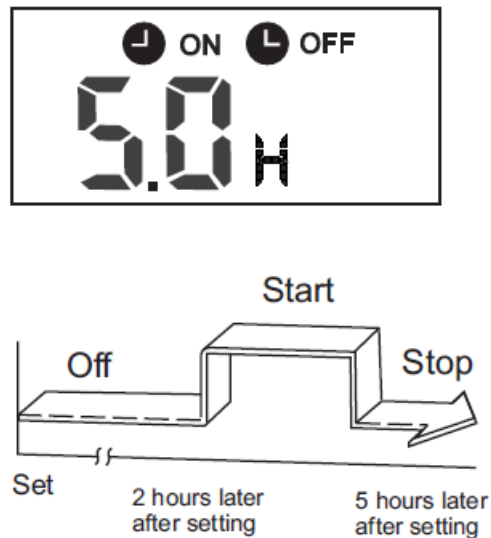

1. Press the TIMER ON button.
2. Press the TIMER ON button again to display 2.0H on the TIMER ON display.
3. Press the TIMER OFF button.
4. Press the TIMER OFF button again to display 5.0H on the TIMER OFF display .
5. Wait for 3 seconds and the digital display area will show the temperature again. The “TIMER ON & TIMER OFF” indicator remains on and this function is activated.

## Handling the remote controller

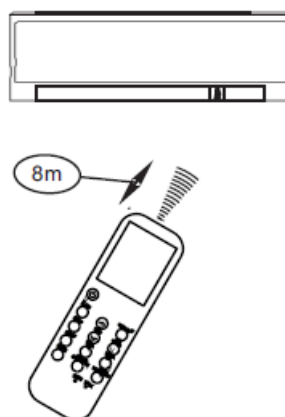 


### Location of the remote controller.

Use the remote controller within a distance of 8 meters from the appliance, pointing it towards the receiver. Reception is confirmed by a beep.

## CAUTIONS

- The air conditioner will not operate if curtains, doors or other materials block the signals from the remote controller to the indoor unit.
- Prevent any liquid from falling into the remote controller. Do not expose the remote controller to direct sunlight or heat.
- If the infrared signal receiver on the indoor unit
- is exposed to direct sunlight, the air conditioner may not function properly. Use curtains to
- prevent the sunlight from falling on the receiver.
- If other electrical appliances react to the remote controller, either move these appliances or consult your local dealer.
- Do not drop the remote controller. Handle with care. Do not place heavy objects on the remote controller, or step on it.
 
#### **Using the remote controller holder(optional)**

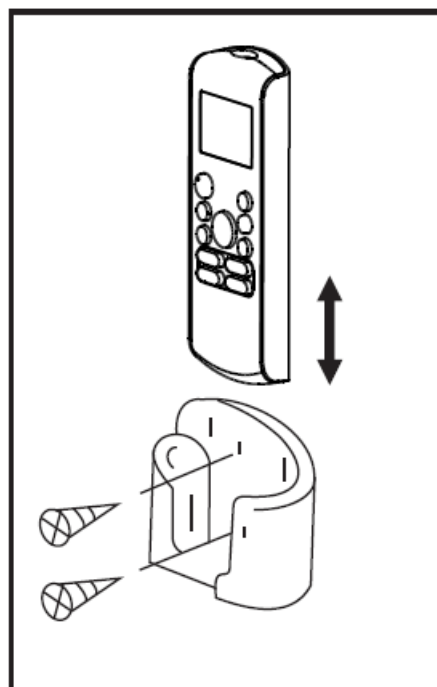

- The remote controller can be attached to a wall or pillar by using a remote controller holder(not supplied, purchased separately).
- Before installing the remote controller, check that the air conditioner receives the signals properly.
- Install the remote controller with two screws.
- For installing or removing the remote controller, move it up or down in the holder.

#### **Replacing batteries**

The following cases signify exhausted batteries. Replace old batteries with new ones.

Receiving beep is not emitted when a signal is transmitted. Indicator fades away.

The remote controller is powered by two dry batteries (R03/LR03X2) housed in the back rear part and protected by a cover.

 
1. Remove the cover in the rear part of the remote controller.
2. Remove the old batteries and insert the new batteries, placing the(+) and (-) ends correctly.

3. Install the cover back on.

**NOTE:** When the batteries are removed, the remote controller erases all programming. After inserting new batteries, the remote controller must be reprogrammed.

### CAUTIONS

- Do not mix old and new batteries or batteries of different types.
- Do not leave the batteries in the remote controller if they are not going to be used for 2 or 3 months.
- Do not dispose batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

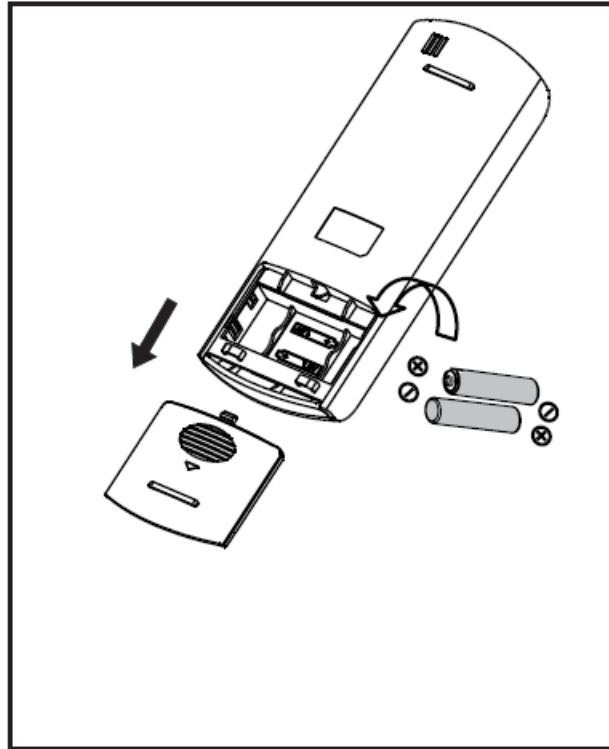

- BRANCH Bacolod ADDRESS Door #A-2 & A-3 UTC Bldg., Alunan St., TEL. NO. (034) 433-0031 Brgy. Singcang, Bacolod City Cagayan De Oro Door #3 De oro Land Bldg., Julio Pacana St., (088) 856-4672 Puntod, Cagayan De Oro City Cebu Unit #6 A. Geson Bldg., D. Jakosalem cor. F. Ramos St., Cebu City Dagupan Unit #1107 Carangina District, Dagupan City (032 2537874 (075) 523-2832 Davao Bik 17 Lot 9, Calamavas City ma Subd., Matina, (082) 227 – 7063 Iloilo Door #4 D' Appliance Arcade, South Fundidor, (033) 336-1970 Moli, Iloilo City Pampanga LRK Commercial Bldg., Jose Abad Ave., (045) 455-2934 Lagundi Mexico, Pampanga

For More air conditioner tips, please like, share and follow us on our social media accounts:

- Facebook: kolinphilippines
- kolinphilippines
- Youtube: kolinphilippines
- Tiktok: kolinphilippines Website: [www.kolinphil.com.ph](http://www.kolinphil.com.ph)

OFFICE Could Bup Nev, MaRat Cly Service Hotline: (02) 8852-6868 PLANT Bik 3 Lot 5, Main Drive First Cavite  
Tel. No.: (046) 402-0793



**IMPORTANT NOTE:** Thank you for purchasing our air conditioner. Please read this manual carefully before operating your new air conditioning unit. Make sure to save this manual for future reference.

---

**Documents / Resources**

	<p><a href="#">kolin RG57B2 Remote Controller</a> [pdf] User Manual RG57B2, BGE, KLM-SF70-4F1M410, RG57B2 Remote Controller, RG57B2, Remote Controller , Controller</p>
---	---

**References**

- [User Manual](#)