



[Home](#) » [KONG](#) » **KONG SWIFTGLIDE 33010003 3 Speed Grooming Clipper Kit Instruction Manual**



KONG SWIFTGLIDE 33010003 3 Speed Grooming Clipper Kit Instruction Manual



Contents [[hide](#)]

- 1 IMPORTANT SAFETY INSTRUCTIONS
- 2 OPERATING INSTRUCTIONS
- 3 BEFORE FIRST USE
- 4 CLEANING/MAINTENANCE
- 5 REMOVING AND INSTALLING ACCESSORIES
- 6 CLEANING AND MAINTENANCE
- 7 COMB ATTACHMENTS / FCC
- 8 COMB ATTACHMENTS
- 9 FCC STATEMENT
- 10 LIMITED WARRANTY
- 11 LIMITED THREE-YEAR WARRANTY
- 12 Documents / Resources
 - 12.1 References

IMPORTANT SAFETY INSTRUCTIONS

When using electrical devices, basic safety precautions should always be followed:

1. Read all instructions before using this device.
2. For household use only.
3. Use this device only for trimming/clipping as described in this instruction manual. Do not use for other purposes.
4. To reduce the risk of electrical shock do not immerse unit, plug or cord in water or other liquids.
5. This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the device.
7. Unplug from wall outlet when not in use, when moving device from one location to another, before putting on or taking off parts and before cleaning. To disconnect, grip plug and pull from the outlet.

8. Avoid contact with moving parts.
9. Do not operate in the presence of explosive and/or flammable fumes.
10. To avoid risk of fire, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
11. Do not operate the device with a damaged cord or plug, after the device malfunctions, or has been dropped/damaged in any manner.
Discard or contact customer service.
12. Do not run cord under carpeting. Do not cover cable with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cable away from high traffic area and where it will not be tripped over.
13. The use of attachments not recommended or sold by the appliance manufacturer may cause injuries.
14. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces, including the stove.
15. **WARNING:** To reduce the risk of fire or electric shock, do not use this device with any solid-state speed control device.
16. It is recommended to keep the device stored in a room with ambient temperature between 41°F and 104°F.
17. Use of non-listed / non-certified parts may cause damage to the device and void the warranty. For spare and replacement parts, please contact customer service.
18. IPX5 rating is for clipper body only

**PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

 
OPERATING INSTRUCTIONS

BEFORE FIRST USE

Plug the adapter into a standard 120 Volt AC outlet. Press and hold the Power Button for approximately 1.5 seconds to turn the device ON to speed 1. Use caution as the blade will now be in operation. Once the device is ON, the Flashlight, Power Indicator Light, and Speed Indicator Light will now be illuminated. Quick press the power button to toggle between the 3 Speed Settings and OFF. All indicator lights will turn OFF when the device is successfully turned OFF.


NOTE: If the clipper blade becomes clogged with hair, all the lights will flash for 3 seconds and the unit will shut off. Refer to the CLEANING / MAINTENANCE section to remove and clean the blade before continuing.

NOTE: To turn the Flashlight ON/OFF, press the Power Button for 1.5 seconds when the device is turned ON.

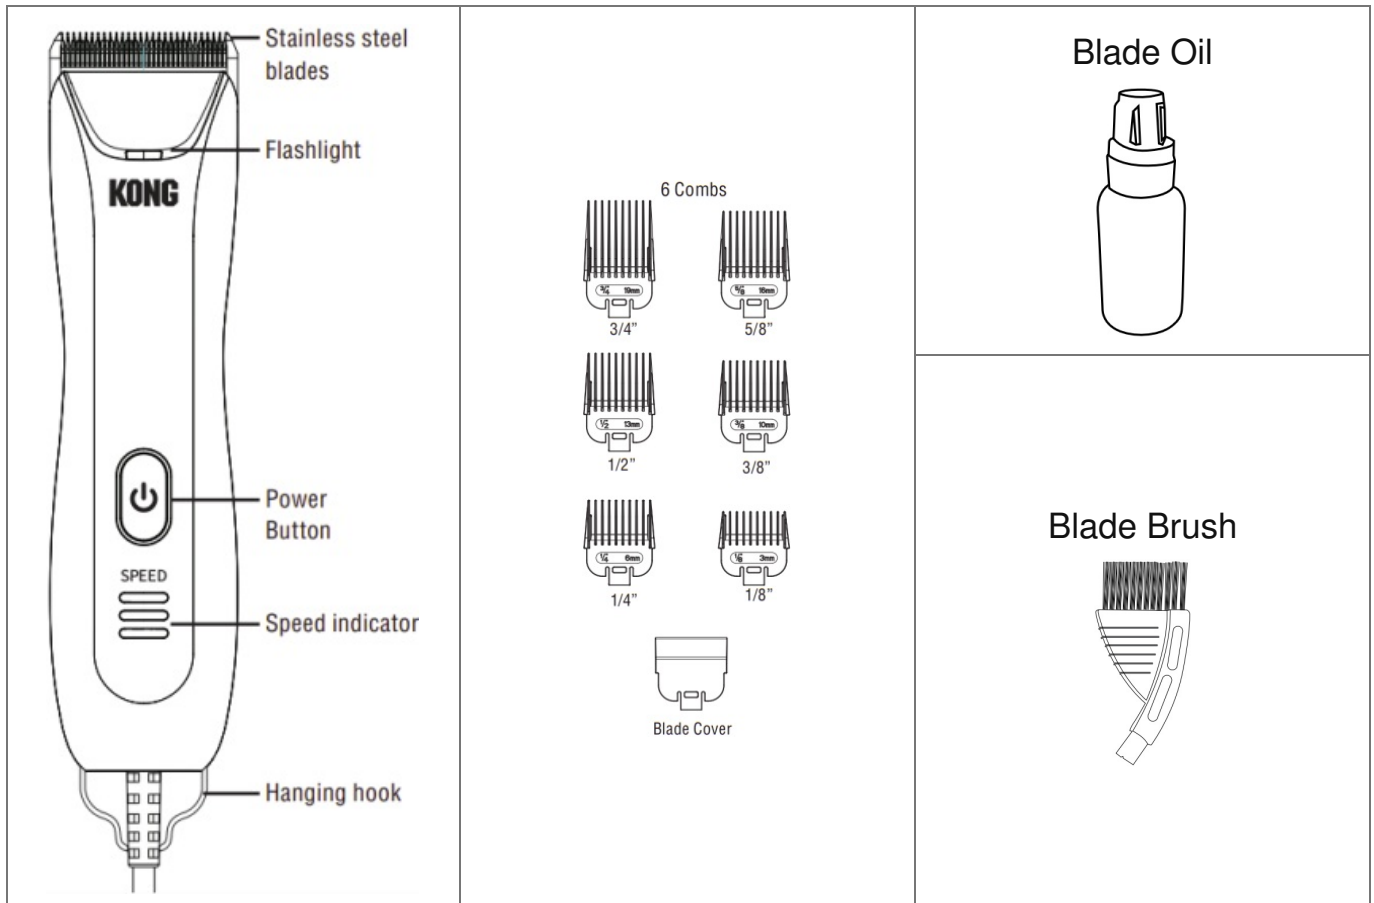

CLEANING/MAINTENANCE

 REMOVING AND INSTALLING ACCESSORIES


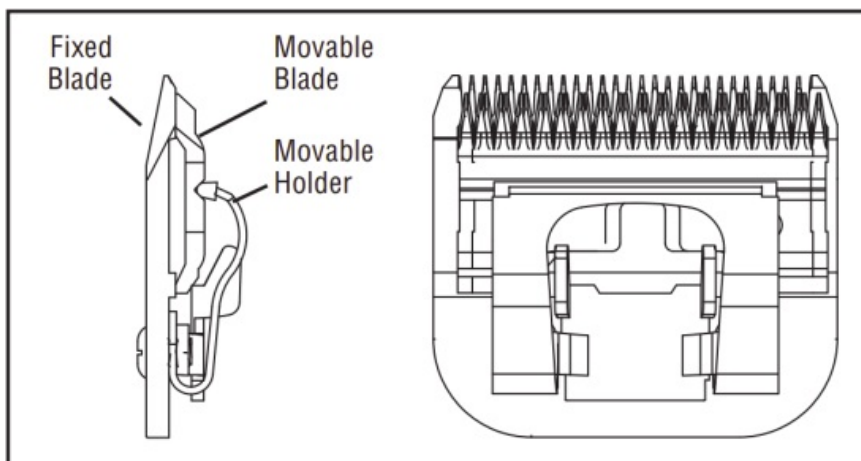


NOTE: Before attaching or removing blade or combs, ensure the device is off and unplugged from the outlet.

NOTE: Use caution when attaching and detaching the blade. It is recommended to wash and/or disinfect after each use. If the blade becomes damaged, stop using And replace immediately.

Blade Disassembly

  
Press the lock key (refer to **Fig. 1**) and pull the blade away from body (refer to **Fig. 2**).

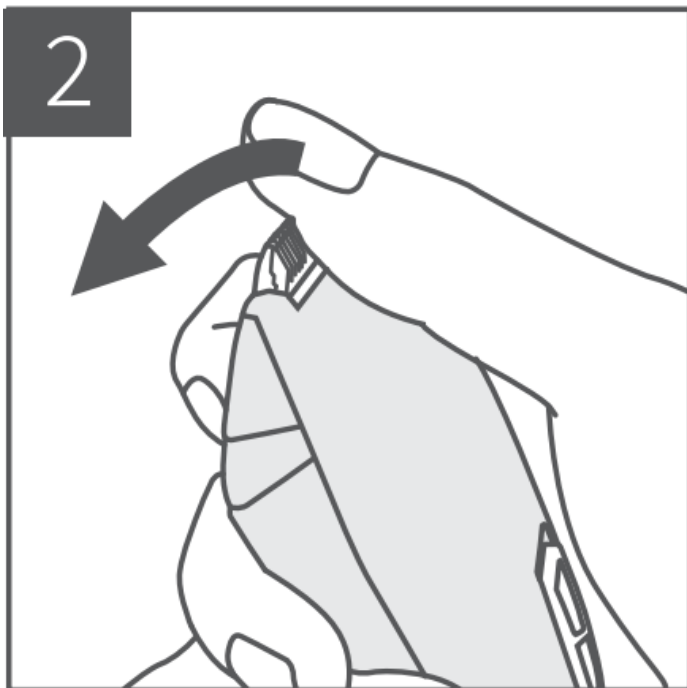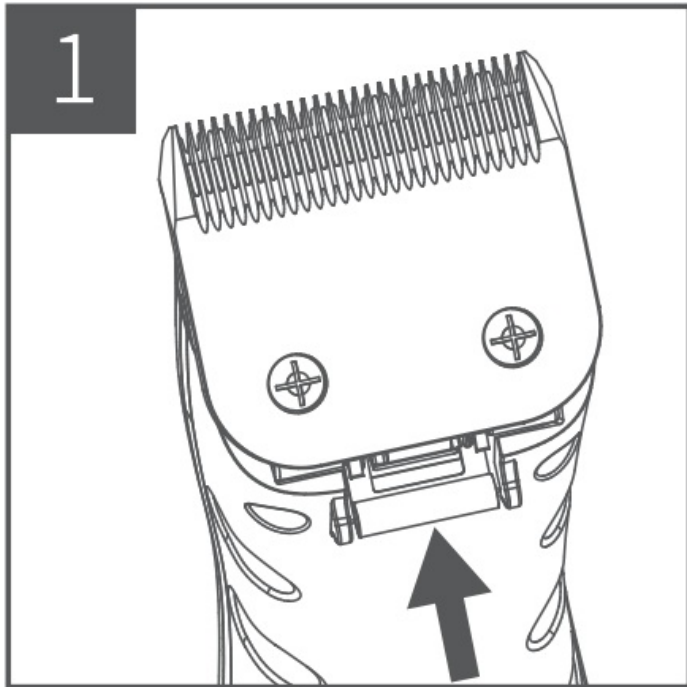

Note: Hold the blade while disassembling to avoid dropping and potentially damaging the blade.

Blade Installation

 Press and hold the lock key (refer to **Fig.1**) while sliding the blade into the slot B at connection A (**Fig.3**); Once aligned, press down firmly on the back of the blade. A “click” noise will be heard indicating the blade was successfully installed.

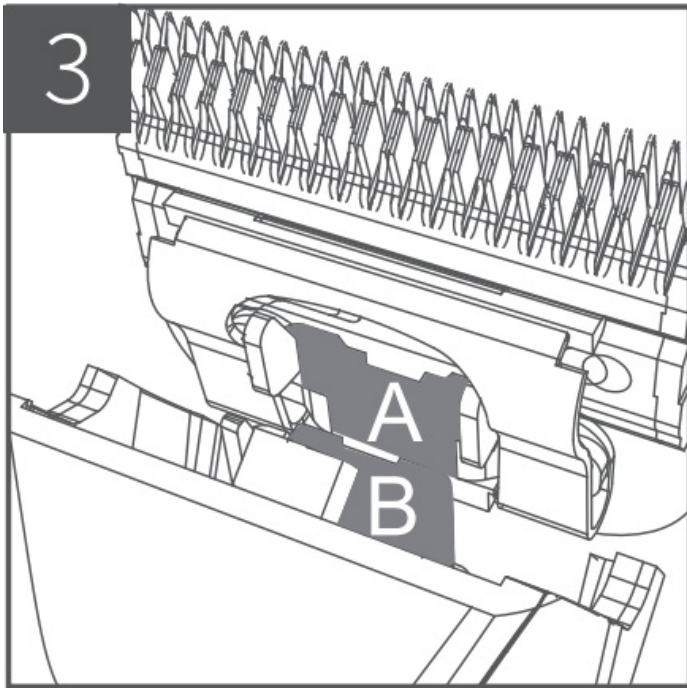


CLEANING AND MAINTENANCE

Blade Cleaning and Maintenance


NOTE: Ensure the device is turned off and unplugged from the outlet before cleaning and maintenance.

 Cleaning the blade: Use the cleaning brush to remove any loose hair on the blade (**Fig. 4**).

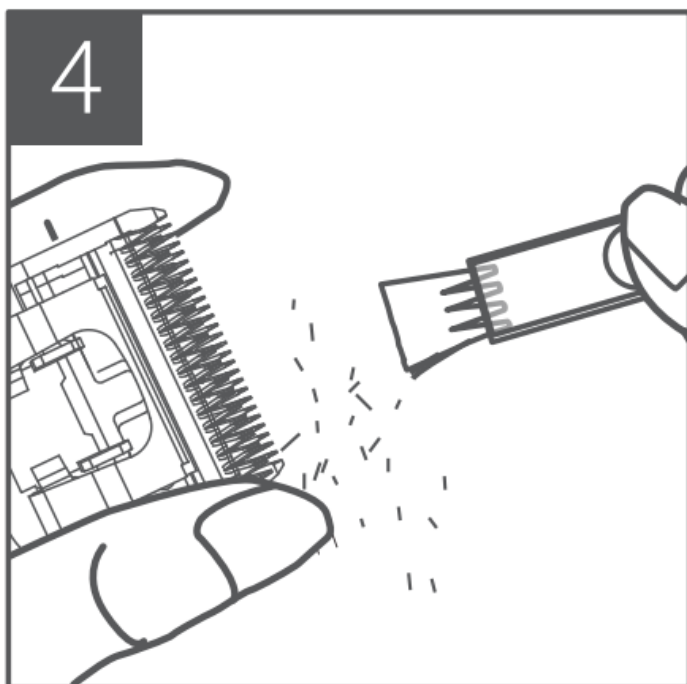

The blade head can be rinsed under running while attached to the clipper for a quick clean. For a deeper more thorough cleaning, remove the blade and refer to the Maintenance section below.

 Maintenance of the blade: When the blade is removed from the device, place one drop of oil in each of the circled areas in **Figure 5**. Gently push the Movable Holder (C) to evenly distribute the oil. The blade can now be re-installed.

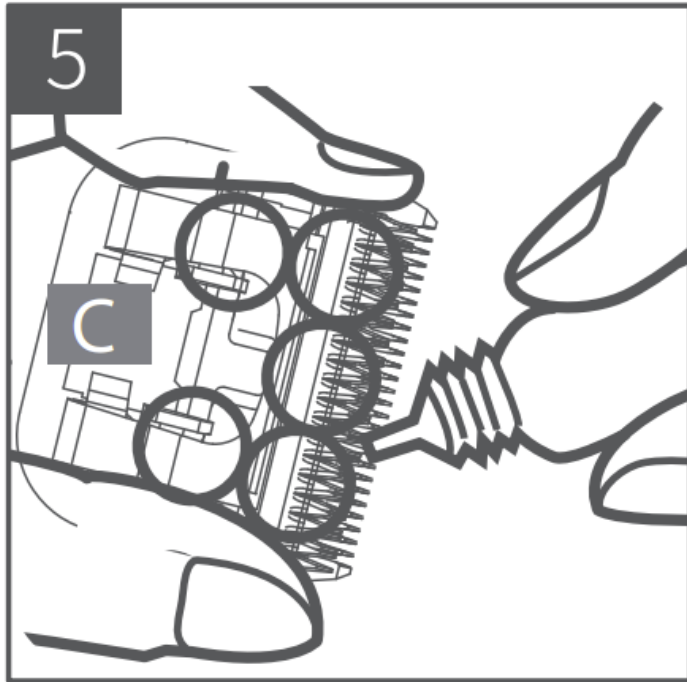

NOTE:

1. Do not remove any parts of the blade assembly as this could render the blade inoperable.
2. After each use, and while the device is OFF and unplugged, it is recommended to brush away any loose hairs from the blade. If a lot of hair has accumulated in between the blade and the body of the clipper, rinse the blade under running water then dry thoroughly. If some hair still remains, it is recommended to remove the blade and clean with water.
3. For optimal performance and to extend the life of the blade, it is recommended to oil the blade after each cleaning. The service life of the blade is related to the frequency of use, the quality of the hair being trimmed and the maintenance.

Note: When replacing the blade, please contact our customer service, and do not use incompatible blades from other manufacturers.

COMB ATTACHMENTS / FCC

NOTE: During an extended clipping session or working through thick hair, the blade may feel slightly warm. This is normal and does not impact the functionality of the clipper.

Body Cleaning and Maintenance

 
NOTE: Turn this device OFF before cleaning and maintenance.

1. After each use, it is recommended to use the brush to sweep away any remaining hair fragments on the clipper.
2. Use a soft damp cloth to clean the body of the clipper.
Note: DO NOT USE gasoline, alcohol, thinner or other corrosive chemical agents.
3. After cleaning the the body of the clipper, wipe with a dry cloth, add lubricating oil to the blade head, and store it in a dry place. It is recommended to store in the provided carrying case.


COMB ATTACHMENTS

Use Comb Attachments for trimming

The provided comb attachments can be used to extend the cutting length of the hair. It is recommended to start with the highest length comb (3/4") and work down until the desired length is achieved. To attach the comb, hold the clipper body with the blade facing upwards. gently push the comb onto the blade until it clicks into place.

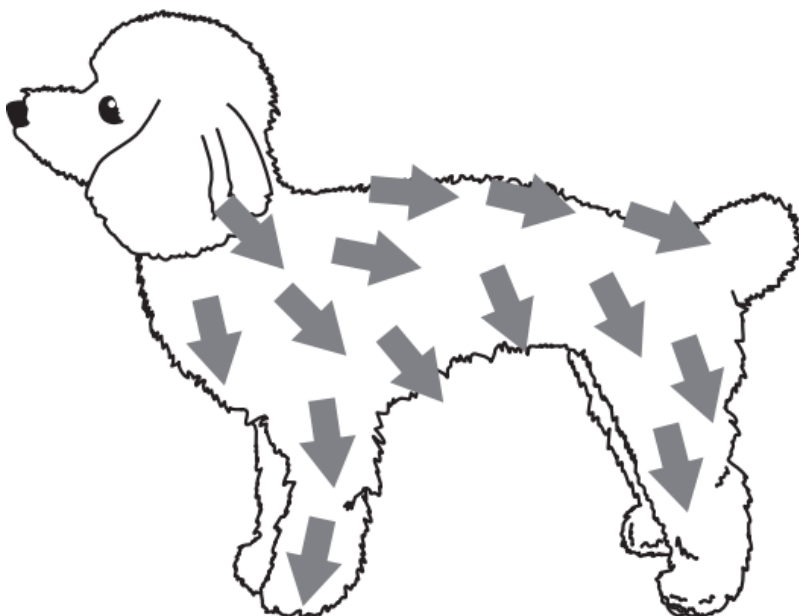

(Fig. 5)

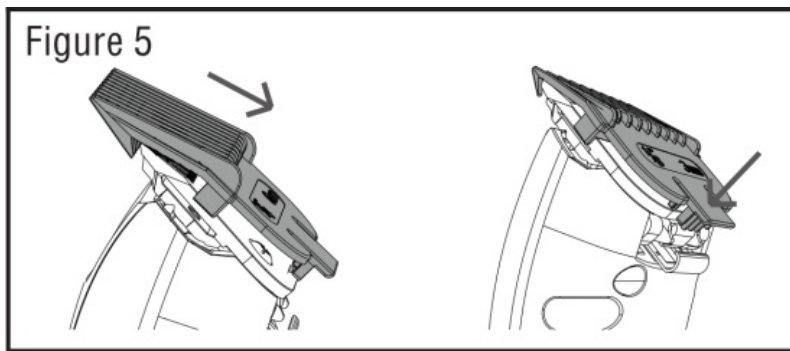 

NOTE: The clipper can be used without comb attachments but should be used with caution. When no comb attachments are used, the length of the hair will be approximately 1mm. Be sure to move slowly and do not push the blade directly on the skin to avoid injuries.

NOTE: For best results, hair should be dry when cutting. Wet hair will increase the difficulty of cutting and may reduce the sharpness and effectiveness of the blade.

FCC STATEMENT

Potential for Radio/Television interference

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver

is connected.

- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LIMITED WARRANTY

LIMITED THREE-YEAR WARRANTY

What is Covered and How Long Coverage Lasts

At KONG, we stand behind our products and quality controls. The KONG clipper (the "Product") has a limited warranty of 3 years from the original date of purchase in the United States or Canada from an authorized seller for the original purchaser against materials and/or workmanship defects, subject to the limitations set forth in this warranty.

What is Not Covered

KONG reserves the right to deny warranty requests in its sole and absolute discretion if it determines that any problem was caused by normal wear and tear (other than Product blade malfunction under normal use as noted below), misuse, accident (including spilled liquid), theft, alteration, improper or unauthorized repair, or improper storage.

Consequential, indirect, special, punitive, and incidental damages are not recoverable under this warranty, including, but not limited to, any loss of use.

Should the Product's blade malfunction under normal use, then KONG's sole and exclusive obligation will be to provide one blade replacement during the three-year warranty period.

What KONG will Do

This warranty is limited to repair or replacement on an exchange basis, as selected by KONG, in KONG's sole and absolute discretion, of the Product, which upon examination by KONG is deemed to have been defective when the Product left the factory.

KONG may also choose to refund the purchase price, less depreciation, of the Product when, in KONG's sole and absolute discretion, the situation calls for such.

If replacement is required in accordance with this warranty and the defective Product has

been discontinued or is unavailable, KONG reserves the right to select and supply a similar Product or offer full credit for the Product to the original authorized seller; otherwise the same Product will be supplied for replacement to the original authorized seller from where the original purchase was made.

How to Obtain Warranty Service

If you have any problems with the Product, please do not contact or return the Product to the original authorized seller. Instead, please can contact KONG's customer service as follows:

Website: <https://www.KONGpetcare.com>

Email: info@KONGpetcare.com

Phone: 1-[866-769-3166](tel:866-769-3166) (8:30 am – 5:00 pm EST) Monday -Friday

How State Law Relates to This Warranty

This warranty is governed by Delaware law without regard to conflicts of law principles. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO THE EXTENT PERMITTED BY LAW, THE FOREGOING WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED, OR STATUTORY, WHETHER WRITTEN OR ORAL, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR TRADE USAGE, AND THE REMEDIES OF THE PURCHASER SHALL BE LIMITED TO THOSE PROVIDED HEREIN. Some states do not allow limitations as set forth above, so the above limitation may not apply to you. The total cumulative liability to KONG, from all causes of action and all theories of liability, will be limited to and will not exceed the purchase price of the Product paid by you.

© 2024 KONG Company Products Inc, All rights reserved.

KONG® is a registered trademark of the KONG Company used under license.

Distributed by Star Elite Inc., Montreal, Canada H3B 3X9

3 year limited warranty

SEK010 – 111124

Made in China

www.kongpetcare.com

IPX5*

*Clipper Body Only



Documents / Resources

	<p>KONG SWIFTGLIDE 33010003 3 Speed Grooming Clipper Kit [pdf] Instru ction Manual</p> <p>13477, 33010003, SWIFTGLIDE 33010003 3 Speed Grooming Clipper Kit , SWIFTGLIDE 33010003, 3 Speed Grooming Clipper Kit, Grooming Clipp er Kit, Clipper Kit, Kit</p>
--	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

■ KONG

◆ 13477, 3 Speed Grooming Clipper Kit, 33010003, Clipper Kit, Grooming Clipper Kit, Kit, KONG, SWIFTGLIDE 33010003, SWIFTGLIDE 33010003 3 Speed Grooming Clipper Kit

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.