



## KONIX 110276 Wired Controller User Manual

[Home](#) » [KONIX](#) » KONIX 110276 Wired Controller User Manual

### Contents [ [hide](#) ]

- [1 KONIX 110276 Wired Controller](#)
- [2 SWITCH CONSOLE](#)
- [3 PC COMPATIBLE](#)
- [4 MAINTENANCE](#)
- [5 Regulatory compliance information](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

# KONIX

### KONIX 110276 Wired Controller



### SWITCH CONSOLE

1. Connect the Switch console stand to the TV and turn console on.
2. Connect the controller by USB connector into the switch console stand, press the A button to connect, and when it is connected, the LED indicator will be lit.

**Turbo can be set on the following buttons:**

Y,X,B,A,R, ZR, L,ZL, D-Pad up, D-Pad down, D-Pad left, and D-Pad right.

**Setting up TURBO functions**

Press and hold the Turbo button, then the button for which you want the turbo button to be active.

**Clear TURBO single function button**

Press and hold the Turbo button, then double press the button that has the turbo activated.

**Clear all buttons**

To clear all Turbo functions, press and hold the Turbo button and the – button at the same time.

**Joystick adjustment**

If you encounter problems with the Joysticks, please calibrate them as follows: Press «Home» to enter the main menu and choose « System Settings». Choose « Controllers and Sensors» and then «Calibrate Control Stick», Press «A» to enter. Now choose the Joystick you want to calibrate by simply pressing it. Press «X» to start the calibration process and execute the actions on screen.

**PC COMPATIBLE**

Directly plug the USB port to the PC console, by default it is set to X-input mode. No drivers are required on Windows, it will set up automatically.

**NOTE:**

Please enter “System Setting”, then “Controllers and Sensors” then set the “Pro Controller Wired Communication” to “ON” status

**MAINTENANCE**

- Keep away from hot or wet environments.
- Never force the USB plug into the Switch dock.
- Keep away from liquids.
- Do not try to open the controller


**Regulatory compliance information**

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

[www.konix-interactive.com](http://www.konix-interactive.com)

©2020 Konix. Innelec Multimedia – Konix, 45 rue Delizy, 93692 Pantin Cedex, FRANCE. The Konix and Unik brands and logos are trademarks of Innelec Multimedia S.A. Switch™ is a trademark of Nintendo Co., Ltd. All other trademarks are the property of their respective owners. All rights reserved. This product is not made or endorsed by Nintendo Co., Ltd. Made in China. Game console and video games not included.

## Documents / Resources

	<p><a href="#">KONIX 110276 Wired Controller</a> [pdf] User Manual 110276 Wired Controller, 110276, Wired Controller, Controller</p>
---	--