

KONIX 3879 Gaming Controller Black USB Gamepad



KONIX 3879 Gaming Controller Black USB Gamepad User Manual

[Home](#) » [KONIX](#) » KONIX 3879 Gaming Controller Black USB Gamepad User Manual 

Contents

- [1 KONIX 3879 Gaming Controller Black USB Gamepad](#)
- [2 Product Usage Instructions](#)
- [3 SWITCH CONSOLE](#)
- [4 MAINTENANCE](#)
- [5 Regulatory compliance information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

KONIX

KONIX 3879 Gaming Controller Black USB Gamepad



Specifications

- **Product Name:** Wired Controller for Switch Console
- **Compatibility:** Nintendo Switch, PC
- **Connection:** USB
- **Mode:** X-input mode for PC
- **Maintenance:** Keep away from hot or wet environments, avoid liquids, do not force the USB plug into the Switch dock, and do not attempt to open the controller

Product Usage Instructions

Connecting to the Nintendo Switch Console

1. Connect the Switch console stand to the TV and turn the console on.
2. Connect the controller by USB connector to the Switch console stand.
3. Press the A button to connect. When connected, the LED indicator will light up.

Note: For wired communication with the Pro Controller, ensure to set the Pro Controller Wired Communication to ON status in System Settings > Controllers and Sensors.

Connecting to PC

Simply plug the USB port into the PC console. The controller is set to X-input mode by default, and no additional drivers are required on Windows as it will be set up automatically.

Maintenance

Keep the controller away from hot or wet environments, and liquids, and do not attempt to open it. Avoid forcing the USB plug into the Switch dock.

Regulatory Compliance Information

- If you need to dispose of this product in the future, do not dispose of it with household waste.
- Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

FAQ

Q: Can this controller be used wirelessly?

- **A:** No, this is a wired controller that connects via USB.

Q: Is this controller compatible with other gaming consoles?

- **A:** This controller is designed for use with Nintendo Switch and PC only.

SWITCH CONSOLE

1. Connect the Switch console stand to the TV and turn the console on.
2. Connect the controller by USB connector to the switch console stand, press the A button to connect, and when it is connected, the LED indicator will be lit.

NOTE: Please enter "System Setting", then "Controllers and Sensors" then set the "Pro Controller Wired Communication" to "ON" status

Joystick adjustment

- If you encounter problems with the Joysticks, please calibrate them as follows.
- Press «Home» to enter the main menu and choose « System Settings». Choose « Controllers and Sensors» and then «Calibrate Control Stick», Press «A» to enter.
- Now choose the Joystick you want to calibrate by simply pressing it. Press «X» to start the calibration process and execute the actions on the screen.

PC COMPATIBLE

- Directly plug the USB port into the PC console, by default it is set to X-input mode. No drivers are required on Windows, it will set up automatically.


MAINTENANCE

- Keep away from hot or wet environments.
- Never force the USB plug into the Switch dock. Keep away from liquids.
- Do not try to open the controller.

Regulatory compliance information

- If at any time in the future, you need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.
- Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)
- © 2023 Konix. Innelec Multimedia – Konix, 45 rue Delizy, 93692 Pantin Cedex, FRANCE. The Konix brand is a trademark of Innelec Multimedia S.A.
- All other trade-marks are the property of their respective owners.
- Photos and illustrations are not binding.
- All rights reserved. Made in PRC.
- www.konix-interactive.com

Documents / Resources

	<p>KONIX 3879 Gaming Controller Black USB Gamepad [pdf] User Manual 3879 Gaming Controller Black USB Gamepad, 3879, Gaming Controller Black USB Gamepad, Controller Black USB Gamepad, Black USB Gamepad, USB Gamepad, Gamepad</p>
--	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.