



KONIX Wired Controller Nintendo Switch And Pc User Manual

[Home](#) » [KONIX](#) » KONIX Wired Controller Nintendo Switch And Pc User Manual 

KONIX Wired Controller Nintendo Switch And Pc



Contents

- [1 SWITCH CONSOLE](#)
- [2 PC COMPATIBLE](#)
- [3 Regulatory compliance information](#)
- [4 Customers Support](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

SWITCH CONSOLE

1. Connect the Switch console stand to the TV and turn console on.
2. Connect the controller by USB connector into the switch console stand, press the A button to connect, and when it is connected, the LED indicator will be lit.

NOTE:

Please enter "System Setting", then "Controllers and Sensors" then set the "Pro Controller Wired Communication" to "ON" status

- Joystick adjustment

If you encounter problems with the Joysticks, please calibrate them as follows:

Press «Home» to enter the main menu and choose « System Settings».

Choose « Controllers and Sensors» and then «Calibrate Control Stick», Press «A» to enter.

Now choose the Joystick you want to calibrate by simply pressing it.

Press «X» to start the calibration process and execute the actions on screen.

PC COMPATIBLE

Directly plug the USB port to the PC console, by default it is set to X-input mode.
No drivers are required on Windows, it will set up automatically.

MAINTENANCE:

Keep away from hot or wet environments.
Never force the USB plug into the Switch dock.
Keep away from liquids.
Do not try to open the controller



Regulatory compliance information

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)



©2021 Konix. Innelec Multimedia – Konix, 45 rue Delizy, 93692 Pantin Cedex, FRANCE. The Konix brands and logos are trademarks of Innelec Multimedia S.A. Switch™ is a trademark of Nintendo Co., Ltd. All other trademarks are the property of their respective owners. All rights reserved. This product is not made or endorsed by Nintendo Co., Ltd. Made in China. Game console and video games not included.

Customers Support



www.konix-interactive.com

KONIX

Documents / Resources



[KONIX Wired Controller Nintendo Switch And Pc](#) [pdf] User Manual

Wired Controller Nintendo Switch And Pc, Wired, Controller Nintendo Switch And Pc, Nintendo Switch And Pc, Switch And Pc, Pc

[Manuals+.](#)