



# KONO 84 Mechanical Keyboard User Guide

[Home](#) » [KONO](#) » KONO 84 Mechanical Keyboard User Guide

Contents [ [hide](#) ]

- 1 KONO 84 Mechanical Keyboard
- 2 Connection
- 3 RGB Backlighting
- 4 Media
- 5 Device
- 6 Other
- 7 Documents / Resources
- 8 Related Posts

**KONO**

KONO 84 Mechanical Keyboard



## Connection

Fun + _	Action
Z	Connect to Bluetooth device 1
X	Connect to Bluetooth device 2
C	Connect to Bluetooth device 3
Space	Switch to Wired Mode
Hold Fun + Z, X, or C to begin pairing for that slot.	

## RGB Backlighting

Fun + _	Action
\	Cycles between lighting modes
Backspace	Toggle Backlight On/Off
]	Increase backlight brightness
[	Decrease backlight brightness
;	Increase Animation Speed
'	Decrease Animation Speed

## Media

Fun + _	Action
F8	Play/Pause
F10	Mute Volume
F11	Lower Volume
F12	Raise Volume

## Device

Fun + _	Action
F3	Puts your device to sleep
WIN	Toggles Windows/OS key lock
F1	Decrease screen brightness
F2	Increase screen brightness
Esc	Hold for 5s for factory reset

## Other


Fun + _	Action
F7	Back (in browser
F9	Forward (in browser)
F6	Home
F4	Windows Exporer

### Warranty

Limited one-year warranty. Please contact your place of purchase for warranty support

[support@kono.store](mailto:support@kono.store)

### Documents / Resources

	<a href="#">KONO 84 Mechanical Keyboard</a> [pdf] User Guide Kono 84, Mechanical Keyboard, 84 Mechanical Keyboard
---	--