


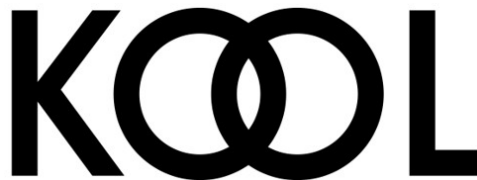

# KOOL Xbox Series X Wireless Controller Instructions

[Home](#) » [KOOL](#) » KOOL Xbox Series X Wireless Controller Instructions 




Wireless Controller for Xbox  
One and Series X and S

## Contents

- [1 Xbox Series X Wireless Controller](#)
- [2 Product application](#)
- [3 FEATURES](#)
- [4 FCC WARNING](#)
- [5 Documents / Resources](#)

## Xbox Series X Wireless Controller

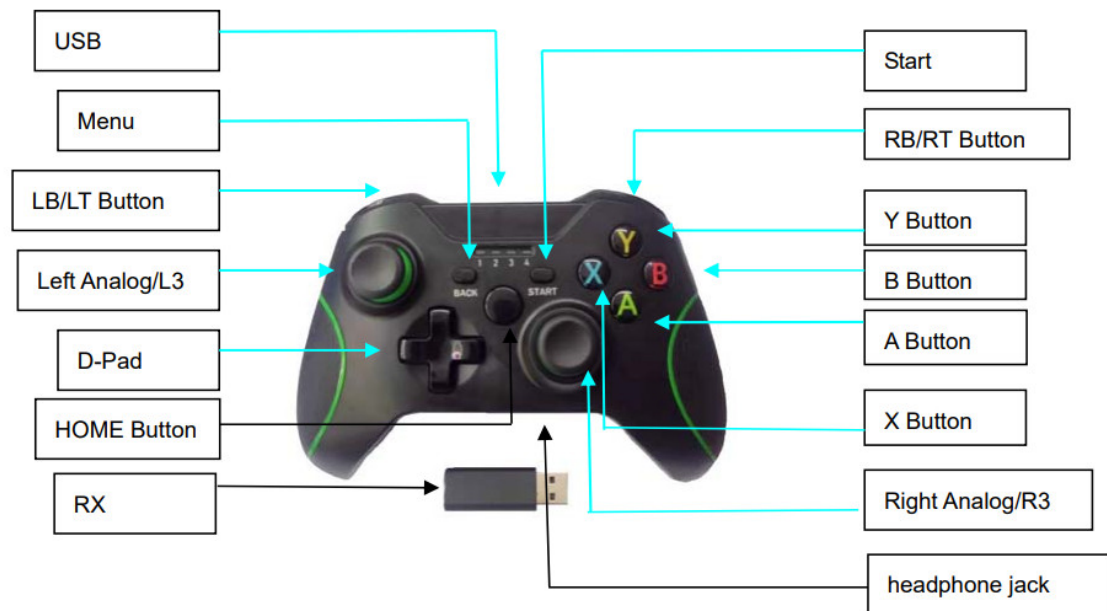

## Product application

This product belongs to XBOX ONE 2.4G controller, used for XBOX ONE console, working frequency in 2.4GHZ, remote wireless remote control, easy operation, can be applied to racing, fighting, competition and other kinds of game control, so that you can experience the immersive feeling in the XBOX ONE console game process.

## FEATURES

- The “Menu”, “View” and “Share” buttons on the handle can be quickly and easily navigated.
- This wireless controller is used on the Xbox one console, and is compatible with the PC console win10 system
- Sensitive joystick and enhanced D-pad for better accuracy
- The controller adopts the headphone jack design, which can plug in the headset to communicate with people while playing games
- Rechargeable 500mAh Li-ion battery
- The handle can be wired to the host/computer, or can be wirelessly connected to the built-in receiver for use on the host/computer
- Built-in dual motor, 256-level precision 3D rocker
- Sensitive button response, easy to control
- Up to 30ft / 10m gaming range

## PAIRING

- Connect the appropriate receiver into the console’s controller port.
- Once connected, the LED on the receiver will blink to indicate it is in search mode.
- press Start on the controller. The LED on the controller will blink as well.
- Press and hold the Sync button on the receiver.
- Release the Sync button once both the receiver and controller’s LED remain solid.

If you encounter an issue while pairing, you can reset the controller in one of two ways:

- Press and Hold Start + R for 4 seconds

- Inserting a thin metal wire (an unbent paperclip for example) into the small hole on the back of the controller. Gently press and hold until the LED stops glowing. Then restart the pairing process.

## CHARGING

When the controller's battery is low, plug the USB®-C charge cable into the controller and the USB® end into a powered charger or available port on a console. It is compatible with fast-charging plugs. The LED will remain lit when fully charged.

## FCC WARNING

**RF exposure statement** This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


**NOTE 1:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE 2:** Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# KOOL

## Documents / Resources

 <p>Wireless Controller for Xbox One and Series X and S</p> <p>The diagram shows the controller with labels for various components: Top, Back, Guide, Xbox, A, B, X, Y, LT, RT, LB, RB, L3, R3, D-Pad, Sticks, Triggers, and Buttons. It also includes a list of features and specifications.</p>	<p><a href="#">KOOL Xbox Series X Wireless Controller</a> [pdf] Instructions</p> <p>X5816, 2ARPVX5816, 2ARPVX5816, Xbox Series X, Xbox Series X Wireless Controller, Wireless Controller, Controller</p>
--	--

