 


KORG

MA-2
MULTI-FUNCTION
DIGITAL
METRONOME

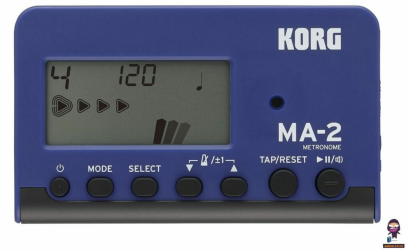

Korg MA-2 Multi-Function Digital Metronome Owner's Manual

 
[Home](#) » [KORG](#) » Korg MA-2 Multi-Function Digital Metronome Owner's Manual 

Contents

- [1 Korg MA-2 Multi-Function Digital Metronome](#)
- [2 Precautions](#)
- [3 FCC STATEMENT](#)
- [4 PRODUCT INSTRUCTIONS](#)
- [5 Specifications](#)
- [6 FREQUENTLY ASKED QUESTIONS](#)
- [7 References](#)
- [8 Related Posts](#)

KORG

Korg MA-2 Multi-Function Digital Metronome

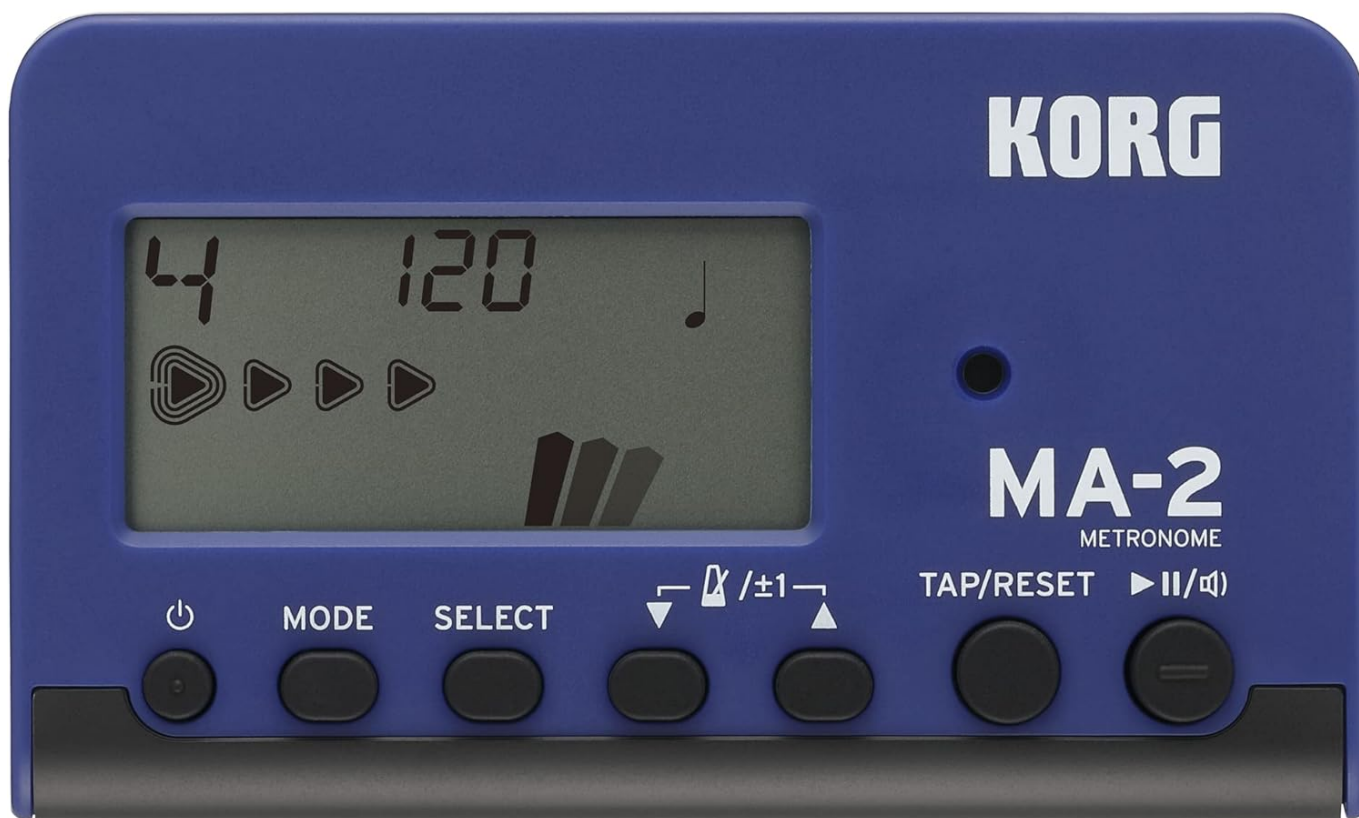

Precautions

- **Location** Using the unit in the following locations can result in a malfunction.

- In direct sunlight.
- Locations of extreme temperature or humidity.
- Excessively dusty or dirty locations.
- Locations of excessive vibration.
- Close to magnetic fields.

- **Power supply**

Be sure to turn off the power when the unit is not in use. Remove the battery in order to prevent it from leaking when the unit is not in use for extended periods.

- **Interference with other electrical devices**

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

- **Handling**

To avoid breakage, do not apply excessive force to the switches or controls.

- **Care**

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds or flammable polishes.

- **Keep this manual**

After reading this manual, please keep it for later reference.

- **Keeping foreign matter out of your equipment**

Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock. Be careful not to let metal objects get into the equipment.

SUPPLIER'S DECLARATION OF CONFORMITY (for USA)

- **Responsible Party:** KORG USA INC.
- **Address:** 316 SOUTH SERVICE ROAD, MELVILLE, NY
- **Telephone:** 1-[631-390-6500](tel:631-390-6500)
- **Equipment Type:** METRONOME
- **Model:** MA-2

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC STATEMENT

THE FCC REGULATION WARNING (for USA)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If items such as cables are included with this equipment, you must use those included items. Unauthorized changes or modifications to this system can void the user's authority to operate this equipment.

Notice regarding disposal (EU only)



■ If this symbol is shown on the product, manual, battery, or package, you must dispose of it in the correct manner to avoid harm to human health or damage to the environment.



Contact your local administrative body for details on the correct disposal method. If the battery contains heavy metals in excess of the regulated amount, a chemical symbol is displayed below the symbol on the battery or battery package.

IMPORTANT NOTICE TO CONSUMERS

This product has been manufactured according to strict specifications and voltage requirements that are applicable in the country in which it is intended that this product should be used. If you have purchased this product via the internet, through mail order, and/or via a telephone sale, you must verify that this product is intended to be used in the country in which you reside.

WARNING: Use of this product in any country other than that for which it is intended could be dangerous and

could invalidate the manufacturer's or distributor's warranty. Please also retain your receipt as proof of purchase otherwise your product may be disqualified from the manufacturer's or distributor's warranty.

 
 
All product names and company names are the trademarks or registered trademarks of their respective owners.

Thank you for purchasing the Korg METRONOME MA-2. To help you get the most out of your new instrument, please read this manual carefully.

PRODUCT INSTRUCTIONS

 
 
 
Installing the batteries (Fig. 1)

- Slide open the back cover of the MA-2, and then insert the batteries, making sure to observe the correct polarity.

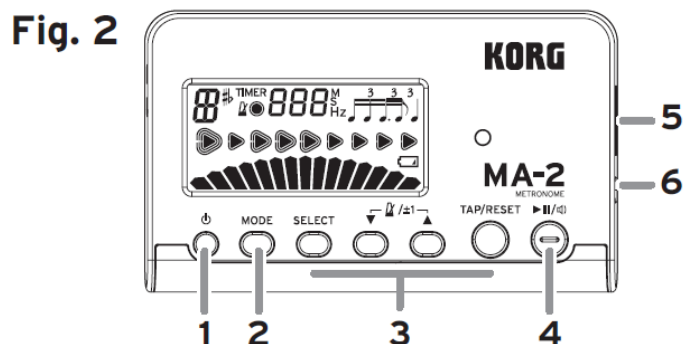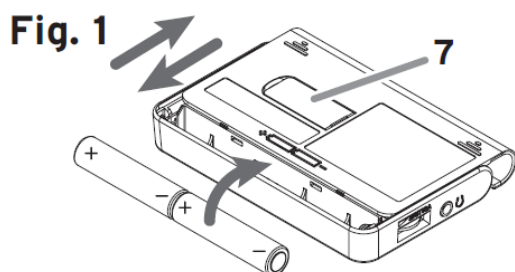

Operation (Fig. 2)

- Press the power button (1) to turn the power on.
- Press the MODE button (2) to cycle through the Metronome (Fig. 3-1), Timer (Fig. 3-2) and Sound Out (Fig. 3-3) modes.
- (| Refer to the following table for the operation of each button (3) in these modes.)
- In Metronome mode, each press of the START/STOP button (4) switches between starting and stopping the metronome.
- Adjust the volume with the VOLUME dial (5).
- Connect the headphones to the jack (6).
- Pull out the stand (7) in order to prop up the MA-2.

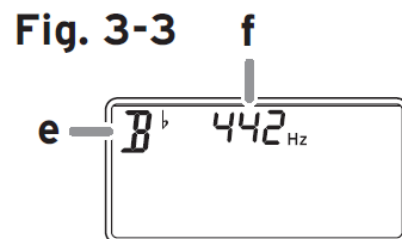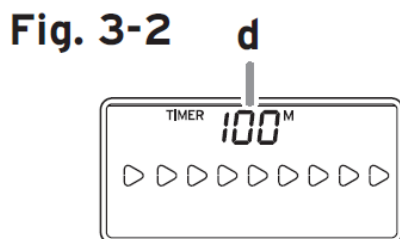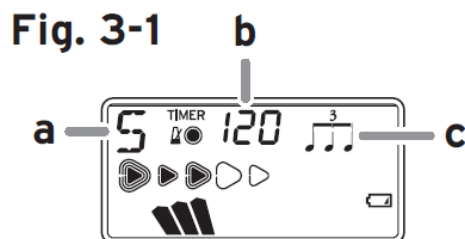
 
 


 


About Timer mode





- The timer will continue running even when the mode is changed ("TIMER" is lit).

- When the specified time has elapsed, the alarm sounds, and Metronome and Sound Out stop if running.

Specifications

- **Tempo range:** ♩ = 30–252/min (BPM)
- **Beat:** 0–9 beats
- **Rhythm:** Quarter note, eighth note, triplet ( ,  , ), sixteenth note ( ,  , )
- **Tempo accuracy:** ±0.02%
- **Power supply:** Two AAA batteries, 3V
- **Battery life** (120 tempo, 4 beats, maximum volume): Approx. 400 hours (when using alkaline batteries)/Approx. 100 hours (when using zinc-carbon batteries)
- **Auto Power-off:** Approx. 20 minutes
- **Dimensions (W x D x H):** 100mm x 60mm x 16mm/3.94" x 2.36" x 0.63"
- **Weight:** 68g/2.4 oz. (including batteries)
- **Accessories:** Owner's Manual, two AAA batteries

Specifications and appearance are subject to change without notice for improvement.

MODE	SELECT button (The selection flashes.)	 button	 button	TAP/RESET button	START/STOP button
	Metronome (Fig. 3-1)	Select tempo (b), beat (a), or rhythm (c)	Decreases the setting	Increases the setting	Inputs the tap tempo (“  ” is lit.)
Both simultaneously: Changes the tempo steps (pendulum steps when “  ” is lit)					
Timer (Fig. 3-2)	—	Decreases the set time (d: From 1 minute)	Increases the set time (d: Up to 120 minutes)	Reverts to the set time	Starts/stops the timer
Sound Out (Fig. 3-3)	Select note name (e: C4 – B4) or reference pitch (f: 410 Hz – 480 Hz)	Decreases the setting	Increases the setting	For a note name: Reverts to A For a reference pitch: A=440Hz	Turns on/off Sound Out

FREQUENTLY ASKED QUESTIONS

What is the tempo range of the Korg MA-2?

The tempo range is from 30 BPM to 252 BPM.

How many different rhythm patterns does it offer?

The MA-2 provides eight types of rhythm patterns including quarter notes, eighth notes, and triplets.

What are the methods for setting the tempo?

Tempo can be set using pendulum step, full step, or tap tempo methods.

What is the battery life of the Korg MA-2?

The metronome lasts approximately 100 hours with zinc-carbon batteries and up to 400 hours with alkaline batteries.

What type of batteries does it require?

It requires two AAA batteries for operation.

Is there an auto power-off feature?

MA-2 automatically powers off after 20 minutes of inactivity when stopped.

Does it have a timer function?

It includes a timer mode, allowing you to set practice sessions from 1 to 120 minutes in one-minute increments.

How does the display compare to previous models?

The display is 30% larger than that of the previous model, improving visibility significantly.

DOWNLOAD THE PDF LINK: [Korg MA-2 Multi-Function Digital Metronome Owner's Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.