


KRAMER RC-20TB 2-Button Contact Closure Switch User Manual

Home » Kramer » KRAMER RC-20TB 2-Button Contact Closure Switch User Manual

KRAMER RC-20TB 2-Button Contact Closure Switch User Manual



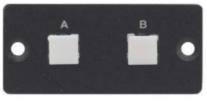

Contents

- 1 The Kramer RC-20TB 2-Button Contact Closure Switch
- 2 Documents / Resources
 - 2.1 References
- **3 Related Posts**


The Kramer RC-20TB 2-Button Contact Closure Switch

Congratulations on purchasing your Kramer RC-20TB single slot wall plate insert 2-Button Contact Closure Switch which is ideal for using as a means of remote control in boardrooms and conference rooms. It can be used with the VP-81SID step-in switcher or any other Kramer product with contact closure control.

The RC-20TB front panel has two momentary switching buttons (labeled A and B). On the rear are remote momentary contact closure terminal block connectors that connect to a remote switch terminal block connector.

Figure 1 shows the RC-20TB front panel and the pinout on the rear:


Figure 1: RC-20TB Front Panel and Rear

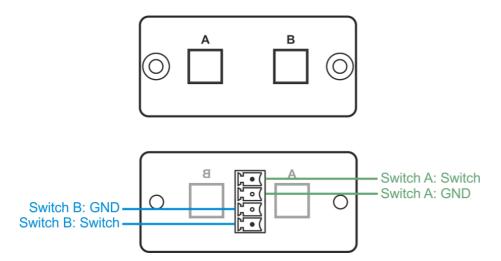

The RC-20TB can remotely switch the inputs of a machine via its remote contact closure terminal blocks. For example, you can connect the RC-20TB to the REMOTE contact closure terminal block connectors of the Kramer VS-162AVM 16×16 Audio-Video Router with Preview Monitor (download the up-to-date Kramer user manual at: www.kramerelectronics.com), to remotely switch one of two inputs to the output by momentarily pressing button A or button B, respectively.


In the example illustrated in Figure 2 two SID-H HDMI Step In Commander units are connected to RC-20TB.

Figure 2: RC-20TB connected to two SID-H Units

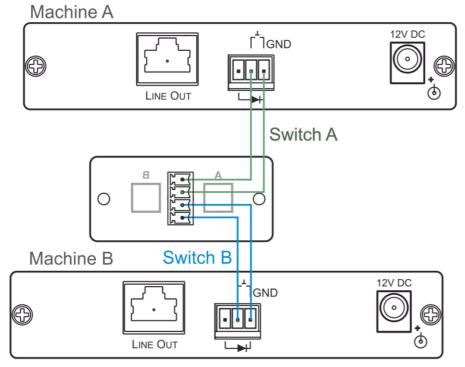

To connect the RC-20TB, as illustrated in the example in **Figure 2** and **Figure 3**, connect the remote terminal block connectors on each SID-H machine to the A and B terminal block connectors of the RC-20TB.

Figure 3: Connecting the: RC-20TB

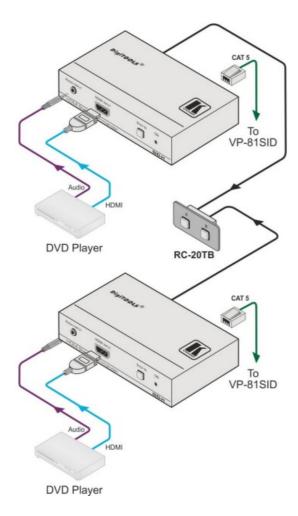

Momentarily pressing button A or B on the RC-20TB activates the STEP-IN process (allowing this machine's input to be selected on the VP-81SID) in Machine A or Machine B, respectively.

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

Web site: www.kramerelectronics.com

E-mail: info@kramerel.com



SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing



Documents / Resources



References

- SKramer | Audio Visual Solutions Kramer
- User Manual

Manuals+,