

KRAMER VM-2H2 Distribution Amplifier User Guide

Home » Kramer » KRAMER VM-2H2 Distribution Amplifier User Guide

Contents [hide

- 1 KRAMER
- 2 VM-2H2 Quick Start Guide
 - 2.1 Step 1: Check what's in the box
 - 2.2 Step 2: Mount VM-2H2
- 2.3 Step 3: Connect inputs and
- outputs
- 2.4 Step 4: Connect power
- 2.5 Step 5: Set DIP-switches
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**



KRAMER



Scan for full manual


VM-2H2 Quick Start Guide

This guide helps you install and use your VM-2H2 for the first time.

Go to www.kramerav.com/downloads/VM-2H2 to download the latest user manual and check if firmware

Step 1: Check what's in the box



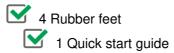


Step 2: Mount VM-2H2

Install VM-2H2 using one of the following methods:

- Attach the rubber feet and place the unit on a flat surface.
- · Fasten a bracket on each side of the unit and attach it to a flat surface

(see www.kramerav.com/downloads/VM-2H2).

· Mount the unit in a rack using the recommended rack adapter (see www.kramerav.com/product/VM-2H2).

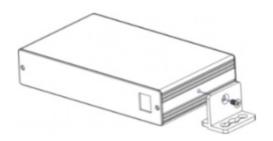




- · Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- · Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the
- Reliable earthing of rack-mounted equipment should be maintained.
- Maximum mounting height for the device is 2 meters.

Step 3: Connect inputs and outputs

Always switch OFF the power on each device before connecting it to your VM-2H2.

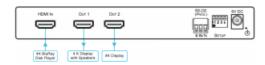



To achieve specified extension distances, use the recommended Kramer cables available at www.kramerav.com/product/VM-2H2. Using third-party cables may cause damage!

VM-2H2 Quick Start





P/N: 2900-301097QS Rev: 3

Step 4: Connect power

Connect the power cord to VM-2H2 and plug it into the mains electricity.



Safety Instructions (See www.kramerav.com for updated safety information)

Caution:

- For products with relay terminals and GPI\O ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.

Warning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.

Step 5: Set DIP-switches



Set the DIP-switches according to your needs using the following table:

	Programming mod e	HDCP Input (MAC mode)	Force RGB	Lock Default EDID
DIP	1	2	3	4
OFF (up)	Normal mode	HDCP enabled	Force RGB	EDID not locked
ON (down)	Enable programmin	HDCP disabled	Normal mode	EDID locked

WWW.KRAMERAV.COM





Documents / Resources



KRAMER VM-2H2 Distribution Amplifier [pdf] User Guide VM-2H2, Distribution Amplifier

References

- O Kramer | Audio Visual Solutions Kramer
- © Kramer | Audio Visual Solutions Kramer
- O Application Diagrams Kramer Electronics
- **O** VM-2H2

Manuals+, home

privacy