



# KRAMER VP-427UHD Receiver Switcher Scaler User Guide

[Home](#) » [Kramer](#) » **KRAMER VP-427UHD Receiver Switcher Scaler User Guide** 

## KRAMER VP-427UHD Receiver Switcher Scaler



## Contents

- 1 Important Information
- 2 Check what's in the box
- 3 Get to know your VP-427UHD
- 4 Mount VP-427UHD
- 5 Connect inputs and outputs
- 6 Connect power
- 7 Operate VP-427UHD
- 8 CUSTOMER SUPPORT
- 9 Documents / Resources
- 9.1 References

## Important Information

This guide helps you install and use your VP-427UHD for the first time.

Go to [www.kramerav.com/downloads/VP-427UHD](http://www.kramerav.com/downloads/VP-427UHD) to download the latest user manual and check if firmware upgrades are available.

## Check what's in the box

### Step 1


- VP-427UHD HDMI/HDBT Receiver/Switcher/Scaler
- 1 Bracket set
- 1 Quick start guide
- 1 Power adapter and cord
- 4 Rubber feet

## Get to know your VP-427UHD

### Step 2

| # | Feature              | Function   |
|---|----------------------|--|
| 1 | IN LED               | Lights green when the HDMI™ input is selected, blue when HDBT is selected and flashes if no input signal is detected.  |
| 2 | HDBT/HDMI Button     | Press to select the remote HDBT or the local HDMI source.  |
| 3 | HDMI™ OUT Status LED | Lights green when an HDMI acceptor is connected.   |
| 4 | HDBT LINK status LED | Lights green when an HDBT link between a transmitter and the receiver is successfully established and is active.   |
| 5 | ON LED               | Lights green when the unit is powered from the local 12V DC source and lights blue when receiving PoE via HDBT.  |
| 6 | MENU Button          | Press to enter the OSD menu. When in OSD, press to exit one level up.  |
| 7 | ENTER Button         | When not in OSD, press ENTER to view the input status on the display (the selected input, resolution and frame rate, HDCP state and aspect ratio).<br><br>When in OSD, press to select and carry out a menu item or to accept a parameter value. Press and hold together with the – or + to increase the speed of parameter-decrement or increment, respectively.<br><br>Press and hold for about 3 seconds to reset a menu parameter to its default values. |
| 8 | – Button             | Press and hold together with the + button to reset the output resolution to 1080p (default). In OSD, press to move back through the menu list or to decrement a parameter value (or press together with ENTER to speed up parameter decrement).  |


|    |  |   |
|----|--|---|
| 9  | + (also Freeze) Button                   | Press and hold together with the – button to reset the output resolution to 1080p (default). When not in OSD: press to freeze the image;<br><br>In OSD, press to move forward through the sub-menu list or to increment the parameter value (or press together with ENTER to speed up parameter increment). |
| 10 | FREEZE LED                               | Lights green when freezing the image.   |
| 11 | HDBT IN RJ-45 Connector                  | Connects to an HDBaseT transmitter.   |
| 12 | HDMI IN Connector                        | Connect to an HDMI source.  |
| 13 | HDMI OUT Connector                       | Connects to an HDMI acceptor.   |
| 14 | AUDIO OUT 5-pin Terminal Block Connector | Connect to a balanced or unbalanced stereo audio acceptor.  |
| 15 | S/PDIF digital audio output              | Connect to a digital audio acceptor.  |
| 16 | IR 3.5mm Mini Jack                       | Connect to an IR Sensor (in) or Emitter (out) to control a remote device.   |
| 17 | Ethernet RJ-45 Connector                 | Connect via a LAN to a PC to control the VP-427UHD and/or extend Ethernet signals to the HDBT transmitter via the HDBT IN port.   |
| 18 | RS-232 Terminal Block Connector          | Connects to a controller to control the VP-427UHD or to extend RS-232 signals between the VP-427UHD and the RS-232 port of the connected HDBT transmitter.  |
| 19 | 12V DC                                   | +12V DC connector for powering the unit.  |

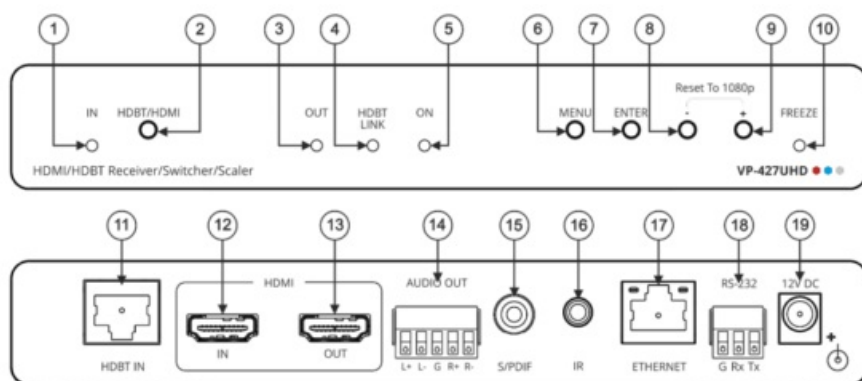


## Mount VP-427UHD

### Step 3

Install **VP-427UHD** using one of the following methods:


- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface (see [www.kramerav.com/downloads/VP-427UHD](http://www.kramerav.com/downloads/VP-427UHD)).
- Mount the unit in a rack using the recommended rack adapter (see [www.kramerav.com/product/VP-427UHD](http://www.kramerav.com/product/VP-427UHD)).
- Maximum mounting height for the device is 2 meters.
  -  Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
  - Avoid uneven mechanical loading.
  - Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
  - Reliable earthing of rack-mounted equipment should be maintained.
  - Maximum mounting height for the device is 2 meters.

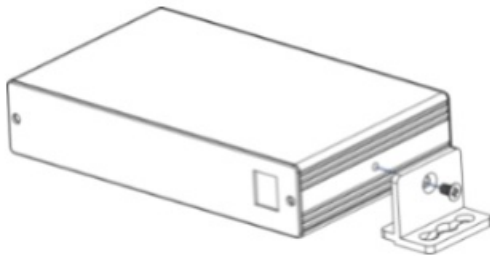

## Connect inputs and outputs


### Step 4

Always switch OFF the power on each device before connecting it to your VP-427UHD. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to the VP-427UHD.

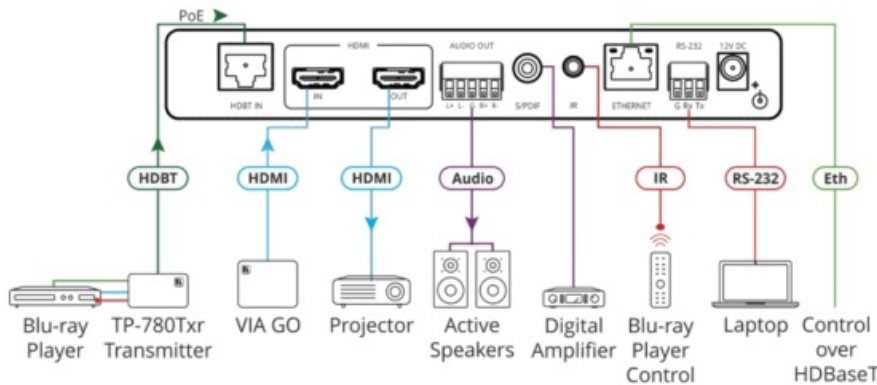


### Connect AUDIO OUT

To a balanced stereo audio acceptor:

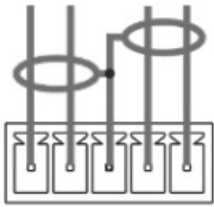

L+ L- G R+ R-

To an unbalanced stereo audio acceptor:

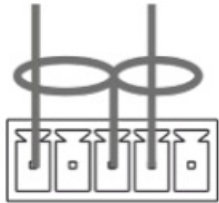

L+ L- G R+ R-



To achieve specified extension distances, use the recommended Kramer cables available at [www.kramerav.com/product/VP-427UHD](http://www.kramerav.com/product/VP-427UHD).

Using third-party cables may cause damage!

## Connect power

### Step 5

Connect the power cord to VP-427UHD and plug it into the mains electricity.

Safety Instructions (See [www.kramerav.com](http://www.kramerav.com) for updated safety information)



#### Caution:

- For products with relay terminals and GPIO ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.



#### Warning:

- Use only the LPS power supply/cord supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.

## Operate VP-427UHD

### Step 6

Operate the VP-427UHD:


- Toggle the HDBT/HDMI front panel button to select the input.
- Control device via OSD menu or remotely by RS-232 serial commands or Ethernet transmitted by a touch screen system, PC, or other serial controller.
- Control remote devices on the transmitter via RS-232, IR or Ethernet signal extension.

| RS-232 Control / Protocol 3000?          |              |                 |       |            |          |
|--|--------------|-----------------|-------|------------|----------|
| Baud Rate:                               | 115,200      | Parity:         | None  | Stop Bits: | 1        |
| Data Bits:                               | 8            | Command Format: | ASCII |            |          |
| Example: (get device model): #MODEL?<CR> |              |                 |       |            |          |
| Default Ethernet Parameters              |              |                 |       |            |          |
| IP Address:                              | 192.168.1.39 | UDP Port #:     | 50000 | Gateway:   | 0.0.0.0. |
| Subnet mask:                             | 255.255.0.0  | TCP Port #:     | 5000  |            |          |

### CUSTOMER SUPPORT



### Documents / Resources
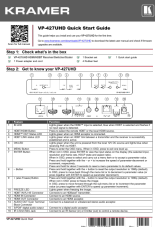
|   |   |
|---|---|
|  | <div> <a href="#">KRAMER VP-427UHD Receiver Switcher Scaler</a> [pdf] User Guide         </div> <div>           VP-427UHD Receiver Switcher Scaler, VP-427UHD, Receiver Switcher Scaler, Switcher Scaler, Scaler         </div> |
|---|---|

### References

-  [Kramer | Audio-Visual Solutions and Experiences](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.