



KREAFUNK aFUNK Bluetooth Speaker Instruction Manual


[Home](#) » [KREAFUNK](#) » KREAFUNK aFUNK Bluetooth Speaker Instruction Manual 

KREAFUNK aFUNK Bluetooth Speaker
Instruction Manual

aFUNK

Bluetooth speaker

Operation manual

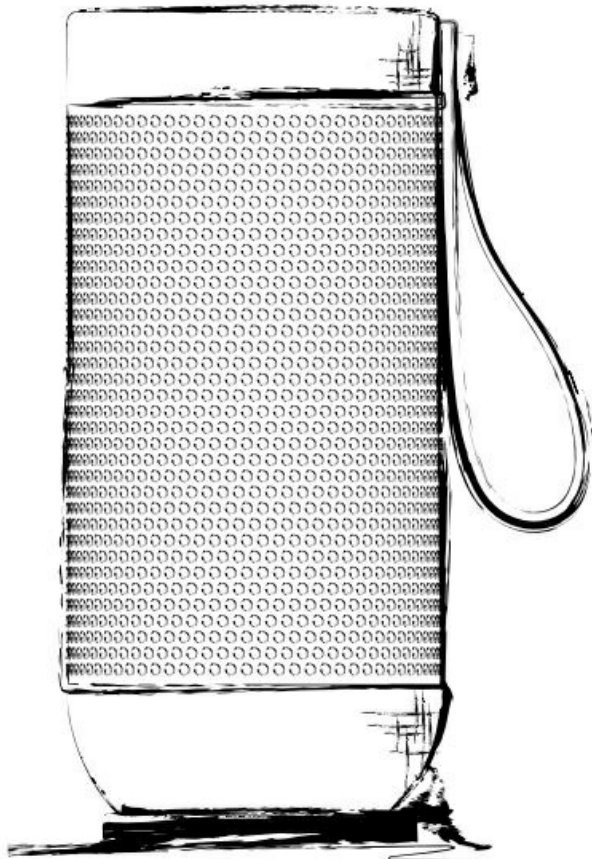

**KREA
FUNK
EST.
2011**

KREAFUNK
kreafunk.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at: www.kreafunk.com/declaration-of-conformity/
FCC-ID: 2ACVC-AFUNK



CE FCC

Contents

- 1 PRECAUTIONS**
- 2 ACCESSORIES**
- 3 PRODUCT OVERVIEW**
- 4 FUNCTIONS**
- 5 TROUBLESHOOTING**
- 6 SPECIFICATIONS**
- 7 Documents / Resources**
 - 7.1 References**

PRECAUTIONS


1. It is completely safe and normal that the speaker gets hot while playing or charging.
2. Please turn off the speaker and disconnect it from all audio devices before cleaning. Do not use alcohol, benzene or other chemicals to clean the speaker. You should only wipe off the speaker with a dry or hard twisted cloth.
3. Do not throw the speaker or step on it. Make sure to place it on a stable surface when in use.
4. Do not place the speaker close to extremely cold or hot objects. This may damage the speaker.
5. Please use the original accessories provided by us.
6. Do not disassemble the speaker without authorization.
7. Keep the speaker away from water.

ACCESSORIES

- 1 x USB charging cable
- 1 x operation manual

PRODUCT OVERVIEW

1. Volume down / Previous track
2. Volume up / Next track
3. Play / Pause
4. Power On / Off
5. TWS pairing
6. Charging Port
7. Reset
8. Indicator Light
9. Microphone

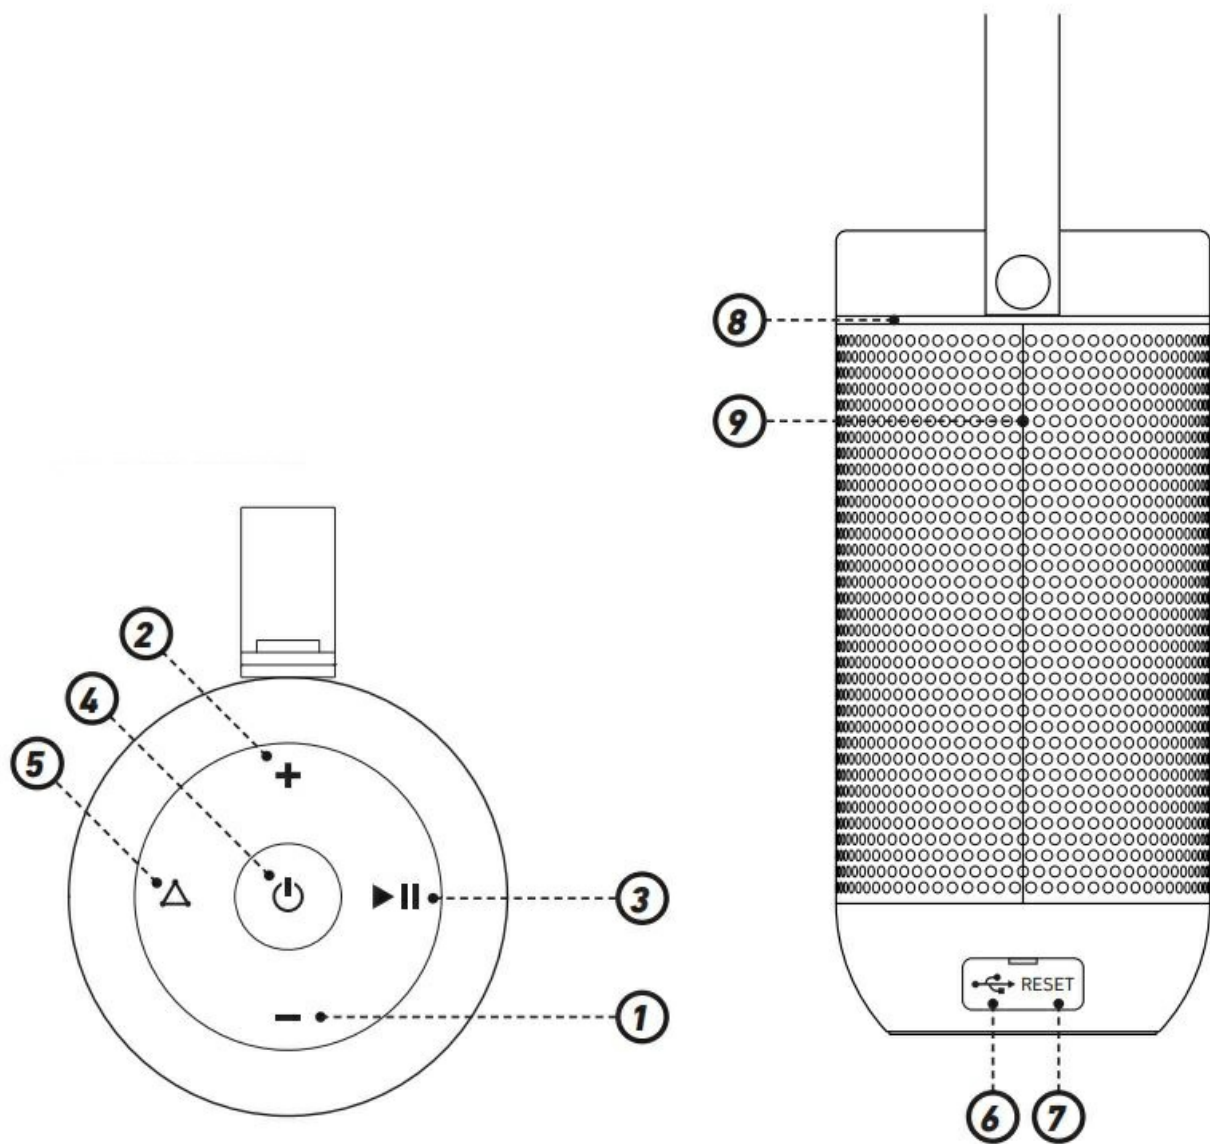

FUNCTIONS

1. Charging aFUNK

Please fully charge the speaker for about 7-8 hours before using it the first time. The indicator light is red when charging, and it will turn to green after the speaker is fully charged. Use the original charging cable to connect aFUNK to the power adapter (DC 5V/1A) for charging.

2. Power On/Off

Long press the power button until the blue indicator light flashes.

Now release the button, and the speaker will turn on with a prompt tone.

3. Bluetooth pairing

After having turned on the speaker, the blue indicator light keeps flashing quickly. Now, open your device's Bluetooth function, search for and choose "aFUNK". After successfully pairing, you will hear the "di-di" prompt tone. Now you can play music from your device on aFUNK.

4. Automatic connection

After having paired the speaker with your phone, tablet or other Bluetooth devices once, the speaker will automatically pair your device(s) again.

5. After a successfully pairing, the blue light flashes slowly, and you can play music or video via the speaker, and

you can check the battery level on your phone.

6. When you are playing music via Bluetooth, short press + for next track, long press + to increase the volume.
7. When you are playing music via Bluetooth, short press – for the previous track, long press – to decrease the volume.
8. When the speaker is connected with an iOS device the volume control is synchronized.
9. After a successful pairing short press ►|| to play and pause.
10. Answer/reject/finish calls If you receive a phone call while connected to the speaker short press the ►|| button to answer the call through the speaker. Press the ►|| button for 2 seconds to reject the call. If you want to finish an answered call, short press the ►|| button to end it.

Redial: Double press the ►|| button, and your phone will redial the last dialled number.

11. Automatic power off

The speaker will turn off after 10 minutes to save battery power in the following situations:

- The speaker is not connected correctly to a device
- The device is out of transmission range
- The Bluetooth is turned off on your device(s)

12. Pair with another device

- Method A: Turn off device A's Bluetooth function. You will hear the "di-di" prompt tone and the blue Indicator light will turn to flash quickly. Then device B can search for aFUNK and choose it to make a new pairing.
- Method B: Long press the play/pause button for 3 seconds until you hear the "di – di" prompt tone. The blue indicator light will turn to flash quickly. This means that the device B can search for aFUNK and choose it to make a new pairing.

13. Clear paired information The speaker can remember up to 8 device's pairing information, if you need to clear these information, turn on the speaker, and long press the play / pause button for 6 seconds until you hear the "di-di" prompt tone and the pairing information list is cleared.

14. TWS connection

(True Wireless Stereo)

Turn on the two aFUNK speakers. Do not pair them with your phone. First long press "△" button on each speaker to set them into the TWS pairing mode, and the blue indicator flashes twice with "di-di" prompt tone after successful pairing. Now open the Bluetooth on your phone or other device to connect one of the aFUNK to play music.

TROUBLESHOOTING

1. aFUNK appears on the phone's Bluetooth device list but fails to connect.

Reason A:

The speaker is not in pairing mode.

Solution: Long press the ►|| button for about 3 seconds to set it to pairing mode. When the blue indicator light flashes fast choose 'aFUNK' to pair.

Reason B:

The speaker's paired information has been cleared.

Solution: Delete aFUNK from your phone. Then search for the aFUNK and choose to pair again.

2. Your smartphone could not search for the aFUNK

Reason: The speaker is not in pairing mode.

Solution: Long press the ►|| button for about 3 seconds to set it into pairing mode. When the blue indicator light

flashes, choose “aFUNK” to pair.

3. The charging time is too long

Reason: The adapter’s power output is too low, and the charging cable’s consumption is too high.

Solution: Please choose an adapter with an output not less than DC 5V/1A and use the original charging cable

SPECIFICATIONS

Bluetooth: CSR 4.2

Output power: 2 x 6W

Driver Unit: 2 x 40mm

Frequency response: 90Hz~20kHz

RATED IMP: 4 Ω

S/N: 80 dB \pm 2 dB

S/N Ration: \geq 80dB

Distortion: \leq 0.3%

Input power: USB 5V/1A

Subwoofers: 2 pieces

Connecting function: TWS (True
Wireless Stereo)

Bluetooth range: 10m

Water resistance: IP65

Playtime: Up to 20 hours

Dimension: H150.5xD70mm

Bluetooth solution: CSR4.2 + TWS

Voltage input: DC5V/1A


Battery: Lithium 3.7V/4400 mAh

Product Weight: 400g



KREAFUNK
kreatfunk.com

Documents / Resources

 <p>aFUNK Bluetooth Speaker</p> <p>KREA FUNK EST. 2011</p>	<p>KREAFUNK aFUNK Bluetooth Speaker [pdf] Instruction Manual aFUNK Bluetooth Speaker, aFUNK, Bluetooth Speaker, Speaker</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.