



KROM Kayros RGB Advanced Wireless Gamepad User Manual

[Home](#) » [KROM](#) » KROM Kayros RGB Advanced Wireless Gamepad User Manual 

Contents

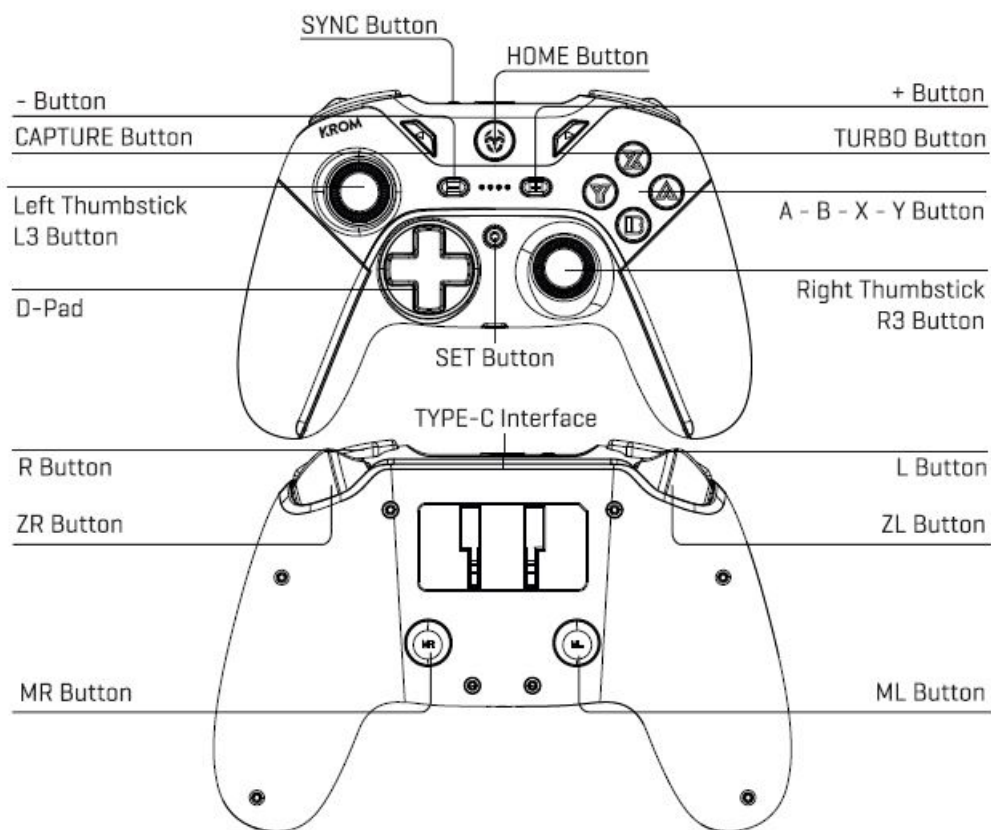
- 1 KROM Kayros RGB Advanced Wireless Gamepad
- 2 DEFAULT FUNCTIONS & ELEMENTS
- 3 PAIRING AND CONNECTING THE GAMEPAD
- 4 PC mode [X-Input]
- 5 EXTRA BUTTONS & MAPPING FUNCTION
- 6 Reconnect
- 7 Vibration levels
- 8 RGB settings
- 9 Macros settings
- 10 Restore factory settings
- 11 Documents / Resources
- 12 Related Posts

KROM

KROM Kayros RGB Advanced Wireless Gamepad



DEFAULT FUNCTIONS & ELEMENTS



PAIRING AND CONNECTING THE GAMEPAD

Nintendo Switch™ and PC Wireless mode:

1. With the controller in OFF. press and hold the SYNC button for 3 seconds till the IJ LEDS flash, now the gamepad is in pairing mode.
2. Search for devices on your console settings or PC bluetooth settings.

3. The gamepad should connect automatically.

Android [v.10 and above) and iOS (v13.11 and above) mode:

1. With the controller in OFF, hold SYNC+ X buttons together for 2 seconds till the LEDs flash quickly, now the gamepad is in pairing mode.
2. Search for "Xbox One Controller" devices on your Smartphone Bluetooth settings.
3. Connect to gamepad, LED, 2 & 3 will remain light up after successful connection.

Note: Only games that supports PS4/Xbox One controllers are compatible.

PC mode [X-Input)

Wireless connection:

1. With the controller in OFF, hold SYNC+ Y buttons together for 2 seconds till the LEDs flash quickly,
2. Search in your PC Bluetooth settings for the gamepad and pair both devices.

Note: In Wireless mode the triggers don't work as analogic.

Wired connection:

1. With the controller in OFF, hold R3 button and connect the controller to PC via USB cable.
2. Connect the gamepad, LED will show the player assigned and remain ON after connected.

EXTRA BUTTONS & MAPPING FUNCTION

Turbo and Auto-Fire mode:

Buttons A, B, X, Y, Left and Right are compatible with Turbo and Auto-Fire functions.

Enable Turbo and Auto-Fire:

Hold the TURBO button and press any of the buttons above to set the Turbo function, if you also want to set the Auto-Fire press the button selected once more while still holding the TURBO button. LED should keep blinking if Turbo/Auto-Fire set successful.

Disable Turbo and Auto-Fire:

Turn OFF the TURBO button. Press and hold the TURBO then press the previously selected button twice. To reset all Turbo and Auto-fire buttons, press and hold TURBO and – buttons.

Setting the speed for Turbo and Auto-fire Button:

Press and hold the previously selected button.

- To increase speed, tilt the right analog stick up.
- To decrease speed, tilt the right analog stick down.

There are 3 levels of speed: 5 times per second, 12 times per second and 20 times per second. The default level

is 12 times per second.

Reconnect

Press HOME button 1 second for wake up the gamepad, it will search and pair to the last device connected.

Vibration levels

The gamepad has 4 levels of vibration: none, weak, medium and strong **To adjust the vibration level:**

1. Connect the gamepad successfully to your device.
2. Press and hold TURBO button and press+ button to increase or – to decrease vibration.

RGB settings

- **Turn ON/OFF LEDs:**
 - Hold LI + RI buttons for 5 seconds.
- **Brightness level:**
 - Hold SET button+ □PAD LEFT or RIGHT to adjust it.

There are two groups of LEDs:

- **Group 1: ABXY+Home+Left Thumbstick**
 - **LED mode:**
 - Hold SET button and press □PAD UP or DOWN to switch between modes.
- **Group 2: LED Stripe**
 - **LED mode:**
 - Hold SET button and press + or – button to switch between modes.

Macros settings

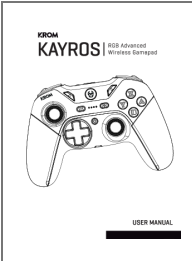
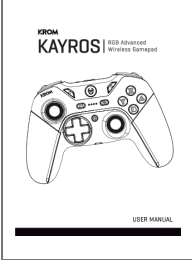
The buttons ML and MR on the back of the gamepad can be remapped with macros.

1. When the gamepad is ON, press and hold ML or MR for 5 seconds, LED2 and LED3 will be flashing, macro mode is ON
2. Press any sequence of the following buttons A/B/X/Y/L/ZL/R/ZR/UP/DOWN/LEFT/RIGHT, then press again ML or MR, and the LED1 will be always on.
3. To clear any macro previously recorded, press and hold the ML or MR button for 8 seconds, LED1 and LED4 will be flashing, then release the ML or MR button.

Restore factory settings

1. Press HOME for 10 seconds.

Documents / Resources

 <p>KROM KAYROS RGB Advanced Wireless Gamepad</p> <p>USER MANUAL</p>	<p>KROM Kayros RGB Advanced Wireless Gamepad [pdf] User Manual</p> <p>Kayros RGB Advanced Wireless Gamepad, Kayros, RGB Advanced Wireless Gamepad, Advanced Wireless Gamepad, Wireless Gamepad, Gamepad</p>
 <p>KROM KAYROS RGB Advanced Wireless Gamepad</p> <p>USER MANUAL</p>	<p>KROM KAYROS RGB Advanced Wireless Gamepad [pdf] User Manual</p> <p>KAYROS RGB Advanced Wireless Gamepad, KAYROS, RGB Advanced Wireless Gamepad, RGB Advanced Gamepad, Wireless Gamepad, Gamepad</p>

[Manuals+.](#)