



KROM KENZO Advanced Wireless Gamepad User Manual

[Home](#) » [KROM](#) » KROM KENZO Advanced Wireless Gamepad User Manual 

Contents


- [1 KROM KENZO Advanced Wireless Gamepad](#)
- [2 Default Function And Element](#)
- [3 SPECIFICATIONS](#)
- [4 PAIRING AND OTHER FUNCTIONS](#)
 - [4.1 Wireless Pairing instructions](#)
 - [4.2 Wired instructions](#)
 - [4.3 Turbo function](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

KROM

KROM KENZO Advanced Wireless Gamepad



Default Function And Element

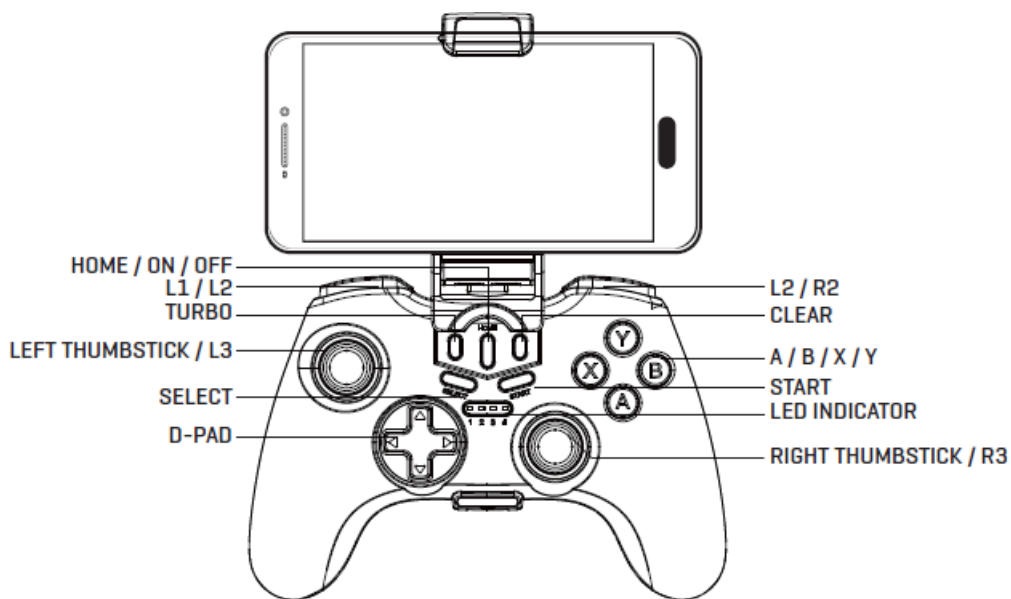

SPECIFICATIONS

1. Krom Kenzo supports Android / IOS, tablets, smart TVs, Switch™, PS4™, PS3™ in wireless connection; Windows™ 7/8/10 in PC, Switch™ and PS3™ in wired connection.
2. The phone telescopic stand allow phones up to 75 mm wide.
3. The battery has a working life of 15 hours and 30 days in Stand By when fully charged.
4. The battery capacity is 400 mAh.
5. Bluetooth 5.0; max transmission distance 8m.

* Due to the official game platform system or software upgrades, source code changes and others third part changes, some games compatibility with the gamepad can be lost or present issues when playing.

** Not all mobile phone games allows to be played with gamepad due to code limitation or consider it as cheating,

please keep in mind and inform about the games you want to play before.

PAIRING AND OTHER FUNCTIONS

Wireless Pairing instructions

PAIRING MODE (PRESS FOR 2 SECONDS)	ANDROID		IOS	SWITCH™	PS3™ PS4™
	ANDROID V3	ANDROID	IOS MFI	SWITCH™	PS3™ PS4™
	A + HOME	X + HOME	B + HOME	R2 + HOME	SEE NOTES
INDICATOR	LED 1	LED 3	LED 2	AUTO	LED 2
NOTES	DONT SUPPORT GAMEPAD & SCREEN TOUCH AT THE SAME TIME				PLUG WITH USB THEN PRESS HOME AND UNPLUG USB


Wired instructions

1. Plug the Gamepad via USB into the device.
2. The device will automatically detect and configure the gamepad.
3. The LED indicator will remain on.

Turbo function

1. Turbo functions are available for A, B, X, Y, L1, R1, L2, R2 buttons.
2. Press and hold the desired button & then light press TURBO button to turn on TURBO mode.
3. Press and hold the desired button & then light press CLEAR button to turn off TURBO mode.
4. Turbo buttons have no memory and will be cleared everytime the gamepad turns off or sleeps.

Documents / Resources

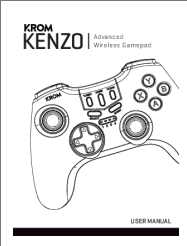	KROM KENZO Advanced Wireless Gamepad [pdf] User Manual KENZO Advanced Wireless Gamepad, KENZO, KENZO Gamepad, Advanced Wireless Gamepad, Wireless Gamepad, Gamepad
---	---