

Kruger&Matz
KM0828 Analog AM
Radio



Kruger and Matz KM0828 Analog AM Radio Owner's Manual

[Home](#) » [Kruger and Matz](#) » Kruger and Matz KM0828 Analog AM Radio Owner's Manual 

Contents

- [1 Kruger and Matz KM0828 Analog AM Radio](#)
- [2 Product Usage Instructions](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 PRODUCT DESCRIPTION](#)
- [5 OPERATION](#)
- [6 SPECIFICATION](#)
- [7 Correct Disposal of This Product](#)
- [8 FAQs](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

Kruger&Matz

Kruger and Matz KM0828 Analog AM Radio



Specifications

- Speaker
- Antenna
- Frequency knob
- ON/OFF/Band switch
- Volume knob

Product Usage Instructions

Safety Instructions

1. Read the entire instruction manual before starting installation and assembly. Keep it for future reference.
2. Protect the device from humidity, water, and other liquids.
3. Ensure the voltage indicated on the appliance matches the power supply socket.
4. Avoid heat sources and extreme temperatures.
5. Clean the device with a soft, slightly damp cloth without abrasive agents.
6. Do not disassemble the device. Contact an authorized service point for repairs.

Product Description

The Analog AM/FM radio KM0828 features a speaker, antenna, frequency knob, ON/OFF/Band switch, and volume knob.

Operation

1. Plug the power cable into the radio's power socket and then into a mains socket.
2. Unfold the antenna.
3. Set the ON/OFF switch to AM or FM band.
4. Use the frequency knob to adjust the frequency.

5. Adjust the volume level using the volume knob.


SAFETY INSTRUCTIONS

Read the entire instruction manual before you start installation and assembly, and keep it for future reference.

1. Protect this device from humidity, water, and other liquids.
2. Before connecting the device to the power supply socket, make sure the voltage indicated on the appliance corresponds to the voltage in the power supply socket.
3. Protect the device from heat sources and extreme temperatures.
4. Clean the device with a soft, slightly damp cloth, without abrasive agents.
5. Never disassemble this device. In case of damage, contact an authorized service point for repair.

PRODUCT DESCRIPTION

1. Speaker
2. Antenna
3. Frequency knob
4. ON/OFF/Band switch
5. Volume knob

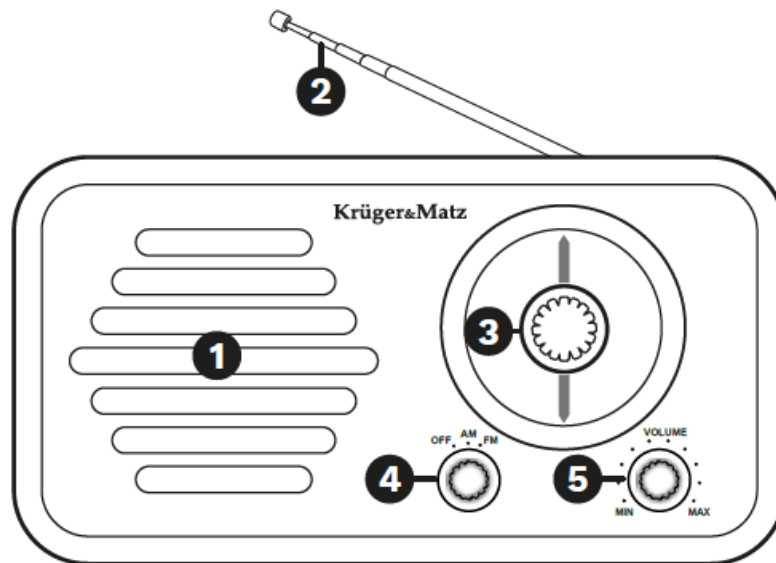

OPERATION

1. Plug the power cable into the power socket of the radio, then plug it into the mains socket.
2. Unfold the antenna.
3. Set the ON/OFF switch to AM or FM band.
4. Use the frequency knob to set the frequency.
5. Use the volume knob to adjust the volume level.

SPECIFICATION

- Telescopic antenna
- Radio frequency:
 - FM: 87,5 – 108 MHz
 - AM: 530 – 1600 kHz
- Speaker: 4 Ohm / 5 W
- AC power supply: 230 V; 50 Hz
- Dimensions: 233 x 125 x 44 mm
- Weight: 1,4 kg

Correct Disposal of This Product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Made in China for Lechpol Electronics Leszek Sp.k., ul. Garwolińska 1, 08-400 Miętne.

SCAN QR CODE



Krüger&Matz is a registered trademark

FAQs

- **Q: How do I clean the device?**
A: Clean the device with a soft, slightly damp cloth without using abrasive agents.
- **Q: What should I do in case of damage?**
A: Do not attempt to disassemble the device. Contact an authorized service point for repair.
- **Q: How do I set the frequency on the radio?**
A: Use the frequency knob to adjust the frequency according to your preference.

Documents / Resources

<div><div>KrügersMatz</div><div>Analog AM/FM radio KM0828</div><div><div>BEDEIENUNGSANLEITUNG</div><div>OWNER'S MANUAL</div><div>INSTRUCȚIA DEBUTULUI</div><div>MANUAL DE UTILIZARE</div></div></div>	<div>Kruger and Matz KM0828 Analog AM Radio [pdf] Owner's Manual</div> <div>KM0828, KM0827, KM0828 Analog AM Radio, KM0828, Analog AM Radio, AM Radio, Radio</div>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.