

**Krüger&Matz  
KM1102-15  
Digital  
Photo  
Frame**



# Kruger and Matz KM1102-15 Digital Photo Frame Owner's Manual

[Home](#) » [Kruger and Matz](#) » Kruger and Matz KM1102-15 Digital Photo Frame Owner's Manual 

## Contents

- [1 Kruger and Matz KM1102-15 Digital Photo Frame](#)
- [2 Product Specifications](#)
- [3 FAQ](#)
- [4 SAFETY INSTRUCTIONS](#)
- [5 PRODUCT DESCRIPTION](#)
- [6 OPERATION](#)
- [7 Sharing photos](#)
- [8 SPECIFICATION](#)
- [9 Disposal](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

**Krüger&Matz**

**Kruger and Matz KM1102-15 Digital Photo Frame**



## Product Specifications

- **Model:** KM1102-15
- **Display Type:** Digital
- **Wireless Connectivity:** Wi-Fi
- **Memory Card Slot:** MicroSD
- **USB Port:** USB-C
- **Power Input:** Power adapter

## FAQ

### Frequently Asked Questions

- **Q:** How do I connect the digital photo frame to Wi-Fi?
  - **A:** During the initial setup, you will have the option to connect to a Wi-Fi network. Follow the on-screen instructions to complete this process.
- **Q:** Can I download additional apps on this digital photo frame?
  - **A:** The Frameo app can be downloaded by scanning the provided QR code. At this time, additional app downloads are not supported.

## Disclaimer


All the information in this manual are in accordance with the technical condition at the time of printing. Producer reserves the rights to errors and misprints.

## SAFETY INSTRUCTIONS

Read this instruction manual and keep it for future reference.

1. Protect this device from water, humidity and other liquids. Avoid using/storing it in extreme temperatures. Do not expose it to direct sunlight and other sources of heat.
2. Keep the device out of the reach of children.
3. Device for indoor use only.
4. Do not attempt to repair this device yourself. In case of damage, contact authorized service point for check-up or repair.
5. Before connecting the device to power supply socket, make sure the voltage indicated on the device corresponds to the voltage in the power supply socket.
6. This appliance may be used by children who are above 8 years old and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised and guided by a person who is responsible for their safety in a cautious manner for all the safety precautions being understood and followed. Children should be supervised to ensure that they do not play with the appliance. Children should not perform cleaning and servicing of the device unsupervised.
7. Always disconnect the product from the power source before cleaning.
8. Clean this device with a soft, slightly damp cloth. Do not use any chemical agents to clean this device.

## PRODUCT DESCRIPTION

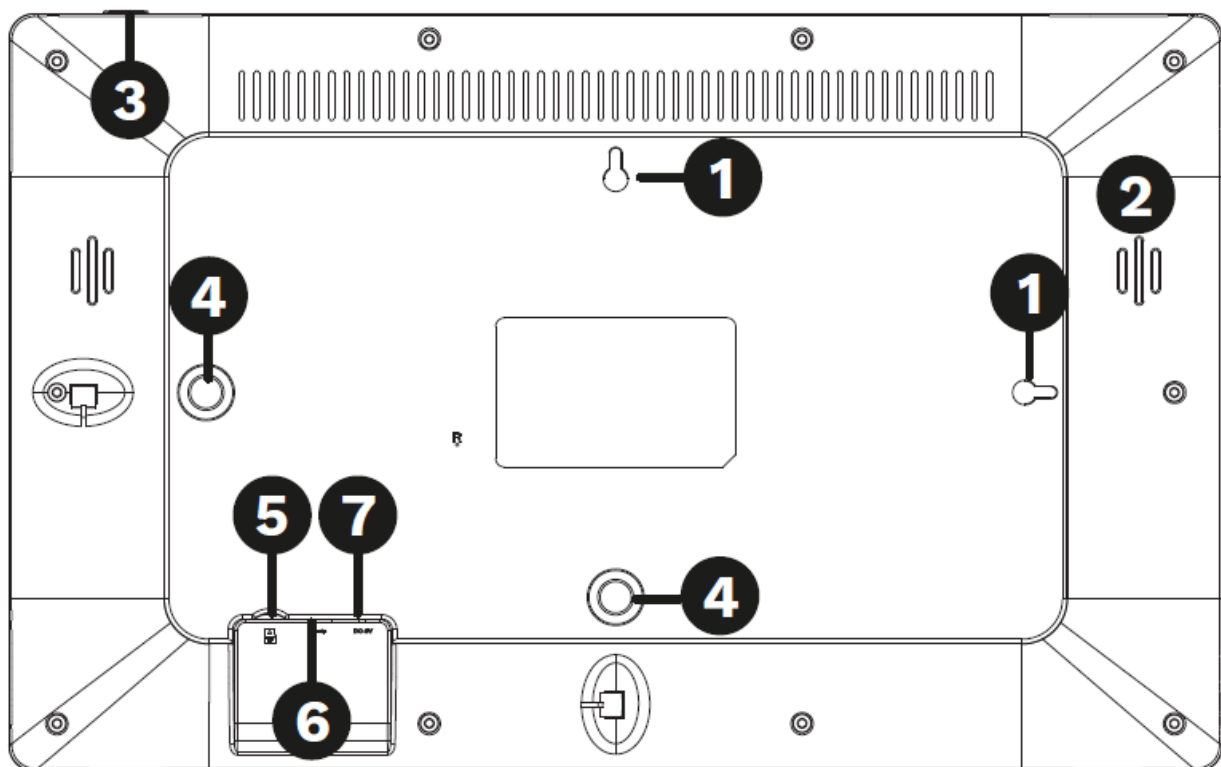

1. Wall mounting bracket
2. Speaker
3. Power button
4. Stand bracket
5. microSD card slot
6. USB-C socket

## 7. Power adapter input socket

# OPERATION

## Connecting

- Connect the power adapter plug to the power input on the device.
- Plug the adapter to mains socket.

## Turning on and off

- The device will turn on automatically after plugging to connected power adapter.
- To turn off the device, press and hold the power button and press the Turn off button. Attention: do not power off the device by disconnecting the power adapter input.

## Initial configuration

After connecting the power to the frame for the first time, the initialization wizard will be shown.

1. Select the language and press the Next button.
2. Connect with the Wi-Fi network (you can skip this step, however it is recommended to download the newest updates).
3. Select the correct time zone and press the Next button.
4. If an update is available, press the Download and install button and wait for the update to install.
5. Input your username and the frame name. Press the Next button.
6. Read information about photo sharing. Press the Finish button to finish configuration wizard.

## Sharing photos

### With a memory card


1. Insert the microSD card to the memory card slot (with pins facing the screen).
2. The device will display notification about detecting a memory card. Select the Import option.
3. Select pictures and press the Import button (in the top right corner).
4. After finished importing, the pictures will be shown on the display.

### With the Frameo app

Scan this QR code to download the Frameo app:



1. When running the app for the first time, the app will ask for username (this username will be shown on the friends list on the frame).
2. After finished configuration, the main screen of the app will be shown.
3. In the app, press the Add friend button.
4. In the frame, press the Add friend button. Input the code from the frame in the app.
5. After a few seconds, the app will be paired with the frame. From the photos list in the app, select a photo to export to the frame (to select multiple photos, press and hold one photo, and start selecting other photos).
6. Press the Transfer button. Select the target frame, input optional description and press the Next button.
7. Drag the circle to select the center part. Press the Transfer button. After a few seconds the photo will be transferred and shown in the frame.

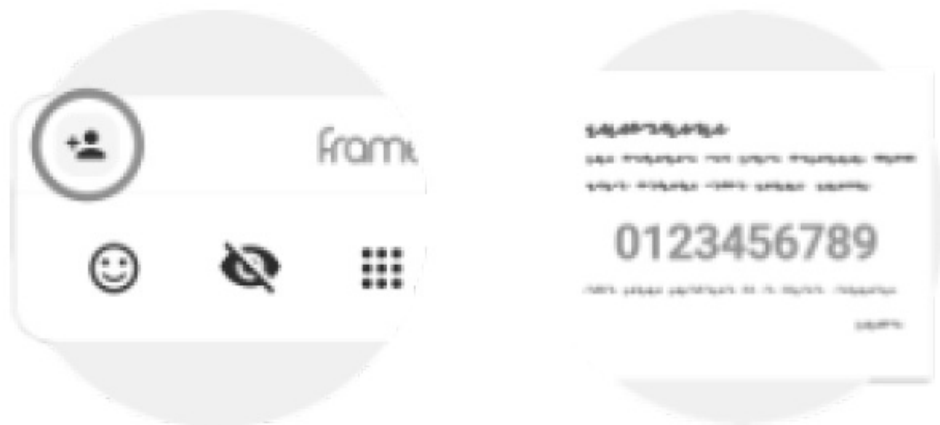

### Attention

- the app will ask for permission to read files on the phone. This permission must be granted to use the app.

### Adding reactions

Reactions can only be added to pictures sent from the Frameo app.

1. Tap on the picture and select React.
2. Select a reaction. Notification about the reaction will be sent to the Frameo app.

### Photos management

1. Open the main menu.
2. Go to the Picture management menu.
3. The menu allows for hiding, deleting and managing the pictures (import and export).

### Slideshow settings

1. Open the main menu.
2. Go to the Slideshow menu.
3. The menu allows for changing the slideshow settings.

## SPECIFICATION

### DISPLAY

- **Size:** 15,6" / IPS
- **Resolution:** 1920 x 1080 px
- **Aspect ratio:** 16:9
- **Touchpanel:** 5 point touch

### SYSTEM AND PARAMETERS

- **Operating system:** Android 6.1
- **CPU:** Rockchip RK3128Quad core
- **RAM:** 1 GB
- **Internal memory:** 16 GB
- **Maximum capacity of memory card:** 32 GB
- USB-C port
- Mono speaker
- **Wi-Fi:** 802.11 b/g/n (2,4 GHz)
- **Power supply:** DC 5 V / 3 A

### PHYSICAL PARAMETERS

- **Power supply:** 100 – 240 V AC; 50/60 Hz
- **Dimensions:** 435 x 284 x 28 mm
- **Weight:** 1653 g
- **In set:** stand, power supply, owner's manual

### Radio waves specification

Radio	Frequency	Max. output power
Wi-Fi	2412-2472 MHz	15,82 dBm

Lechpol Electronics Leszek Sp.k. hereby declares that digital photo frame KM1100 is consistent with directive 2014/53/UE.

Full text of the EU Declaration of Conformity is available at following Internet address: [www.lechpol.pl](http://www.lechpol.pl).

### Disposal

#### Correct Disposal of This Product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)



■ This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Made in China for Lechpol Electronics Leszek Sp.k., ul. Garwolińska 1, 08-400 Miętne.



## Scan



Krüger&Matz is a registered trademark.

## Documents / Resources

<div><div>Krüger&amp;Matz</div><div>Digital photo frame KM1102-15 Extended manual</div><div><div>BECKENUNGSANLEITUNG</div><div>OWNER'S MANUAL</div><div>INSTRUCCJA OBSŁUGI</div><div>MANUAL DE UTILIZARE</div></div></div>	<div><a href="#">Kruger and Matz KM1102-15 Digital Photo Frame</a> [pdf] Owner's Manual KM1102-15, KM1102-15 Digital Photo Frame, Digital Photo Frame, Photo Frame, Frame</div>
--	---

## References

- [User Manual](#)

### [Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.