



Kruger Matz KM0561 Wireless Speaker Owner's Manual

[Home](#) » [Kruger Matz](#) » Kruger Matz KM0561 Wireless Speaker Owner's Manual 

Contents

- [1 Kruger Matz KM0561 Wireless Speaker](#)
- [2 SAFETY INSTRUCTION](#)
- [3 FRONT PANEL](#)
- [4 OPERATION](#)
- [5 CHARGING](#)
- [6 SPECIFICATION](#)
- [7 Disposal](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Kruger&Matz


Kruger Matz KM0561 Wireless Speaker



SAFETY INSTRUCTION

1. Place the device on a flat, stable surface.
2. Do not place heavy objects on the device.
3. Do not place the device in close proximity to heat sources, such as radiators, etc. Do not place the device on unstable surfaces.
4. Before connecting the device to the power supply socket, make sure the voltage indicated on the appliance corresponds to the voltage in the power supply socket.
5. Keep the volume at a reasonable level throughout the entire time of using the speaker. To prevent damage to your hearing, do not raise the volume too high.
6. If you experience tinnitus, discomfort, or other concerning behaviors, stop using the device immediately.
7. Make sure, that the device is placed away from electrical devices that generate
8. Do not use this device if it has been damaged.
9. Do not attempt to repair this device yourself. In case of damage, contact the authorized service point for a check-up or repair.
10. Always disconnect the product from the power source before cleaning.
11. Clean this device with a soft, slightly damp cloth. Do not use any chemical agents to clean this device.

FRONT PANEL

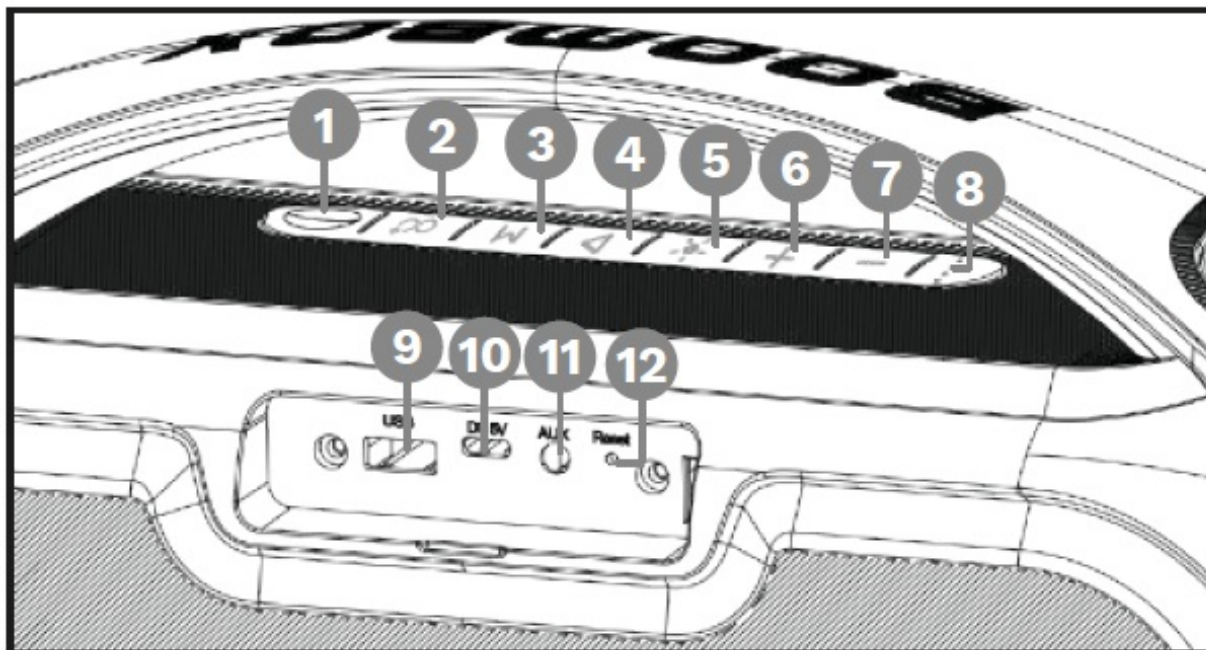

1. Power button
2. TWS button
3. Mode button
4. Play/pause button
5. Lightning change button
6. Increase volume/next track button
7. Decrease volume/previous track button
8. Battery level indicator
9. USB port
10. Charging socket
11. AUX input
12. Reset button

OPERATION

Turning on/off/volume adjustment

To turn the speaker on or off, press and hold the power button. To adjust the volume, use the volume increase, and decrease button. To go to the next or previous track, press and hold the next or previous track.

Playing via Bluetooth

If there is no external device connected (USB or AUX), the speaker will automatically go to Bluetooth mode, after turning it on. If there is an external device connected, press the mode button, to go to Bluetooth mode. On the external device, search for Bluetooth devices and connect to the speaker (KM JOY 2). Played music can be controlled on the external device or with buttons on the speaker. To disconnect the speaker from the Bluetooth device, press and hold the TWS button.

Playing via USB

After plugging the USB drive, the speaker will automatically go to USB mode. To control played music, use buttons on the speaker.

Playing via AUX

After plugging the cable into the AUX input, the speaker will automatically go to AUX mode. To control played music, use an external device.

FM Radio

To play the radio, press the mode button. Press the play button to mute the speaker. Press and hold the play button to start the automatic channel scan. To change a station, press the previous or next track button.

TWS function

TWS function allows for playing from one source on two speakers. After turning on the speakers, simultaneously press the TWS button. The connection will be signaled with an audio cue. After connecting the external device, the sound will be played on both speakers.

CHARGING

A low battery level will be indicated with a flashing charging indicator. To charge the speaker, connect the charger to the USB-C port. After finished charging, all of the charging indicators will glow.

SPECIFICATION

- RGB lighting
- Power: 20 W
- Impedance: 4 Ohm
- Frequency response: 70 Hz ~ 16 kHz
- S/N ratio: 60 dB
- Speaker size: 2 x 3"
- FM frequency: 87,5 – 108 MHz
- Bluetooth: 5.1
- Bluetooth range: up to 10 m
- Protection class: IPX5
- Supported formats: MP3
- TWS function (connect two speakers)
- I/O:
- USB 2.0 port
- AUX input (3,5 mm jack)
- USB-C input
- Power supply: 5 V / 2 A
- Battery: 3,7 V / 3000 mAh
- Dimensions: 356 x 178 x 134 mm
- Weight: 2,28 kg

LEARN MORE


- For more information on this device visit: www.krugermatz.com.
- Read the owner's manual carefully before using it.
- Visit www.krugermatz.com website for more products and accessories.
- In case of any doubts or questions reach out to our Frequently Asked Questions section.

Disposal

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal. Made in China for Lechpol Electronics Leszek Sp.k., ul. Garwolińska 1, 08-400 Miętne.

Documents / Resources
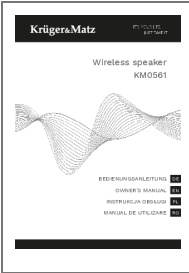
| | |
|---|---|
|  | Kruger Matz KM0561 Wireless Speaker [pdf] Owner's Manual KM0561 Wireless Speaker, KM0561, Wireless Speaker |
|---|---|

References

-  [Kruger&Matz - zestawy głośnikowe, telewizory, słuchawki, smartfony, tablety](#)