



## Kruger Matz KM0821 Alarm Clock Radio User Manual

[Home](#) » [Kruger Matz](#) » Kruger Matz KM0821 Alarm Clock Radio User Manual 

# Krüger&Matz

Alarm clock radio KM0821  
USER'S MANUAL

### Contents

- [1 SAFETY INSTRUCTIONS](#)
- [2 PRODUCT DESCRIPTION](#)
- [3 OPERATION](#)
- [4 SPECIFICATION](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)


## SAFETY INSTRUCTIONS

Read the entire instruction manual before you start installation and assembly and keep it for future reference.

1. Protect this device from humidity, water, and other liquid.
2. Before connecting the device to the power supply socket, make sure the voltage indicated on the appliance corresponds to the voltage in the power supply socket.
3. Position the device in a properly ventilated place. Protect the device from heat sources and extreme temperatures.
4. Clean the device with a soft, slightly damp cloth. Do not use any chemical agents to clean this device.
5. Disconnect the device from the power outlet, if it is not going to be used for a long time. Store the device without the batteries inside.
6. Never disassemble this device. In case of damage, contact the authorized service point for a repair.
7. Do not store magnet-sensitive items near the device.
8. Do not connect any external antennas to the existing antenna.

## PRODUCT DESCRIPTION

1. Alarm 1 / Volume – button
2. Alarm 2 / Volume + button
3. Time set/program button
4. Dimmer / DST button
5. HOUR / Tuning – button
6. MINUTE / Tuning + button
7. Radio button
8. Sleep button
9. DST indicator
10. Alarm 1 buzzer indicator
11. Alarm 1 radio indicator
12. FM radio indicator
13. Alarm 2 buzzer indicator
14. Alarm 2 radio indicator

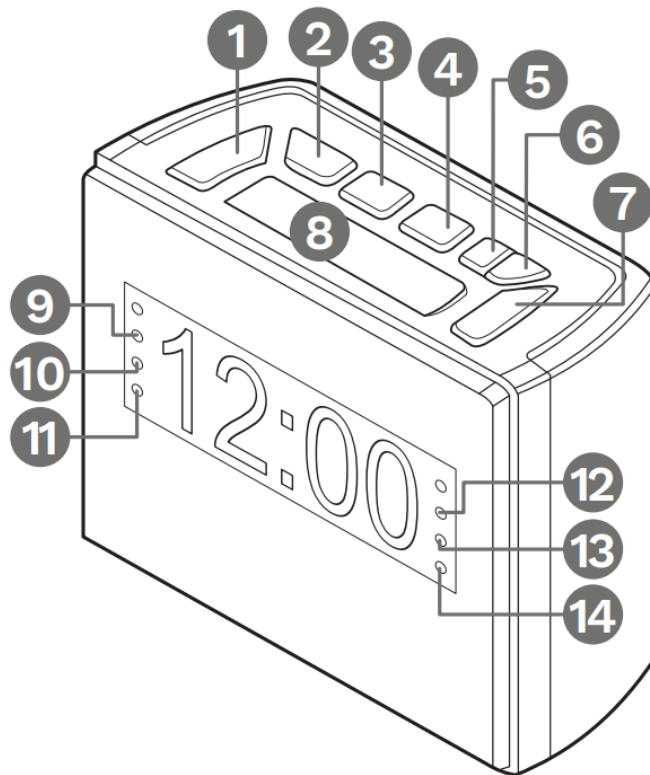

## OPERATION

Turn on the device and plug the power cord into a power outlet. After inserting the batteries, the time settings will be kept after the power cutout.

### Setting the clock

1. The first time the device is turned on, the display will show a flashing 00:00, indicating that the clock is not set.
2. Press the HOUR button to set the hour. Press the MINUTE button to set the minutes. Press and hold the

HOUR or MINUTE button to quickly change the time.

3. After setting the correct time, press the time set button or wait 5 seconds. After 5 seconds, the time will be set.

#### **To change set time:**

1. Make sure that the radio is switched off. To do this, press and hold the Radio button.
2. Press and hold the set time button, until the time on display flashes.
3. Repeat steps 2-3 from the previous paragraph.
  - To display seconds, press the set time button.After 5 seconds, the device will show the current time back.

#### **Changing the dim settings / changing the Daytime Saving Time**

- Press the dimmer button to change the dim settings.
  - Press and hold the DST button to switch to Daytime Saving Time. The DST will be indicated by the DST indicator.
- Setting the alarm

**Attention:** if you want the alarm sound to be the radio, set the radio and the volume before setting the alarm.

1. Make sure that the radio is switched off.
2. Press the Alarm 1 or 2 buttons. The time will start flashing and the corresponding alarm indicator will flash as well.
3. Use the HOUR and MINUTE buttons to set the alarm time.
4. Press the Alarm 1 or 2 buttons to confirm the alarm time (or wait 5 seconds).
5. Press the Alarm 1 or 2 buttons again to choose the alarm sound: radio or buzzer.

After the alarm is activated at a set time:

- Press the Radio button to turn off the alarm.
- Press the snooze button to activate a 9-minute snooze.
- To turn off the snooze, press the Radio button.
- If the alarm is not deactivated by the button, it will turn off automatically after one hour.
- The alarm will switch on after 24 hours. To turn off the alarm, keep pressing the Alarm 1 or 2 button until the alarm indicator turns off.

**Set timer** The device has the automatic timer functions. To set it up:

1. While listening to the radio, press the snooze button. A flashing number 90 will appear on the display, indicating the time to automatically switch off.
2. Keep pressing the snooze button until you reach the desired time.
3. After 2 seconds from the selected off time, the display will show the current time again and the radio will turn off after the set time.
4. Press the snooze button to display the time to turn off.
5. To turn off the timer function, press the snooze button until OFF appears on the display, or turn off the radio.

## FM Radio

- Press the Radio button to turn on the radio. The display will show the current frequency and the current time after 5 seconds.
  - Press and hold the Radio button to turn off the radio.
  - To change the volume level, use the volume buttons.
  - To set the frequency, use the tuning buttons.
  - To enable automatic channel scanning, press and hold one of the tuning buttons. Saving radio stations
1. Set the frequency.
  2. Press and hold the program button. The channel number will appear on the display.
  3. Select the channel number with the tuning buttons.
  4. After selecting a channel press the program button within 8 seconds from selecting the channel. If the choice is not confirmed within 8 seconds, the channel will not be saved.
  5. If the selected channel already has a frequency saved, the saved station will be overwritten.
  6. To go to the saved channel (while listening to the radio), press the program button. The saved station will be selected, and the channel number will appear on the display.

### Battery back-up

When batteries (2x AAA 1.5V batteries) are inserted into the device, the currently set time will be maintained during a power outage. During a power outage, the display will not be illuminated. When power is restored, the correct time will be set. If there is no power for a long time, or the battery level is low, the restored time may be different from the correct time. Take out the batteries if the device is not going to be used for a long time.

## SPECIFICATION

- FM radio
- 10 stations memory
- Double alarm
- Display: LED
- Speaker: 8 Ohm / 0,5 W
- FM frequency range: 87,5 – 108 MHz
- Power: 3 W
- Battery: 2x AAA 1,5 V (for clock memory)
- Power supply: 220-240 V / 50-60 Hz



**Correct Disposal of This Product**  
**(Waste Electrical & Electronic Equipment)**



(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal. Made in China for LECHPOL ELECTRONICS Sp. z o.o. Sp.k., ul. Garwolińska 1, 08-400 Miętne.



error decoding QR Code is a registered trademark

Documents / Resources

<div><div>KrügerMatz</div><div>Alarm clock radio</div><div>KM0821</div><div><div>NAVOD K OBRUČENÍ</div><div>BEDEINUNGSANLEITUNG</div><div>USCITO MANUALE</div><div>INSTRUCȚIA DE UTILIZARE</div><div>MANUAL DE UTILIZARE</div></div></div>	<div><a href="#">Kruger Matz KM0821 Alarm Clock Radio</a> [pdf] User Manual</div> <div>KM0821, Alarm Clock Radio, KM0821 Alarm Clock Radio</div>
--	--