




Kruger Matz KM0824 Alarm Clock Radio Owner's Manual

[Home](#) » [Kruger Matz](#) » Kruger Matz KM0824 Alarm Clock Radio Owner's Manual 

Krüger&Matz

Alarm clock radio
KM0824



OWNER'S MANUAL

Contents

- [1 SAFETY INSTRUCTIONS](#)
- [2 PRODUCT DESCRIPTION](#)
- [3 OPERATION](#)
- [4 SPECIFICATION](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)


SAFETY INSTRUCTIONS

Read the entire instruction manual before you start installation and assembly and keep it for future reference.

1. Protect this device from humidity, water and other liquid.
2. Before connecting the device to power supply socket, make sure the voltage indicated on the appliance corresponds to the voltage in the power supply socket.
3. Position the device in a properly ventilated place. Protect the device from heat sources and extreme temperatures.
4. Clean the device with a soft, slightly damp cloth. Do not use any chemical agents to clean this device.
5. Disconnect the device from power outlet, if it is not going to be used for a long time. Store the device without the batteries inside.
6. Never disassemble this device. In case of damage, contact the authorized service point for a repair.
7. Do not store magnet sensitive items near the device.
8. Do not connect any external antennas to the existing antenna.

PRODUCT DESCRIPTION

1. Alarm 1 / Volume – button
2. Alarm 2 / Volume + button
3. Radio button (POWER)
4. Band changing button
5. Timer button (SLEEP)
6. Saved radio presets button (MEM)
7. Time set button
8. HOUR / Tuning – button
9. MIN / Tuning + button
10. Sleep button (SNOOZE)
11. Alarm 1 buzzer indicator
12. Alarm 1 radio indicator
13. Alarm 2 buzzer indicator
14. Alarm 2 radio indicator

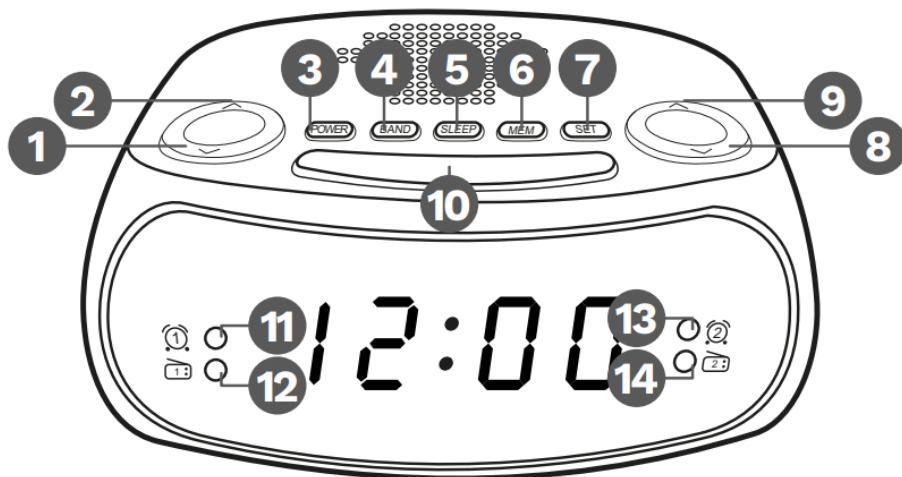

OPERATION

To turn on the device, plug the power cord to a power outlet. After inserting the batteries, the time settings will be kept after power cutout.

Setting the clock

1. The first time the device is turned on, the display will show a flashing 0:00, indicating that the clock is not set.
2. Press the HOUR button to set the hour, press the MIN button to set the minutes. Press and hold the HOUR or MINUTE button to quickly change the time.
3. After setting the correct time, press the time set button or wait 5 seconds. After 5 seconds, the time will be set.

To change set time:

1. Make sure that the radio is switched off
2. Press and hold the set time button, until the time on display flashes
3. Repeat steps 2-3 from previous paragraph.

Setting the alarm

Attention: if you want the alarm sound to be the radio, set the radio and the volume before setting the alarm.

1. Make sure that the radio is switched off 2. press and hold the Alarm 1 or Alarm 2 button, until the time on display flashes.
2. Use the HOUR and MIN buttons to set the alarm time
3. Press the Alarm 1 or 2 button to confirm the alarm time (or wait 5 seconds)
4. Press the Alarm 1 or 2 button again to choose the alarm sound: radio or buzzer.

After the alarm is activated on set time

- Press the Radio button to turn off the alarm.
- Press the snooze button to activate 9-minute snooze.
- To turn off the snooze, press the Radio button,
- If the alarm is not deactivated by the button, it will turn off automatically after one hour.
- Alarm will switch on after 24 hours. To turn off the alarm, keep pressing the Alarm 1 or 2 button, until the alarm indicator turns off.

Set timer

The device has the automatic timer functions.

To set it up:

1. While listening to the radio, press the timer button. A flashing number 90 will appear on the display, indicating the time to automatic switch off.
2. Keep pressing the timer button until you reach the desired time.
3. After 2 seconds from the selected off time, the display will show the current time again and the radio will turn off after the set time.

4. Press the timer button to display time to turn off.
5. To turn off the timer function, press the timer button until OFF appears on the display, or turn off the radio.

Radio

- Press the Radio button to turn on the radio.
The display will show the current frequency and the current time after 5 seconds.
- Press the Radio button to turn off the radio.
- Press the band button to change radio band.
- To change the volume level, use the volume buttons.
- To set the frequency, use the tuning buttons.
- To enable automatic channel scanning, press and hold one of the tuning buttons.

Saving radio stations

1. Set the frequency.
2. Press and hold the time set button. The channel number will appear on the display.
Press the time set button again to save the frequency on the preset.
3. Each frequency will be saved one after another on presets 1 to 10. If the channel already has a frequency saved, the saved station will be overwritten.
4. To go to the saved channel (while listening to the radio), press the saved radio presets button (MEM). Saved station will be selected, and the channel number will appear on the display.

Battery back-up

When batteries (2x AAA 1.5V batteries) are inserted into the device, the currently set time will be maintained during a power outage.

During a power outage, the display will not be illuminated. When power is restored, the correct time will be set. If there is no power for a long time, or the battery level is low, the restored time may be different from the correct time.

Take out the batteries if the device is not going to be used for a long time.

SPECIFICATION

- AM/FM radio
- 20 stations memory (10 FM / 10 AM)
- Double alarm
- Sleep & Snooze Function
- Display: LED
- Speaker: 8 Ohm / 0,5 W
- Radio frequency:
 - AM: 522 – 1620 kHz
 - FM: 87,5 – 108 MHz
- Power consumption: 5 W
- Battery: 2x AAA 1,5 V (for clock memory)
- Power supply: 230 V / 50 Hz
- Dimensions: 98 x 128 x 48 mm

Lechpol Electronics Leszek Sp.k. hereby declares that clock radio KM0824 is consistent with directive 2014/53/UE. Full text of the EU Declaration of Conformity is available at following Internet address:
www.lechpol.pl.



Correct Disposal of This Product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.


Made in China for Lechpol Electronics Leszek Sp.k., ul. Garwolińska 1, 08-400 Meitner.



<http://www.krugermatz.com/>

Kruger Matz is a registered trademark

Documents / Resources

	<p>Kruger Matz KM0824 Alarm Clock Radio [pdf] Owner's Manual KM0824 Alarm Clock Radio, KM0824, Alarm Clock Radio, Clock Radio, Radio</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- ↳ [Lechpol Electronics Leszek - producent i dystrybutor produktów elektronicznych!](#)
- ↳ [User Manual](#)

