




Kruger Matz KM1102 Digital Photo Frame Owner's Manual

[Home](#) » [Kruger Matz](#) » Kruger Matz KM1102 Digital Photo Frame Owner's Manual 

Contents

- [1 Kruger Matz KM1102 Digital Photo Frame Owner's Manual](#)
- [2 Product information](#)
- [3 FAQ](#)
- [4 Safety instructions](#)
- [5 Product details](#)
- [6 OPERATION](#)
- [7 Share photos](#)
- [8 Properties](#)
- [9 Littering](#)
- [10 Read More About This Manual & Download PDF:](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

Kruger Matz KM1102 Digital Photo Frame Owner's Manual



Product information

- **Model:** km 1102-15
- **Display Type:** Digital
- **Wireless connection:** Wi-Fi
- **Memory card slot:** MicroSD
- **USB Port:** USB-C
- **Power Input:** Power adapter

FAQ

Frequently asked questions

- **Q:** How do I connect my digital photo frame to Wi-Fi?
- **A:** During the initial setup, you will have the option to connect to a Wi-Fi network. Follow the on-screen instructions to complete this process.
- **Q:** Can I download more apps in this digital photo frame?
- **A:** The Frameo app can be downloaded by scanning the provided QR code. At this time, additional downloads are not supported.

Remarks


All information in this manual is in accordance with the technical conditions at the time of printing. The manufacturer reserves the right to errors and typographical errors.

Safety instructions

Read this instruction manual and keep it for future reference.

1. Protect this device from water, moisture and other liquids. Avoid using / storing it in extreme temperatures. Do not expose it to direct sunlight and other heat sources.
2. Keep the device away from children.
3. Equipment for indoor use only.
4. Do not attempt to repair this device yourself. In case of damage, contact an authorized service point for inspection or repair.
5. Before connecting the device to the power supply socket, make sure the voltage indicated on the device matches the voltage in the power supply socket.
6. This appliance may be used by children over 8 years of age and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are carefully supervised and supervised by a person responsible for their safety. Methods for all safety precautions are understood and followed. Children should be supervised to ensure that they do not play with the appliance. Children should not clean and service the equipment without supervision.
7. Always disconnect the product from the power source before cleaning.
8. Clean this device with gentle, slightly damp cloth. Do not use any chemicals to clean this device.

Product details

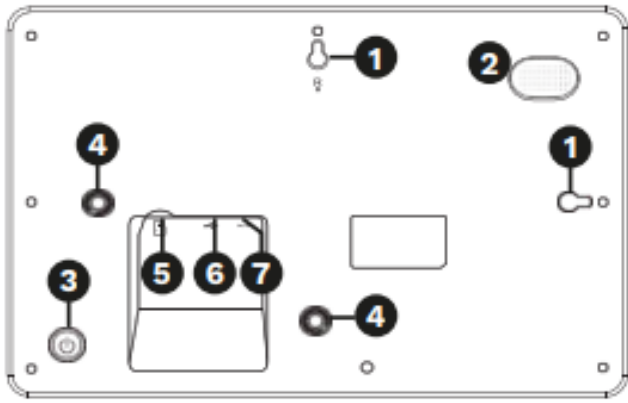

1. Wall bracket
2. speaker
3. Power button
4. Standing brackets
5. microSD slot
6. USB-C socket
7. Power adapter input socket

OPERATION

Connect

- Connect the power adapter plug to the power outlet on the device.
- Plug the adapter into the mains socket.

Open and close

- The device will turn on automatically after plugging into the connected power adapter.
- To turn off the device, press and hold the power button and press the power button. Attention: Do not turn off the device by disconnecting the power adapter input.

Initial settings

After connecting power to the frame for the first time, the startup wizard will show.

1. Select the language and press the next button.
2. Connect to a Wi-Fi network (you can skip this step, however, it is recommended to download the latest update).
3. Select the correct time zone and press the next button.
4. If an update is available, click the Download and Install button and wait for the update to install.
5. Enter your username and frame name. Press the next button.
6. Read information about sharing photos. Click the Finish button to complete the setup wizard.

Share photos

with a memory card


1. Insert the microSD card into the memory card slot (with the pins facing the screen).
2. The device will display a notification about the detection of the memory card. Select the import option.
4. Select the image and press the import button (in the upper right corner).
5. After completing the import, the image will be shown in the display.

With the Frameo app

Scan this QR code to download the Frameo app:



1. When launching the app for the first time, the app will ask for a username (this username will be displayed in the friends list in the frame).
2. After the configuration is complete, the main screen of the app will be displayed.
3. In the app, tap the Add Friend button.
4. In the frame, press the Add friend button. Enter the code from the frame in the app.
5. After a few seconds, the app will be paired with the frame. From the photo menu in the app, select the photo to export to the frame (to select multiple photos, Press and hold one image, and start selecting other images).
6. Press the transfer button. Select the target frame, enter an optional description and press the next button.
7. Drag the circle to select the middle part. Press the transfer button. After a few seconds, the image will be transferred and displayed in the frame.

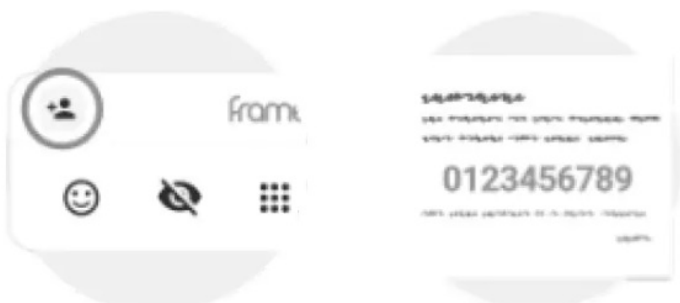

Pay attention

1. The app will ask for permission to read files on the phone. This permission must be granted to use the app.

Add reaction

Reactions can only be added to images sent from the Frameo app.

1. Tap on the image and select React.

2. Choose a reaction. Reaction notifications will be sent to the Frameo app.

Image management

1. Open the main menu.
2. Go to the image management menu.
3. The menu allows to hide, delete and manage images (import and export).

Slideshow settings

1. Open the main menu.
2. Go to the Slideshow menu.
3. The menu allows to change the slideshow settings.

Properties

DISPLAY

- **Size:** 15.6 inches / IPS
- **Resolution:** 1920 x 1080 px
- **Aspect ratio:** 16:9
- **Touch panel:** 5-point touch

System and parameters

- **Operating system:** Android 6.1
- **CPU:** Rockchip RK3128 Quad core
- **RAM:** 1 GB
- **Internal memory:** 16 GB
- **Maximum capacity of memory card:** 32 GB
- USB-C port
- Mono speakers
- **Wi-Fi:** 802.11 b/g/n (2.4 GHz)
- **Power supply:** DC 5 V / 3 A

Physical parameters

- **Power supply:** 100 – 240 V AC; 50/60 Hz
- **Size:** X x 435 284 28 mm
- **Weight:** 1653 g
- **In the package:** stand, power supply, owner's manual

Only radio waves

| Radio | The frequency of | Maximum output power |
|-------|------------------|----------------------|
| Wi-Fi | 2412-2472 MHz | Size 15.82 dBm |

Lechpol Electronics Leszek Sp.k. This declaration that the KM1100 digital picture frame is in compliance with Directive 2014/53/UE.

The full text of the EU declaration is available at the following Internet address: www.lechpol.pl.

Littering

Proper disposal of this product

(waste electrical and electronic equipment)

(Applicable in the European Union and other European countries with separate collection systems)



This symbol appears on the product or its literature, indicating that it should not be thrown away with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this type of waste from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact the retailer where they purchased this product, or their local government office, for details of where they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase agreement. This product should not be mixed with other commercial waste for disposal.

Made in China for Lechpol Electronics Leszek Sp.k., ul. Garwolińska 1, 08-400 Miętne.

Scan



Krüger&Matz is a registered trademark.

Read More About This Manual & Download PDF:

Documents / Resources

| | |
|--|--|
| <div><div>Kruger&Matz</div><div>Digital photo frame KM1102 Extended manual</div><div><div>BECKENUNGSANLEITUNG</div><div>OWNER'S MANUAL</div><div>INSTRUCȚIA DE UTILIZARE</div><div>MANUAL DE UTILIZARE</div></div></div> | <div><div>Kruger Matz KM1102 Digital Photo Frame [pdf] Owner's Manual</div><div>KM1102, KM1100, KM1102 Digital Photo Frame, KM1102, Digital Photo Frame, Photo Frame, F rame</div></div> |
|--|--|

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.