



KRUPS EA910A10 Super Automatic Coffee Maker User Guide

[Home](#) » [KRUPS](#) » KRUPS EA910A10 Super Automatic Coffee Maker User Guide 

Contents

- [1 KRUPS EA910A10 Super Automatic Coffee Maker](#)
- [2 OVERVIEW](#)
- [3 INITIALIZATION](#)
- [4 BEVERAGES SETTINGS](#)
- [5 MAKE A MILK RECIPE](#)
- [6 CLEAN THE STEAM NOZZLE](#)
- [7 CLEAN THE MACHINE](#)
- [8 DESCALE THE MACHINE](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

KRUPS EA910A10 Super Automatic Coffee Maker

Read the safety instructions booklet before first use. Find the user manual with more detailed instructions by scanning the QR code or visiting www.krups.com.

OVERVIEW

INTERFACE

INITIALIZATION

1. Plug in the machine.

2. Press the ON/OFF button.
3. Fill the water tank up to the maximum.
4. Place a 1 litre container under both outlets (coffee and steam).
5. To set up your machine, an auto-rinse cycle will be carried out. Press Start/Stop to start it.
6. Water will flow through the both outlets several times for 4 minutes (hot nozzles).
7. A triple beep will sound when the water flow has stopped to indicate that your machine is ready.

BEVERAGES SETTINGS

SAVE YOUR FAVORITE SETTINGS

1. Before or after the personalised recipe, press and hold the “Favourites” button for 2 seconds. The “A” and “B” indicator lights will come on.
2. The flashing indicates the recording position. To change the position, press the “Favourites” button once. Once the position (A or B) has been set, the recording will start after approximately 3 seconds.

START A FAVORITE BEVERAGE

MAKE A MILK RECIPE

1. Fill 1/3 of your cup with milk.
2. Press the “Steam” button, then press the “Start/Stop” button.
3. The machine will preheat until the “Start/Stop” light begins to flash.
4. Place the nozzle into your cup.
5. Press the “Start/Stop” button to release the steam from the nozzle. Gradually froth the milk, making sure to keep the steam nozzle in the milk rather than the froth.
6. You can press the “Start/Stop” button again to stop the steam during the recipe. It will take a few seconds to completely stop.

CLEAN THE STEAM NOZZLE

REFILLING THE WATER TANK

CLEAN THE WATER TANK

EMPTY THE COFFEE GROUND COLLECTOR

CLEAN THE COFFEE GROUND COLLECTOR

EMPTY THE DRIP TRAY

CLEAN THE DRIP TRAY

RINSE THE MACHINE

CLEAN THE MACHINE

1. The "CLEAN" indicator light will turn red when the machine needs to be cleaned.
2. Press the "Clean Mode" button to select "CLEAN".
3. Press the "Start/Stop" button to confirm the cleaning process. The "CLEAN" light will start to flash.
4. Take a cleaning tablet (KRUPS XS3000).
5. Open the cleaning tablet hatch.
6. Insert the tablet.
7. Place a 1 litre container under both nozzles.
8. Press the "Start/Stop" button for a second time to start the cleaning process.
9. Water will run out of the coffee nozzles during the cleaning process.
10. When the water has stopped flowing and after you hear three beeps, your machine is cleaned and ready for use.

DESCALE THE MACHINE

PREPARATION (≈5 MIN)

1. The "CALC" indicator light will turn red when the machine needs to be descaled.
2. Press the "Clean Mode" button to select "CALC".
3. Press the "Start/Stop" button to confirm the machine descaling process. The "CALC" light will start to flash.
4. Fill the water tank with hot water up to the CALC mark. (if your product is equipped with our Claris filter cartridge, remove it)
5. Open a sachet of KRUPS descaler and empty it into the water tank.
6. Mix the sachet contents with the water in the tank.
7. Put the water tank back in place on the machine.
8. Place a 1.5 litre container under both nozzles.

DESCALING (≈5 MIN)

9. Press the "Start/Stop" button to start the descaling process.
10. Water will run out of both nozzles during the descaling process.
11. The CALC light will flash when the water flow has stopped.


RINSING (≈10 MIN)

12. Remove the descaler from the water tank.
13. Clean the water tank using a sponge.
14. Wipe and dry the water tank.
15. Fill the water tank up to the maximum.
16. Put the water tank back in place on the machine.
17. Press the "Start/Stop" button to start the rinsing process.
18. Water will run out of the coffee nozzles during the rinsing process.
19. When the water has stopped flowing and after you hear three beeps, your machine is descaled and ready for

use.

WWW.KRUPS.COM

Documents / Resources

	<p>KRUPS EA910A10 Super Automatic Coffee Maker [pdf] User Guide EA910A10 Super Automatic Coffee Maker, EA910A10, Super Automatic Coffee Maker, Automatic Coffee Maker, Coffee Maker, Maker</p>
---	--

References

- [K KRUPS.COM](#)