

Krups Evidence EA891C Coffee Maker



Krups Evidence EA891C Coffee Maker Instruction Manual

[Home](#) » [KRUPS](#) » Krups Evidence EA891C Coffee Maker Instruction Manual 

Contents

- [1 Krups Evidence EA891C Coffee Maker](#)
- [2 CONDITIONS OF USE](#)
- [3 ACCESSORIES \(SOLD SEPARATELY\)](#)
- [4 DISPOSAL](#)
- [5 Customer's Support](#)
- [6 FAQs](#)
- [7 References](#)
- [8 Related Posts](#)

KRUPS

Krups Evidence EA891C Coffee Maker



WARNING: After use, do not touch hot surfaces (coffee outflow, steam nozzle) that release residual heat. When using the nozzle, make sure it is in the right position to avoid the risk of burns. Do not insert foreign objects into the coffee grinder.

FOR EUROPEAN MARKETS ONLY

- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the appliance safely and understand the dangers.
- Children shall not play with the appliance.
- Always unplug the appliance when leaving the room or your home for prolonged periods and when assembling/disassembling or cleaning.
- Never open the appliance. Warning, there is a risk of fatal injury due to electricity!
- The appliance shall not be placed in a cabinet when in use.

FACTORY CONTROL

- Your appliance was checked and tested before leaving the manufacturing factory. Despite the care taken when cleaning, it is possible that you may find coffee residue in the coffee grinder and/or drops of coffee on the drip tray. Thank you for your understanding. We also recommend that you perform several rinse cycles before

using the appliance for the first time or when it has not been used for several days.

USAGE LIMITATIONS

- For your safety, this appliance complies with applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Materials in contact with food, Environment, etc.).
- This Automatic Espresso coffee/espresso machine should only be used to prepare espresso, coffee, hot water or to froth milk.
- Your appliance has not been designed for commercial and/or professional use.
- The guarantee will not be valid if all the descaling, cleaning or maintenance operations are not performed regularly on the appliance, or in case any foreign objects are found inside the coffee-grinder or the coffee grounds door.
- The guarantee does not apply if Claris – Aqua Filter System filter cartridge has not been used according to the KRUPS instructions
- Use only KRUPS accessories and consumables in this machine to maintain the guarantee.
- With the exception of cleaning and descaling according to the appliance's instructions, any intervention on the appliance must be performed by an approved KRUPS centre.
- Any error in connection will invalidate your guarantee.
- Any unauthorised opening of the appliance will negate the guarantee. Do not use your appliance if it is not working properly or if it has been damaged. In this event, it is recommended that you get the appliance examined by an approved KRUPS centre (refer to the list in the KRUPS service booklet).
- For safety and accreditation reasons, any transformation or modification of the appliance, performed individually, is forbidden, as only tested appliances are accredited and the manufacturer will refuse all liability in the event of damage.

CONDITIONS OF USE

- This appliance is not suitable for making drinks for babies under the age of 2 years.
- If your product is equipped with our Claris – Aqua Filter System F088 cartridge, please make sure to remove it before the descaling activity. Perform the entire cleaning cycle thoroughly as there may be a risk of intoxication. If one of the products supplied with the appliance is swallowed, inform your doctor and/or poison centre immediately.
- The use of oily, caramelised or aromatic coffee beans is not recommended in this appliance. These types of beans can damage the appliance. Never put coffee grounds in the coffee bean hopper.
- For safety reasons, while producing steam for making a cappuccino, heating milk or heating water, take care not to put your hand under the steam nozzle or the super cappuccino accessory, or under the coffee nozzle while making coffee.
- The steam nozzle can be very hot, take care not to handle it during or just after use.
- Check that the voltage of your appliance corresponds to your domestic power supply. Any error in connection may cause irreversible damage and invalidate the guarantee. The appliance should only be plugged into a socket with an earth connection. Check that the socket outlet can be easily accessed so that the plug can be disconnected easily in the event of a malfunction.
- For the safety of your appliance, remove the plug in the event of a thunderstorm. Do not pull the power cord to

remove the plug. Do not leave the power cord overhanging a table, work surface or in contact with hot parts of your appliance, near a source of heat or a sharp edge.

- The use of multiple plugs or extension leads is not recommended. Unplug your appliance as soon as you have stopped using it for a long period or when cleaning it.
- Non-compliance with these instructions or any contact between the appliance's conductive parts with humidity or water can cause fatal injuries due to the presence of electricity!
- This appliance should only be used indoor and dry locations at room temperature, avoid placing the appliance in direct sunlight. If the room temperature should change from cold to hot, please wait a few hours before starting the appliance to ensure that it is not damaged due to water condensation.
- Take care not to place the appliance on a hot surface such as a warming plate or near a naked flame, to avoid any risk of fire or other damage.
- To avoid dirty water overflowing onto your work-top or running the risk of burning yourself, remember to fit the drip tray and make sure you protect your work-top during the descaling cycles, particularly if it is made of marble, stone or wood.
- In the event of a malfunction or poor working condition, check the appliance and try to resolve the problem (see table: Problems and corrective measures) or get the appliance repaired if the malfunction persists.
- Only a qualified technician is authorised to perform repairs on the power cord and the electrical network. If this instruction is not followed, you are at risk of death due to electric shock! Never use an appliance that is visibly damaged!
- Use for any purpose other than those described in the present manual does not comply with the instructions and can result in injuries and property damage as well as the deterioration or destruction of the appliance.
- Do not put accessories or removable parts of your appliance in the dishwasher.

ACCESSORIES (SOLD SEPARATELY)

- F 054 Descaling powder
- F 088 Claris – Aqua Filter System cartridge
- XS 3000 Block of 10 cleaning tablets
- XS 4000 KRUPS Cleaning fluid for Cappuccino system
- XS 6000 Auto Cappuccino Set
- XS 9000 KRUPS Cleaning fluid for steam nozzle

Caution: Use only KRUPS accessories and consumables in this machine to maintain the guarantee.

DETAILED BROCHURE / PROBLEMS AND CORRECTIVE ACTIONS

- For more details, visit the site: www.krups.com

TRANSPORT

- Keep the original packaging for transporting the appliance. Before transporting or transferring the appliance, empty the coffee grounds collector, the cleaning liquid (depending on model), the coffee beans tank, the water tank and the drip trays to avoid water spillage.

Caution: If the appliance should fall out of the packaging during transport, it is advisable to take it to a KRUPS Approved Service Centre to have it checked and thus avoid any risk of fire or electrical hazard.

DISPOSAL

Some appliances contain one or more batteries that, for safety reasons, can only be accessed by a repair person. To change the batteries, please contact your nearest KRUPS Approved Service Centre.

For more details, please visit "[User Manual](#)"

Important:

- Your appliance contains various materials which can be recovered or recycled. Think of the environment!
- Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point.

Customer's Support

- If you have any further problems or queries, please call our Customer Relations Team first for expert help and advice:

Helpline:

- 0345 330 6460
- 01 677 4003 – ROI
- Or consult our web site: www.krups.co.uk

FAQs

What cleaning and maintenance tasks can be performed by children regarding the Krups Evidence EA891C Coffee Maker?

Children aged 8 and older can participate in cleaning and user maintenance tasks if they are supervised by an adult. However, it's essential to keep the appliance and its cord out of reach of children under 8 years of age.

Can individuals with reduced physical, sensory, or mental capabilities use the Krups Evidence EA891C Coffee Maker?

Yes, individuals with reduced physical, sensory, or mental capabilities can use the coffee maker as long as they are supervised or have received instructions to operate it safely and understand the potential dangers.

What should I do before leaving the room or home for an extended period regarding the Krups Evidence EA891C Coffee Maker?

Always unplug the Krups Evidence EA891C Coffee Maker when leaving the room or your home for prolonged

periods or when assembling/disassembling or cleaning the appliance to ensure safety.

Can I open the Krups Evidence EA891C Coffee Maker for any reason?

No, it is crucial not to open the appliance, as there is a risk of fatal electric injury associated with tampering with its internal components.

What are the usage limitations of the Krups Evidence EA891C Coffee Maker?

The Krups Evidence EA891C Coffee Maker is intended for preparing espresso, coffee, hot water, or frothing milk. It is not designed for commercial or professional use. The guarantee will be void if regular descaling, cleaning, or maintenance operations are not performed, or if foreign objects are found inside the coffee grinder or coffee grounds door.

What is the importance of using the Claris - Aqua Filter System filter cartridge with the Krups Evidence EA891C Coffee Maker?

To maintain the guarantee, it is essential to use the Claris - Aqua Filter System filter cartridge according to the KRUPS instructions. Failure to use it correctly may void the guarantee.

Can I use accessories and consumables from other brands with the Krups Evidence EA891C Coffee Maker?

No, you should only use KRUPS accessories and consumables in the machine to maintain the guarantee and ensure proper functionality.

Can I perform any repairs or interventions on the Krups Evidence EA891C Coffee Maker myself?

Any intervention on the appliance, except for cleaning and descaling according to the appliance's instructions, must be carried out by an approved KRUPS center. Unauthorized opening of the appliance will invalidate the guarantee. If the appliance is not working correctly or is damaged, it is recommended to have it examined by an approved KRUPS center.

What should I do if my Krups Evidence EA891C Coffee Maker is not functioning correctly or has been damaged?

If the appliance is not working properly or has been damaged, it is recommended to have it examined by an approved KRUPS center. Using a malfunctioning appliance can be hazardous.

Is it permissible to modify or transform the Krups Evidence EA891C Coffee Maker on an individual basis?

No, any transformation or modification of the appliance performed individually is forbidden for safety and accreditation reasons. Only tested appliances are accredited, and the manufacturer will not be liable for any damage resulting from unauthorized modifications.

Can the Krups Evidence EA891C Coffee Maker be used to prepare drinks for babies under the age of 2 years?

No, the Krups Evidence EA891C Coffee Maker is not suitable for making drinks for babies under the age of 2 years.

What precautions should I take when performing descaling with the Claris - Aqua Filter System F088 cartridge in my Krups Evidence EA891C Coffee Maker?

When performing descaling, remove the Claris - Aqua Filter System F088 cartridge before starting. Perform the entire cleaning cycle thoroughly to avoid the risk of intoxication. If any product supplied with the appliance is swallowed, seek immediate medical advice.

Reference: [Krups Evidence EA891C Coffee Maker Instruction Manual-device.report](#)

References

- [User Manual](#)