



KRUSADER 2BC3K Portable Wireless Scoreboard User Manual

[Home](#) » [KRUSADER](#) » KRUSADER 2BC3K Portable Wireless Scoreboard User Manual 

Contents

- 1 KRUSADER 2BC3K Portable Wireless Scoreboard
- 2 Product Information
- 3 Specifications
- 4 Product Usage Instructions
 - 4.1 Placement Configuration
- 5 Using the Scoreboard
- 6 Direct Operation
- 7 Wireless Operation
- 8 FAQ
- 9 PORTABLE WIRELESS SCOREBOARD
- 10 USING THE SCOREBOARD
- 11 FCC Compliance Statement
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts



KRUSADER 2BC3K Portable Wireless Scoreboard



Product Information

Specifications

- **Product Name:** KrusaderTM Scoreboard
- **Power Source:** Enclosed adapter or portable 12V external rechargeable battery
- **Battery Compatibility:** 3V CR2025 battery for remote

Product Usage Instructions

Placement Configuration

The KrusaderTM Scoreboard can be used in three configurations:

1. Use on Flat Surface:
 - Attach the pair of feet as shown using the provided screws.
2. Mount to Wall:
 - Attach the wall mount hooks as shown using the provided screws. (Wall mount screws not provided).
3. Hook onto outside of hockey glass or fencing:
 - Attach the long hooks as shown using the provided screws.

Powering On

The KrusaderTM scoreboard can be powered on using the following methods:

1. Using the Enclosed Adapter:
 - Connect the enclosed adapter to the scoreboard.

- If the scoreboard is in sleep mode, press any button on the scoreboard or wireless remote to turn on the display.

2. Using a Portable 12V External Rechargeable Battery:

- Connect a compatible portable 12V external rechargeable battery to the scoreboard using a cable (e.g., Amazon ASIN B001U7KDYK).
- If the scoreboard is in sleep mode, press any button on the scoreboard or wireless remote to turn on the display.

Powering Off

To turn off the scoreboard:

- Disconnect the scoreboard from the power source.

To turn off the display:

- Hold down at the same time the pair of left or right buttons on the scoreboard or remote for seven seconds.

Using the Scoreboard

Direct Operation

To adjust the score on each side:

- Press the red button to move the score up.
- Press the black button to move the score down.

To reset the score to 00 on a side:

- Press the red and black buttons at the same time.

To turn off the display:

- Hold down at the same time the pair of left or right buttons for seven seconds.

Wireless Operation

To adjust the score on each side:

- Press the top button to move the score up.
- Press the bottom button to move the score down.

To reset the score to 00 on a side:

- Press the up and down buttons at the same time.

To turn off the display:

- Hold down at the same time the pair of left or right buttons for seven seconds.

Note: The remote comes with a pre-installed 3V CR2025 battery. To replace the battery, use a 3V CR2025 battery.

FAQ

What power sources does the Krusader™ Scoreboard support?

The Krusader™ Scoreboard can be powered using the enclosed adapter or a portable 12V external rechargeable battery.

How do I turn off the scoreboard?

To turn off the scoreboard, simply disconnect it from the power source.

How do I turn off the display?

To turn off the display, hold down at the same time the pair of left or right buttons on the scoreboard or remote for seven seconds.

How do I adjust the score on each side?

In direct operation mode, press the red button to move the score up and press the black button to move the score down. In wireless operation mode, press the top button to move the score up and press the bottom button to move the score down.

How do I reset the score to 00 on a side?

In direct operation mode, press the red and black buttons at the same time. In wireless operation mode, press the up and down buttons at the same time.

What battery does the remote use?


The remote uses a 3V CR2025 battery. To replace the battery, use a 3V CR2025 battery.

PORTABLE WIRELESS SCOREBOARD


SELECT PLACEMENT CONFIGURATION

The Krusader™ Scoreboard can be used in three configurations as follows:


1. Use on Flat Surface. To use the scoreboard on a flat surface, attach the pair of feet as shown with the provided screws.

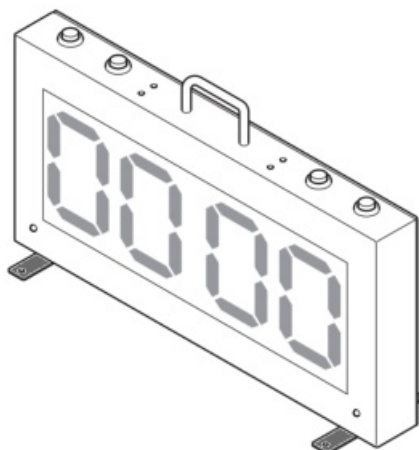

2. Mount to Wall. To secure the scoreboard to a wall, attach the wall mount hooks as shown with the provided screws. (Wall mount screws not provided).

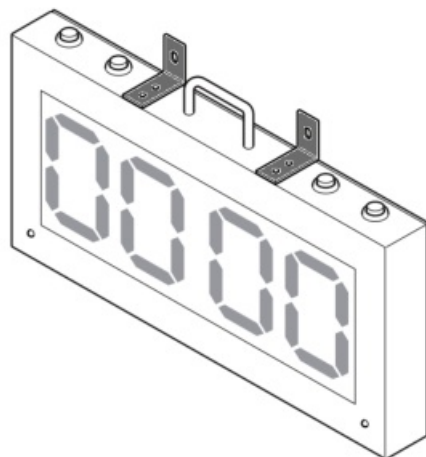


3. Hook onto the outside of hockey glass or fencing. To hook the scoreboard on the outside of hockey glass or fencing, attach the long hooks as shown with the provided screws.

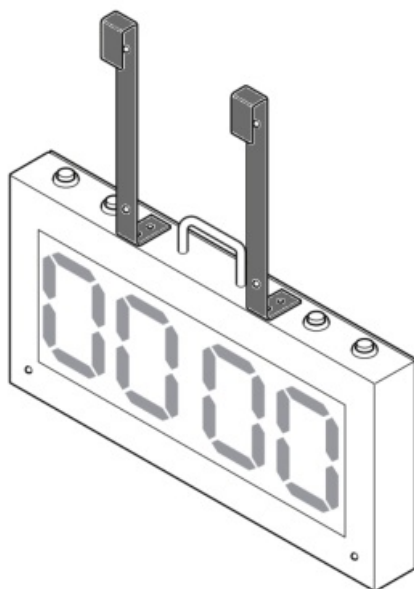

POWERING ON

- The Krusader™ scoreboard operates using the enclosed adapter.
- A portable 12V external rechargeable battery can also be used. For example, see battery Amazon ASIN B00K8V2Y8W, 10ft cable Amazon ASIN B001U7KDYK, and battery charger Amazon ASIN B07F8WM7WZ.
- If the scoreboard is in sleep mode, press any button on scoreboard or wireless remote to turn on display.

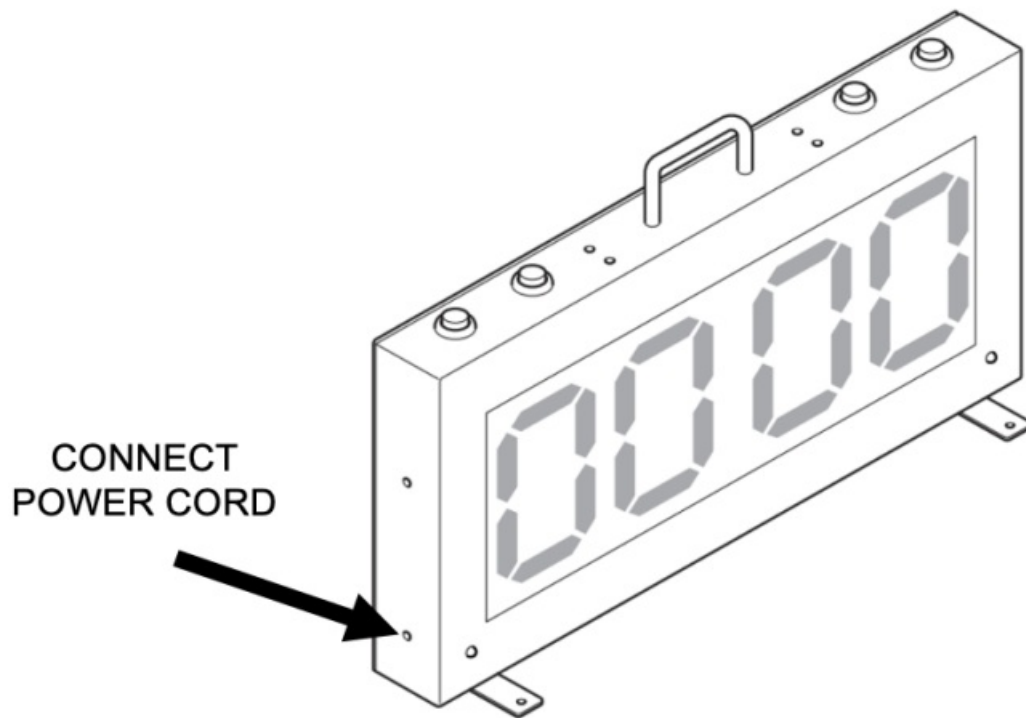


POWERING OFF

- To turn off the scoreboard, disconnect from the power source.
- To turn off the display, hold down at the same time the pair of left or right buttons on the scoreboard or remote for seven seconds.

USING THE SCOREBOARD


DIRECT OPERATION

- To adjust the score on each side, simply press the red button to move the score up and press the black button to move the score down.
- To reset the score to 00 on a side, press the red and black button at the same time. Otherwise, press the black button until the score becomes 00.
- As noted above, to turn off the display, hold down at the same time the pair of left or right buttons for seven seconds.

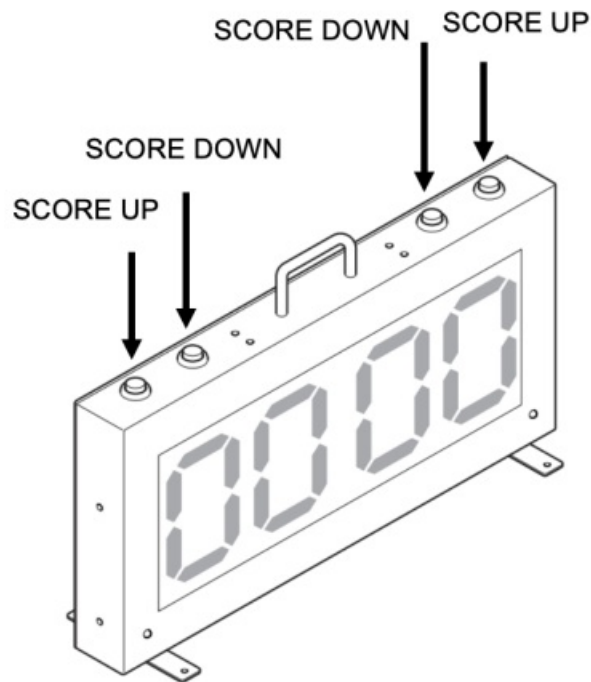

WIRELESS OPERATION

- To adjust the score on each side, simply press the top button to move the score up and press the bottom button to move the score down.

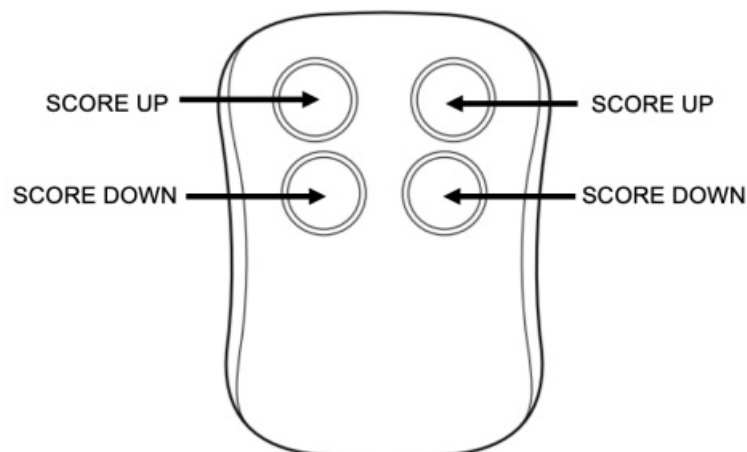

- To reset the score to 00 on a side, press the up and down button at the same time. Otherwise, press the bottom button until the score becomes 00.
- As noted above, to turn off the display, hold down at the same time the pair of left or right buttons for seven seconds.
- Remote comes with battery installed. To replace, use 3V CR2025 battery.

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Canadian Compliance Statement

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

© 2023 Krusader LLC www.krusader.com

Documents / Resources

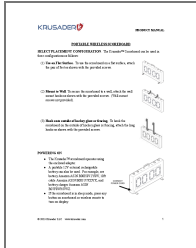	<p>KRUSADER 2BC3K Portable Wireless Scoreboard [pdf] User Manual 2BC3K Portable Wireless Scoreboard, 2BC3K, Portable Wireless Scoreboard, Wireless Scoreboard, Scoreboard</p>
---	---

References

- [🌐 Krusader - When it's more than a game. – Krusader LLC](#)
- [User Manual](#)