

KRUSADER 2BC3KREMOTE Remote Portable Wireless Scoreboard



KRUSADER 2BC3KREMOTE Remote Portable Wireless Scoreboard User Manual

[Home](#) » [KRUSADER](#) » KRUSADER 2BC3KREMOTE Remote Portable Wireless Scoreboard User Manual 

Contents

- [1 KRUSADER 2BC3KREMOTE Remote Portable Wireless Scoreboard](#)
- [2 PORTABLE WIRELESS SCOREBOARD](#)
- [3 USING THE SCOREBOARD](#)
- [4 FCC Compliance Statement](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



KRUSADER 2BC3KREMOTE Remote Portable Wireless Scoreboard



PORTABLE WIRELESS SCOREBOARD

SELECT PLACEMENT CONFIGURATION. The Krusader™ Scoreboard can be used in three configurations as follows:

1. Use on a Flat Surface. To use the scoreboard on a flat surface, attach the pair of feet as shown with the provided screws.
2. Mount to Wall. To secure the scoreboard to a wall, attach the wall mount hooks as shown with the provided screws. (Wall mount screws not provided).



3. Hook onto the outside of hockey glass or fencing. To hook the scoreboard on the outside of hockey glass or

fencing, attach the long hooks as shown with the provided screws.



POWERING ON

- The Krusader™ scoreboard operates using the enclosed adapter.
- A portable 12V external rechargeable battery can also be used. For example, see battery Amazon ASIN B00K8V2Y8W, 10ft cable Amazon ASIN B001U7KDYK, and battery charger Amazon ASIN B07F8WM7WZ.
- If the scoreboard is in sleep mode, press any button on the scoreboard or wireless remote to turn on display.


POWERING OFF

- To turn off the scoreboard, disconnect from the power source.
- To turn off the display, hold down at the same time the pair of left or right buttons on the scoreboard or remote for seven seconds.

USING THE SCOREBOARD


DIRECT OPERATION

- To adjust the score on each side, simply press the red button to move the score up and press the black button to move the score down.
- To reset the score to 00 on a side, press the red and black button at the same time. Otherwise, press the black button until the score becomes 00.
- As noted above, to turn off the display, hold down at the same time the pair of left or right buttons for seven seconds.

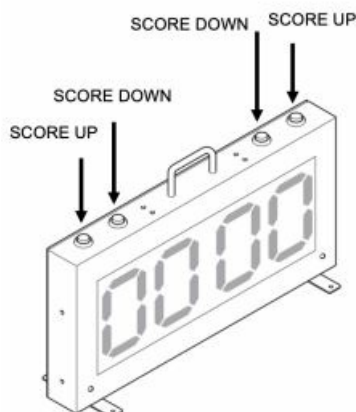

WIRELESS OPERATION

- To adjust the score on each side, simply press the top button to move the score up and press the bottom button to move the score down.

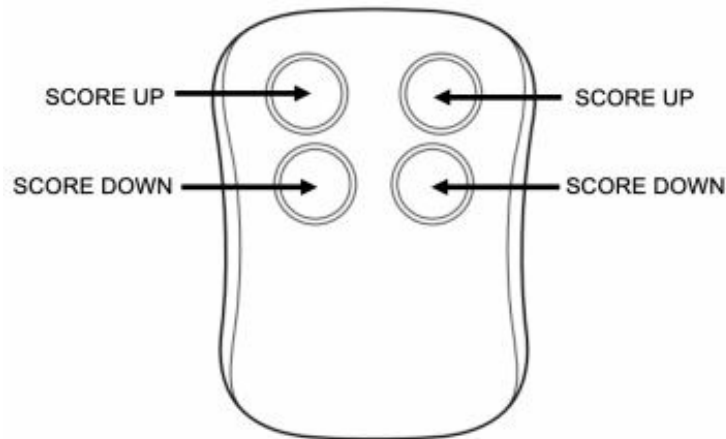

- To reset the score to 00 on a side, press the up and down button at the same time. Otherwise, press the bottom button until the score becomes 00.
- As noted above, to turn off the display, hold down at the same time the pair of left or right buttons for seven seconds.
- Remote comes with battery installed. To replace, use 3V CR2025 battery.

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used following the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canadian Compliance Statement


This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the

device.

- 2023 Krusader LLC
- www.krusader.com

Documents / Resources

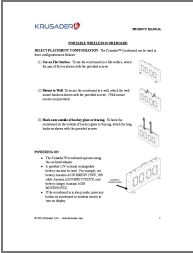	KRUSADER 2BC3KREMOTE Remote Portable Wireless Scoreboard [pdf] User Manual 2BC3KREMOTE Remote Portable Wireless Scoreboard, 2BC3KREMOTE, Remote Portable W ireless Scoreboard, Portable Wireless Scoreboard, Wireless Scoreboard, Scoreboard
---	--

References

- [Krusader - When it's more than a game. – Krusader LLC](#)
- [User Manual](#)