



KTC M27T20 Firmware Upgrade Tutorial User Guide

[Home](#) » [KTC](#) » KTC M27T20 Firmware Upgrade Tutorial User Guide 

Contents

- [1 KTC M27T20 Firmware Upgrade Tutorial](#)
- [2 Instruction](#)
- [3 Notice:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

KTC M27T20 Firmware Upgrade Tutorial



Instruction

Machines whose firmware version number starts with 3(example:3.0.1)

 
Risk warning: Upgrading the firmware may cause color deviation and abnormal display.
KTC official does Notre< commendation<1 upgrade by your se11.
But we still provide firmware upgrade package and correct upgrade tutorial.

Notice:


1. Please check first to make sure the version can be upgraded;
2. Do not cut off the power during the upgrade process;
3. The data in the factory menu are display parameters, please do not modify, otherwise it will affect the display effect of the display
4. The U disk format is recommended to use FAT32.

The firmware installation package can be downloaded from the KTC official website.

1. Open the OSD menu, check the firmware version number in the lower right corner,
Only machines whose firmware version number starts with "3" can be upgraded, to confirm whether the upgrade conditions are met;

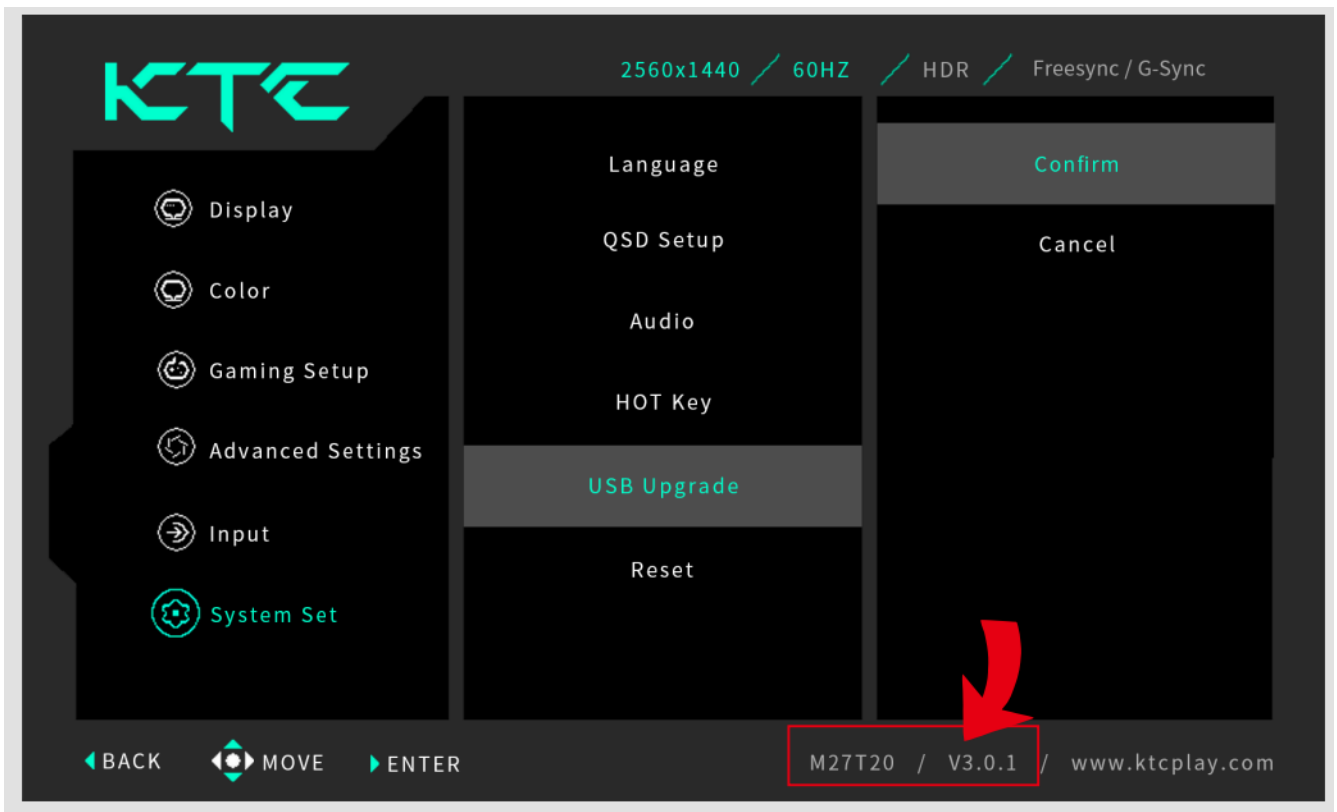


2. Rename the firmware upgrade file to MERGE.bin and put it in the root directory of the u disk; (name must be MERGE.bin).

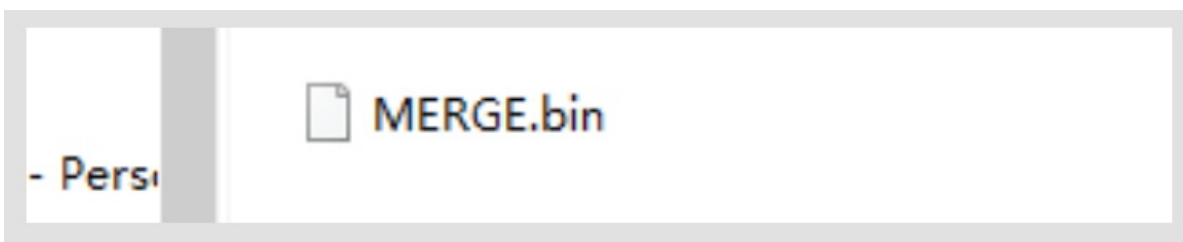


3. Insert the U disk into the USB socket near the power interface;



 4. Turn on the monitor to open the OSD menu:
System settings-USS upgrade-right click to Confirm.

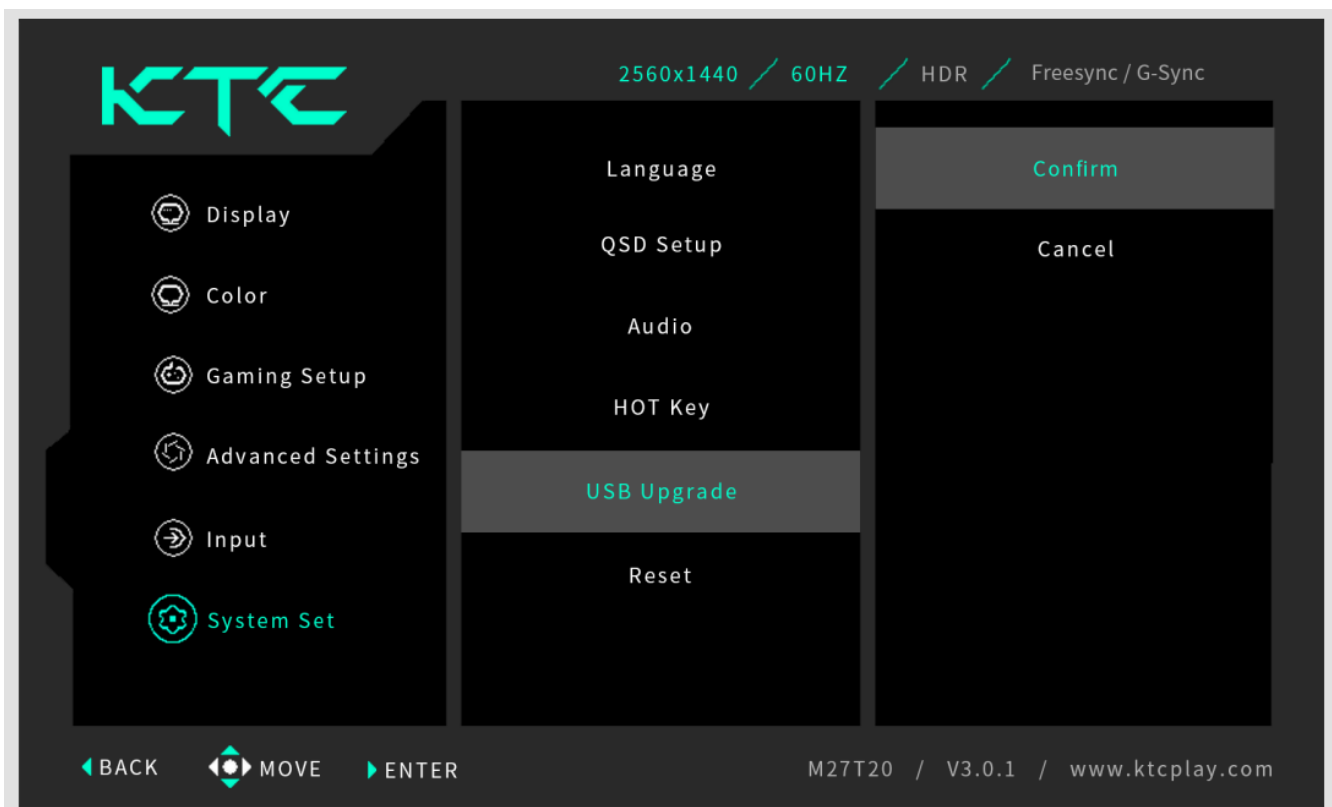

5. Upgrading" appears in the middle of the monitor screen; wait for the upgrade to complete
 This process takes about 2-3 minutes, please do not cut off the power during this period;
 (There is a small probability that you will not enter the upgrade program after confirmation, you can repeat the third step).

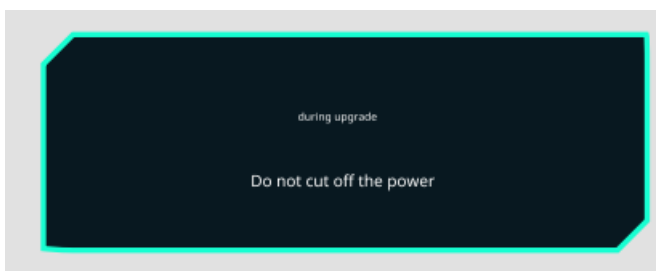

6. After the upgrade is complete, wait for the monitor to display the screen
 Need to unplug the power and then power on again.
7. After the monitor displays the picture normally, press the middle button of the remote sensor to call out the factory.
 menu; select Reset with the joystick up, and right click to confirm.

MST9U14V4 K270WD-UG1000Q1
SDA: KSDA21120170
FW:V1.2.0

Brun 9S Off
ColorTemp
6500K A 116 G 112 B 122
7500K A 108 G 107 B 122
9300K A 102 G 105 B 128


USER A 50 G 50 B 50

Panel SSC Freq	32
Panel SSC Perm	2
DDR SSC Freq	30
DDR SSC Perm	10

Panel Time: 0Hour 0Min
Reset
Exit



 Documents / Resources

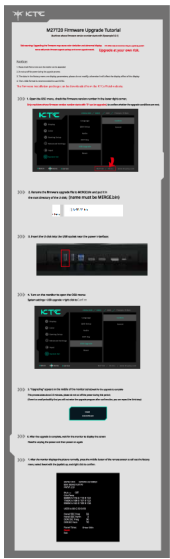

[KTC M27T20 Firmware Upgrade Tutorial](#) [pdf] User Guide
M27T20, M27T20 Firmware Upgrade Tutorial, Firmware Upgrade Tutorial, Upgrade Tutorial, Tutorial

References

- [User Manual](#)