



kvm-tec 6711L Matrixline Full HD Extender over IP User Guide

[Home](#) » [kvm-tec](#) » kvm-tec 6711L Matrixline Full HD Extender over IP User Guide 

kvm-tec 6711L Matrixline Full HD Extender over IP



Contents

1 PC Connections


1.1 Quick Installation MX2000 MATRIXLINE local / CPU – remote / CON

2 Documents / Resources

2.1 References

3 Related Posts


PC Connections

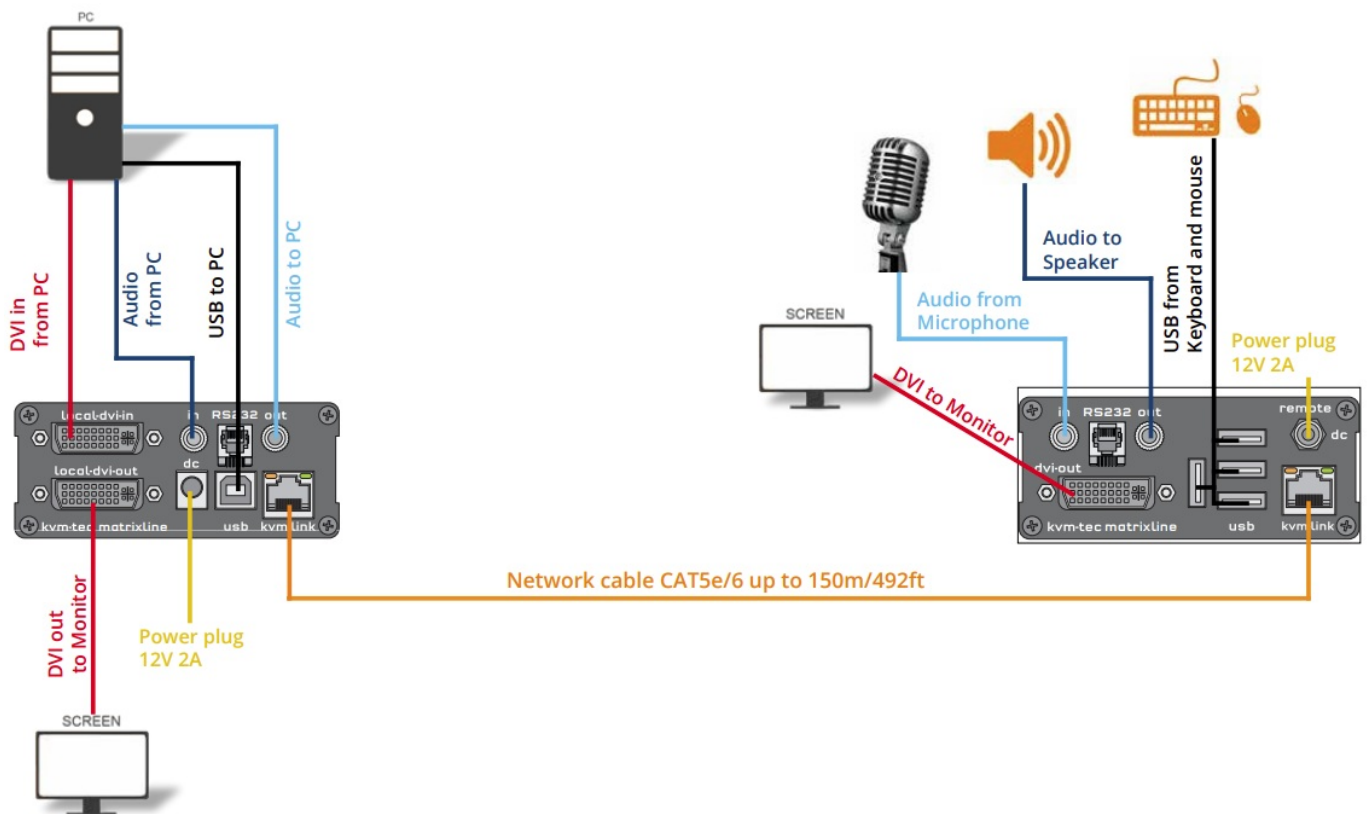

Quick Installation MX2000 MATRIXLINE local / CPU – remote / CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 2A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU Local Unit (PC-in). Then connect the monitor with the DVI cable to the CON / Remote Unit.
5. Then connect PC audio/out with the audio cable to Local audio/in. Then connect audio/out via the audio cable
6. Almost done! Now connect the audio cable Local audio/out to the PC audio/in and Remote audio/out with the audio cable to the microphone

HAVE FUN – your kvm-tec Extender is now in use for many years (MTBF approx. 10 years)

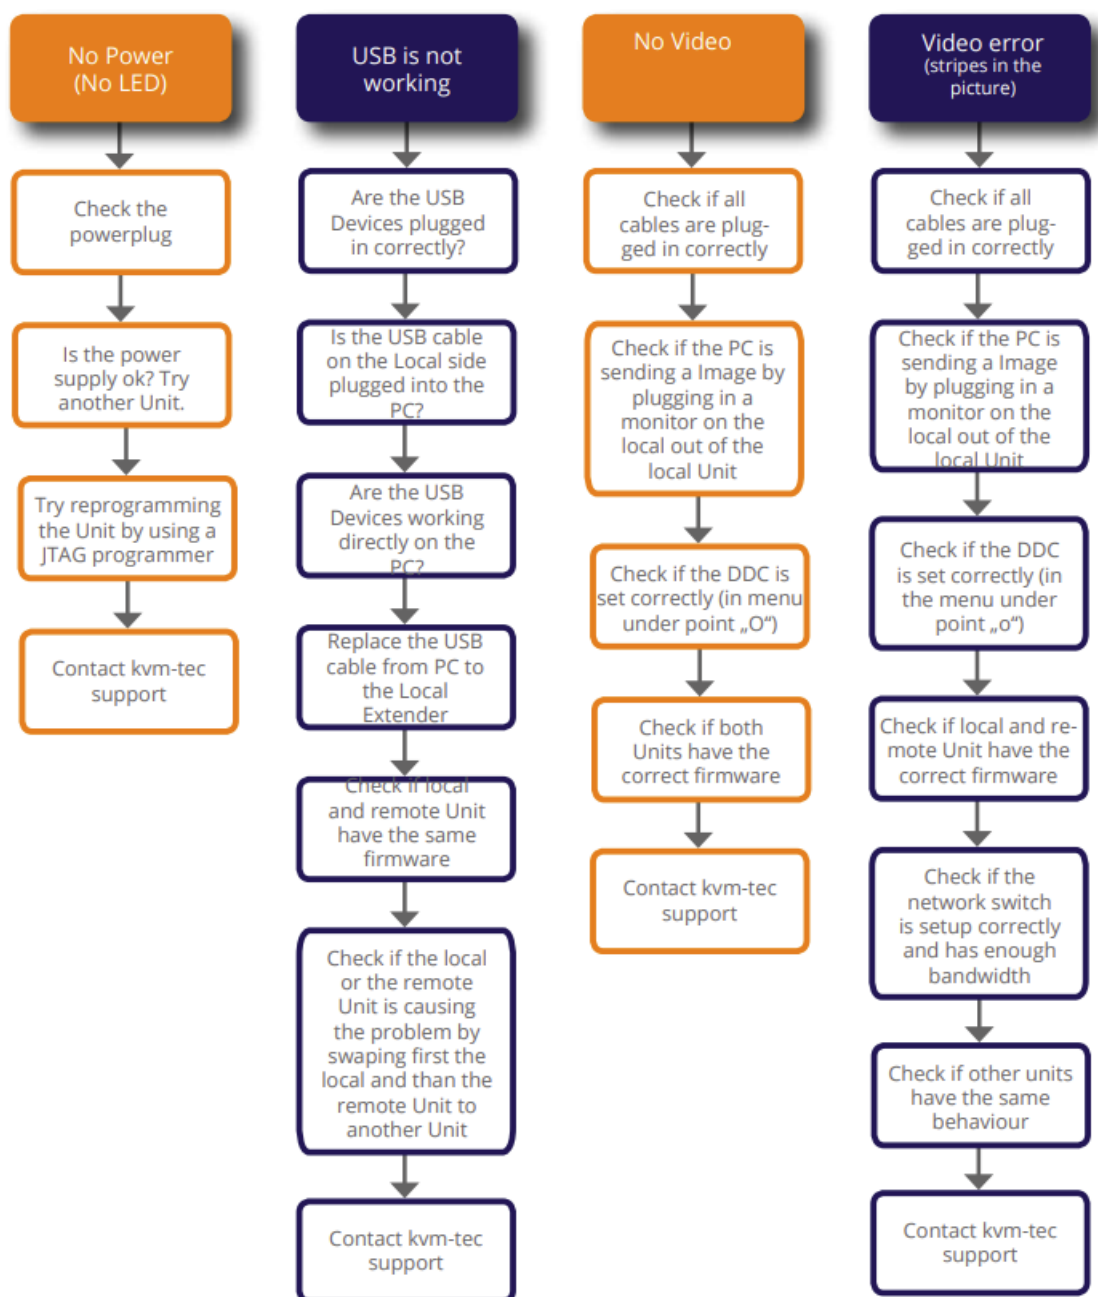

kvm-tec Support

support@kvm-tec.com

Phone: +43 2253 81912 – 30

We are here for you to answer your questions about installation?

Manual download www.kvm-tec.com

or

kvm-tec Installation channel on our homepage personally +43 2253 81912

kvm-tec
First Aid
MX



[kvm-tec 6711L Matrixline Full HD Extender over IP](#) [pdf] User Guide

6711L Matrixline Full HD Extender over IP, 6711L, Matrixline Full HD Extender over IP, Full HD Extender over IP, Extender over IP, over IP

References

- [Kvm-tec.com: KVM Extender over IP - Matrix Switching Systeme](#)

Manuals+,