



kvm-tec KT-6032L USBflex single fiber KVM Extender Installation Guide

[Home](#) » [kvm-tec](#) » kvm-tec KT-6032L USBflex single fiber KVM Extender Installation Guide 



kvm-tec First Aid
Quick Installation
KT-6032L CPU/LOCAL
KT-6032R CON/REMOTE
Full HD over IP
USB flex



Contents

- 1 Update with USB-Stick
- 2 Quick Installation USBflex Fibre
- 3 Documents / Resources
 - 3.1 References
- 4 Related Posts

Update with USB-Stick

Plug the USB stick with update file into USB Flex.

2. press the button on the back left (if PtP, the USB channel will be disconnected) ~ 4 sec

3. wait until LED flashes orange (USB stick is scanned for updates) ~ 10-20 sec

4. LED lights up specifically for 3 seconds

LED red -> no update on stick found (remove stick and start at step 1)


LED green -> Update found, ready to start

5. press button again

6. wait until the update is completed or an error occurs (for PtP local is updated first) ~ 2-3 min (PtP ~ 5-6 min)

While update is running, LED flashes green, if data is transferred or copied, LED flashes very fast.

At the end of the update, the LED flashes orange 4 more times and then starts the reboot process (the Extender must not be disconnected from the power supply during this process!)

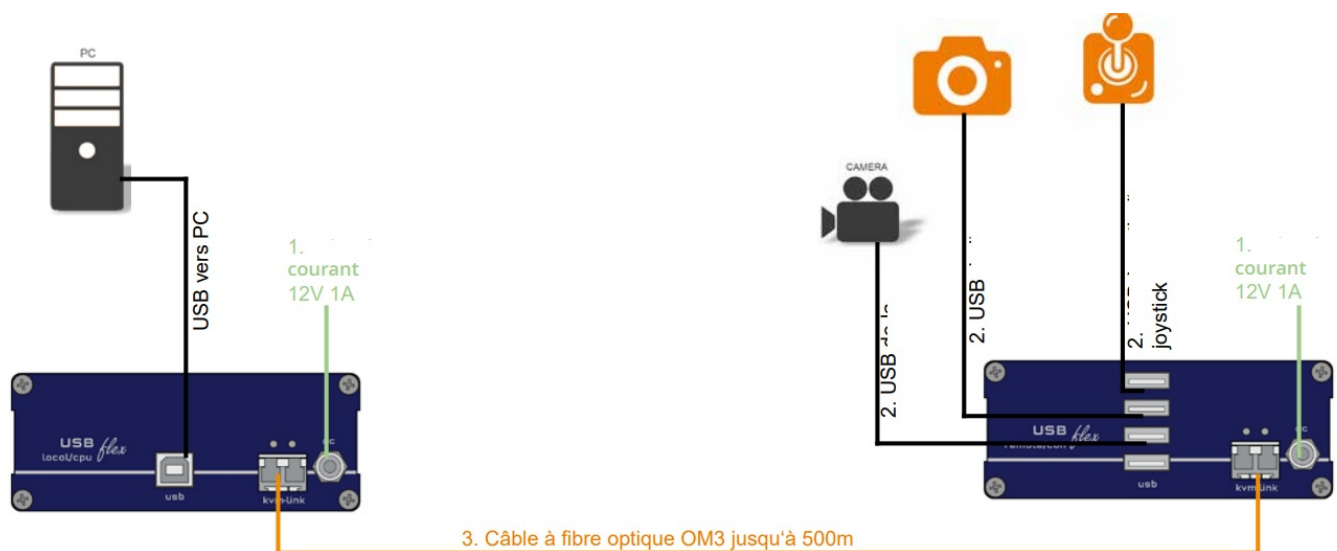

Quick Installation USBflex Fibre

local / CPU – remote/ CON

Check out our Installation Channel:



<http://www.kvm-tec.com/videos/videos-installation-channel>



kvm-tec Support
support@kvm-tec.com
Phone: +43 2253 81912 – 30

Documents / Resources



[kvm-tec KT-6032L USBflex single fiber KVM Extender](#) [pdf] Installation Guide
KT-6032L USBflex single fiber KVM Extender, KT-6032L, USBflex single fiber KVM Extender, single fiber KVM Extender, fiber KVM Extender, Extender

References

- [Kvm-tec.com: KVM Extender over IP - Matrix Switching Systeme](#)

Manuals+.