




kvm-tec KT-8121 SmartEasy Dual in Copper Instruction Manual

[Home](#) » [kvm-tec](#) » kvm-tec KT-8121 SmartEasy Dual in Copper Instruction Manual 



KT-8121 SmartEasy Dual in Copper V102022 Instruction Manual

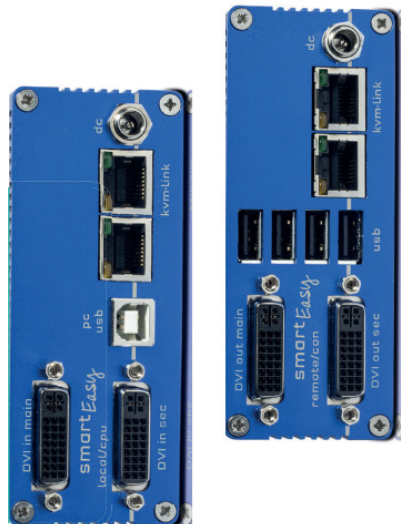

Contents

- 1 KT-8121 SmartEasy Dual in Copper
- 2 Delivery Content
- 3 Quick Installation smartEASY Dual local / CPU – remote / CON
- 4 ACCESS TO MAIN MENU
- 5 FEATURES
- 6 FRONTBRIDGING
- 7 BACKBRIDGING
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

KT-8121 SmartEasy Dual in Copper



Check out our Installation Channel:

<http://www.kvm-tec.com/videos/videos-installation-channel>

smartEasy

Dual in copper

Art Nr: KT – 8121

www.kvm-tec.com

FULL HD – KVM EXTENDER OVER IP

Tune in the easy KVM World




Full HD over IP

Öpen OSD menu

The OSD main menu is opened with the standard shortcut: 5 x ALT Gr (Attention: the first 20 seconds 5 x Scroll always works, in case the shortcut was forgotten.)

Switching list : CTRL+ALT+PRINT : CTRL+ALT+PRINT Changing the shortcuts in the OSD menu in the OSD menu Go to the Remote Settings and then navigate to Keyboard Shortcut.

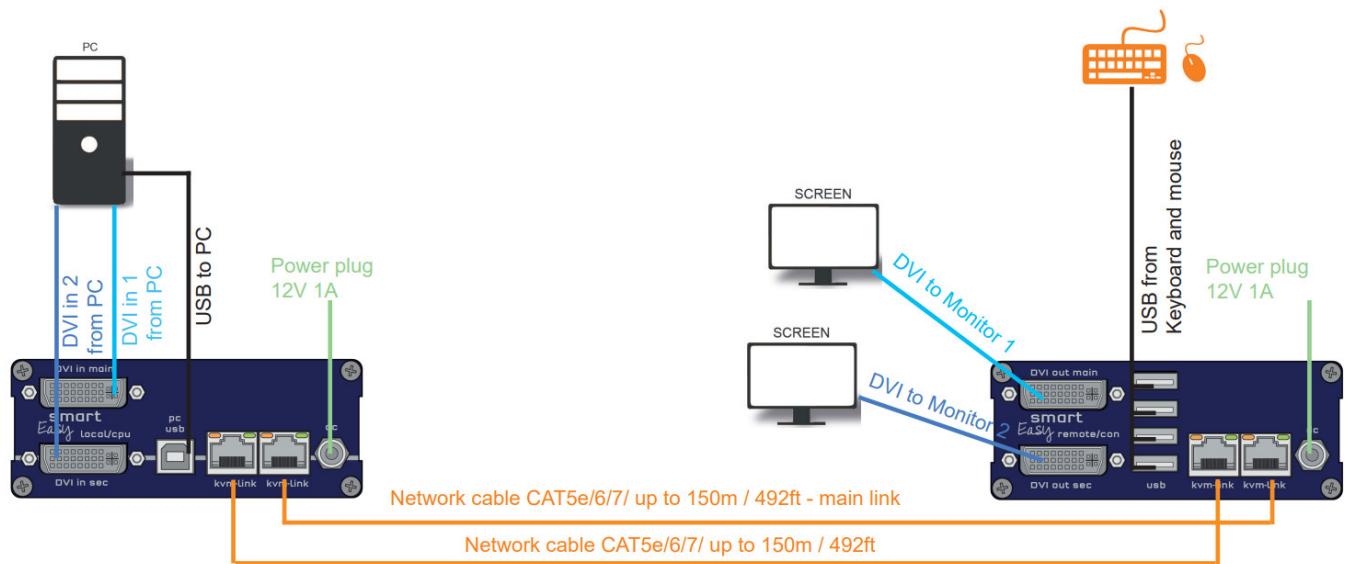

Delivery Content

LOCAL/CPU Unit

- 1 x SE2 local (CPU)
- 1 x wall power supply 12V 1A INT or (EU-plug)
- 2 x DVI – DVI cable 1,8m/5,9ft
- 1 x USB cable 1,8m/5,9 ft
- 4 x rubber feet

REMOTE/CON Unit

- 1 x SE2 remote (CON)
- 1 x wall power supply 12V 1A (EU-plug)
- 4 x rubber feet

Quick Installation smartEASY Dual local / CPU – remote / CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with the network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in 1).
5. Now connect the cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in 2). Then connect the monitor with the DVI cable to the CON / Remote Unit.
6. If you are using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping. (Layer 3)


HAVE FUN – your kvm-tec Extender is now in use for many years (MTBF approx 10 years)

ACCESS TO MAIN MENU

Use the monitor and the keyboard to access the main menu

Access to the main menu.

1. make sure the extenders, monitors, and computers are turned on.
2. Press the Scroll Lock button five times quickly. The main menu and an overview of the submenus are displayed.
3. To enter a submenu, press the corresponding key.

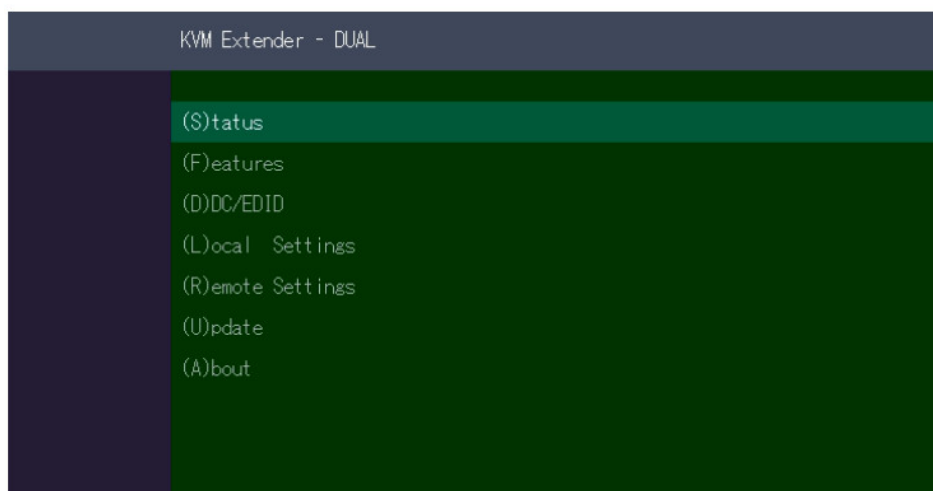

Main menu Short Cuts :

S Status Overview	Menu Status / current Status
U Update Flash FW	Firmware update
F Features Overview	Settings Features
D DDC Option	DDC Option Fix
L Local Settings	Settings Local
R Remote Settings	Settings Remote
A About Overview	Exit

Key „Esc“

DISPLAYING THE FIRMWARE VERSION

Make sure that the main menu is open. Under „A“ – About the currently installed firmware version of the remote (CON) and local (CPU) extender is displayed

FEATURES

Press the F key to enter the Features menu.
Switching mode is set by default

Features		
(S)tatus	◦ P Point to Point Mode	
(F)eatures	• M Matrix Switching Mode	
(D)DC/EDID	◦ D Freeze last image	
(L)ocal Settings	◦ E USB Emulation Mode	
(R)emote Settings	• S USB Save Feature (Mass Storage / Webcam disabled)	
(U)pdate	• X Easy Manager	
(A)bout	C Diagnosis	>
	U Unlock Feature	>
	I IP Management	>






FRONTBRIDGING

HARDWARE: 2 SINGLE LOCAL + 1 X DUAL REMOTE

The „Status Menu“ displays the current status of the extender connection. The menu shows the information about the connection, the resolution of the video channel and the USB status.

The link status shows if a connection is possible. Connected shows if the kvm fi les can currently be transferred.

Video and USB show if data is currently being transferred


System Status - DUAL		Frontbridge	
(S)tatus		 1G Link Primary Link Up (in use)	 1G Link Secondary Link Up
(F)eatures		Link KVM Connection Frontbridge	Link KVM Connection Frontbridge
(D)DC/EDID		 Resolution 1920x1080 EDID Elgato DVI Primary(in use)	 Resolution 1920x1080 EDID OMEN by HP 25 DVI Secondary
(L)ocal Settings		Video	Video
(R)emote Settings		 USB from PC Active USB Mode Emulation USB 1.1	Embedded Audio Primary Connected
(U)pdate			
(A)bout			

BACKBRIDGING

HARDWARE: 1 X DUAL LOCAL + 2 X SINGLE REMOTE


The „Status Menu“ displays the current status of the extender connection. The menu shows the information about the connection, the resolution of the video channel and the USB status. The link status shows if a connection is possible. Connected shows if the kvm fi les can currently be transferred.

Video and USB show if data is currently being transferred

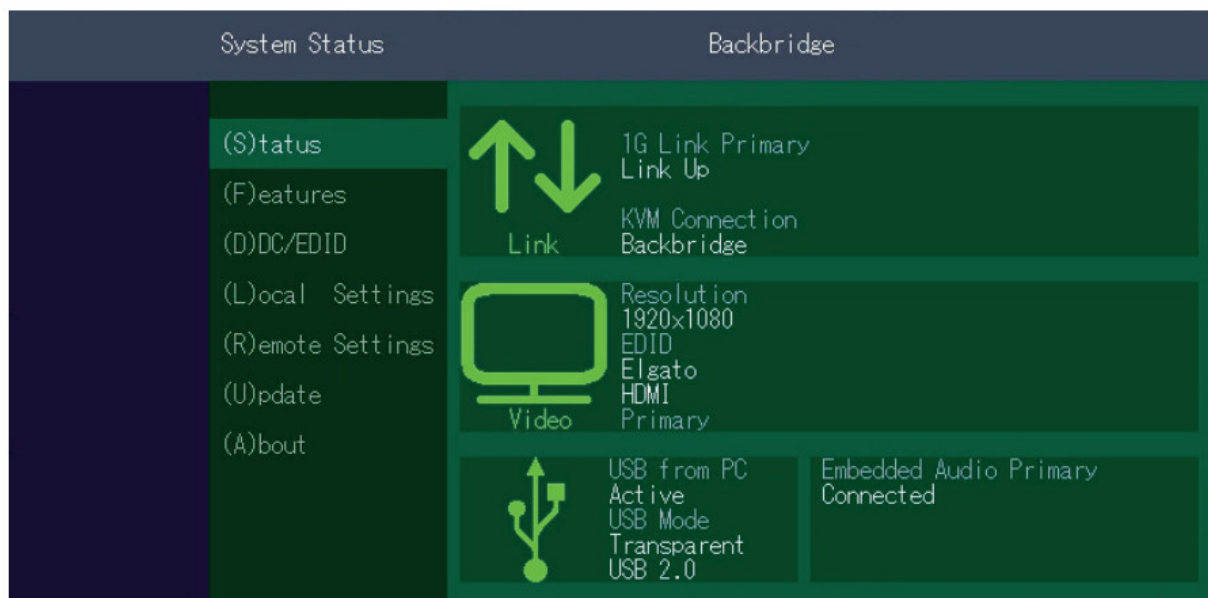

KVM-TEC	KVM-TEC ASIA	IHSE GmbH	IHSE USA LLC	IHSE GMBH Asia	IHSE China Co., Ltd
Gewerbepark Mitterfeld 1 A 2523 Tattendorf Austria www.kvm-tec.com	p +9173573 2020 4 sales.apac@kvm-tec.com KVM-TEC CHINA – P + 86 1360 12 2 8145 chinasales@kvm-tec.com www.kvm-tec.com	Benzstr.1 88094 Oberteuringen Germany www.ihse.com	1 Corp.Dr.Suite Cranbury NJ 08512 USA www.ihseusa.com	158Kallang Way,#07-13A 349245 Singapore www.ihse.com	Room 814 Building 3, Kezhu Road Guangzhou PRC www.ihse.com.cn

kvm-tec First Aid smartEASY

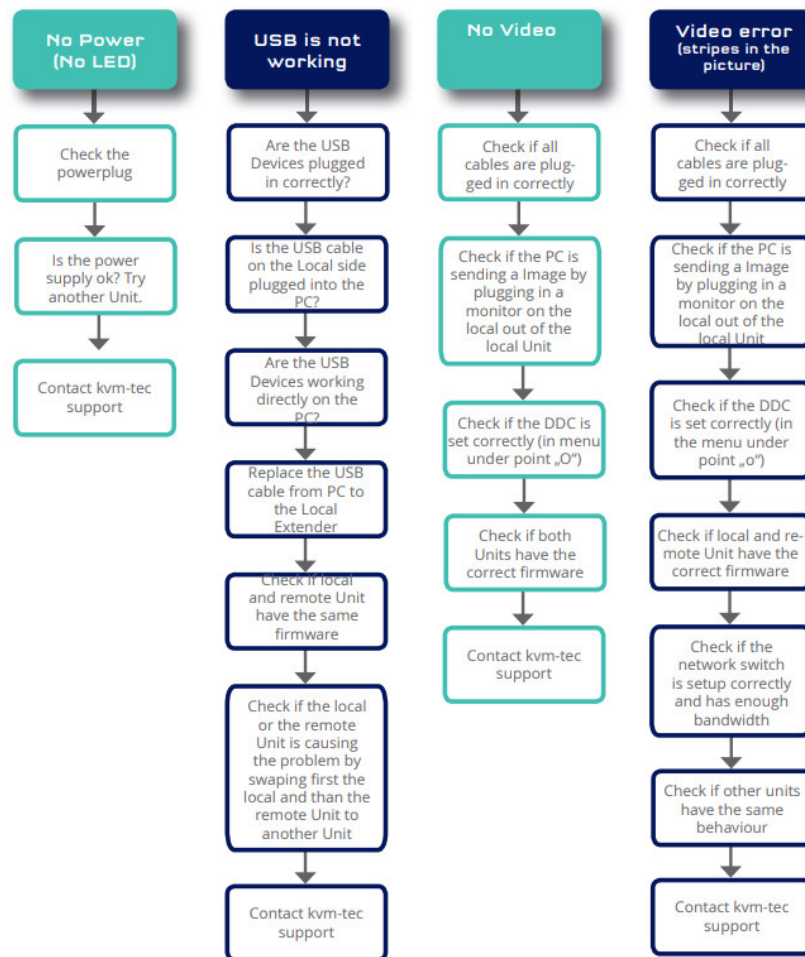

kvm-tec Support

support@kvm-tec.com

Phone: +43 2253 81912 – 30

**We are here for you to answer
your questions about installation?**

Manual download www.kvm-tec.com

or

kvm-tec Installationchannel on our homepage
personally +43 2253 81912

Misprints, errors and technical changes reserved



Documents / Resources



[kvm-tec KT-8121 SmartEasy Dual in Copper](#) [pdf] Instruction Manual
KT-8121 SmartEasy Dual in Copper, KT-8121, SmartEasy Dual in Copper, Copper

References

- [TEC - Residential and Business Internet, Voice, and Security](#)
- [Technology leader made in Germany | IHSE - KVM & Beyond](#)
- [IHSE - KVM -IP KVM - KVM -IHSE](#)
- [Home - IHSE](#)

- [Kvm-tec.com: KVM Extender over IP - Matrix Switching Systeme](https://www.kvm-tec.com/)

Manuals+.