



## kvm-tec meida4Kconnect Extender Installation Guide

[Home](#) » [kvm-tec](#) » kvm-tec meida4Kconnect Extender Installation Guide 



### meida4Kconnect Extender Installation Guide



### media4Kconnect

- 6940 SET media4Kconnect 12G SDI
- 6940L CPU/Local media4Kconnect 12G SDI



<http://www.kvm-tec.com/videos/videos-installation-channel>



## Contents

- 1 Delivery Content
- 2 meida4Kconnect Extender
- 3 Documents / Resources
  - 3.1 References
- 4 Related Posts

## Delivery Content


### LOCAL/CPU Unit

1. 1 x Media4Kconnect 12G SDI local (CPU)
2. 1 x 12VDC 2A power supply
3. 1 x BNC-BNC cable 2m/6.5ft
4. 1 x USB A-cable 1.8m/5.9ft
5. 1 x SFP+Multimode up to 300m/984ft alt. SFP Single Mode up to 10km/6.2mi
6. 4 x rubber feet

### meida4Kconnect Extender

#### FIBERCABLE

Please also use an OM4 cable to have enough bandwidth

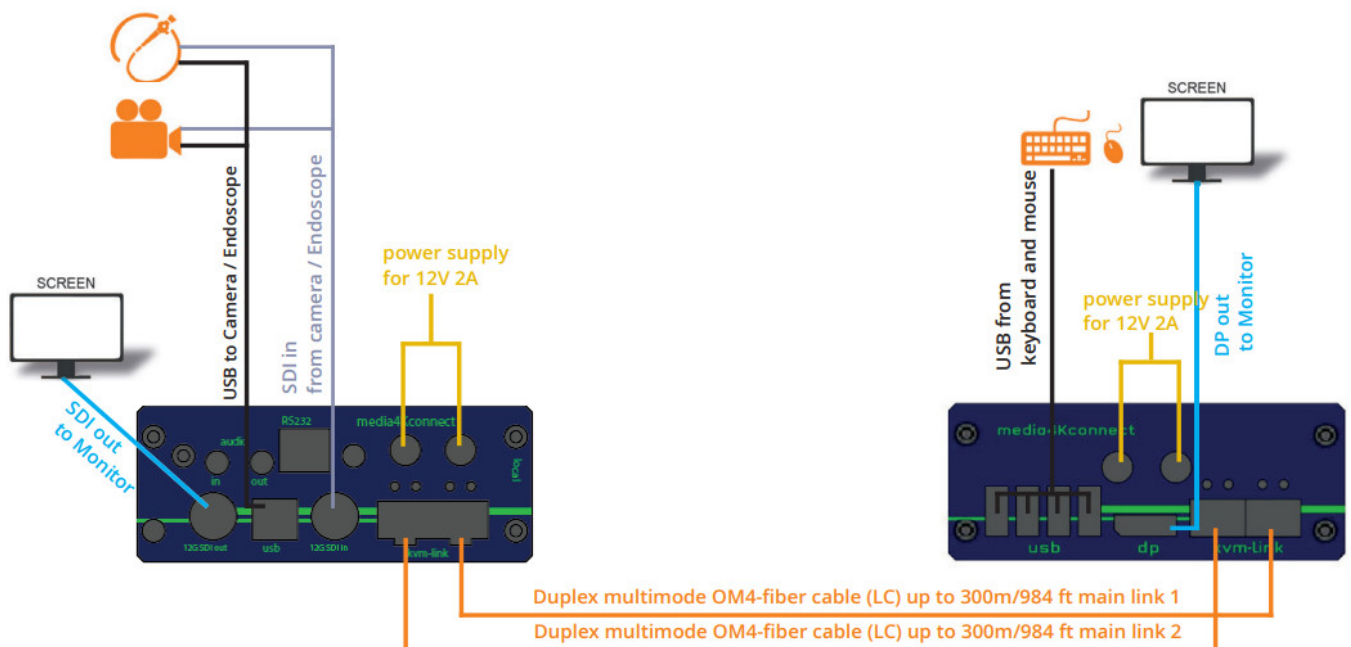

1. Connect the CON/Remote and the CPU/Local Unit with the supplied 12V 2A power supply.
2. Now connect the USB cable to a USB socket of your PC and connect the other end of the USB cable to the Local Unit. Connect the keyboard and mouse to the Remote Unit.
3. Connect the Local and the Remote Unit with a network fiber cable.
4. Connect the DP cable to the DP socket of the PC to the DP socket SDI/in of the Local device and connect the screen on the remote side with the DP cable.

HAVE FUN – Your kvm-tec Extender is now in use for many years (MTBF approx. 10 years)!





We are here for you to answer your questions about installation?

Manual download [www.kvm-tec.com](http://www.kvm-tec.com)  
 or kvm-tec Installationchannel on our homepage  
 personally +43 2253 81912



## Documents / Resources



[kvm-tec meida4Kconnect Extender](#) [pdf] Installation Guide  
 meida4Kconnect Extender, meida4Kconnect, Extender

## References

- [Kvm-tec.com: KVM Extender over IP - Matrix Switching Systeme](https://kvm-tec.com/)

Manuals+.