



kvm-tec V102022 smart Easy Full HD KVM Extender Over IP Instructions

 
[Home](#) » [kvm-tec](#) » kvm-tec V102022 smart Easy Full HD KVM Extender Over IP Instructions 

Contents


- 1 [kvm-tec V102022 smart Easy Full HD KVM Extender Over IP](#)
- 2 [First Aid smartEASY](#)
- 3 [Delivery Content](#)
- 4 [CONNECTION](#)
 - 4.1 [Quick Installation smartEASY Single local / CPU – remote / CON](#)
- 5 [ACCESS TO MAIN MENU](#)
- 6 [DISPLAYING THE FIRMWARE VERSION](#)
- 7 [FRONTBRIDGING](#)
- 8 [BACKBRIDGING](#)
- 9 [KVM-TEC](#)
- 10 [kvm-tec Support](#)
- 11 [Documents / Resources](#)
 - 11.1 [References](#)
- 12 [Related Posts](#)

kvm tec

kvm-tec V102022 smart Easy Full HD KVM Extender Over IP

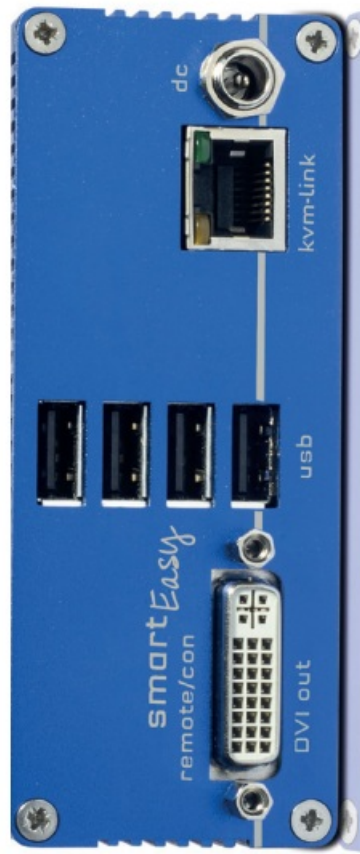

First Aid smartEASY

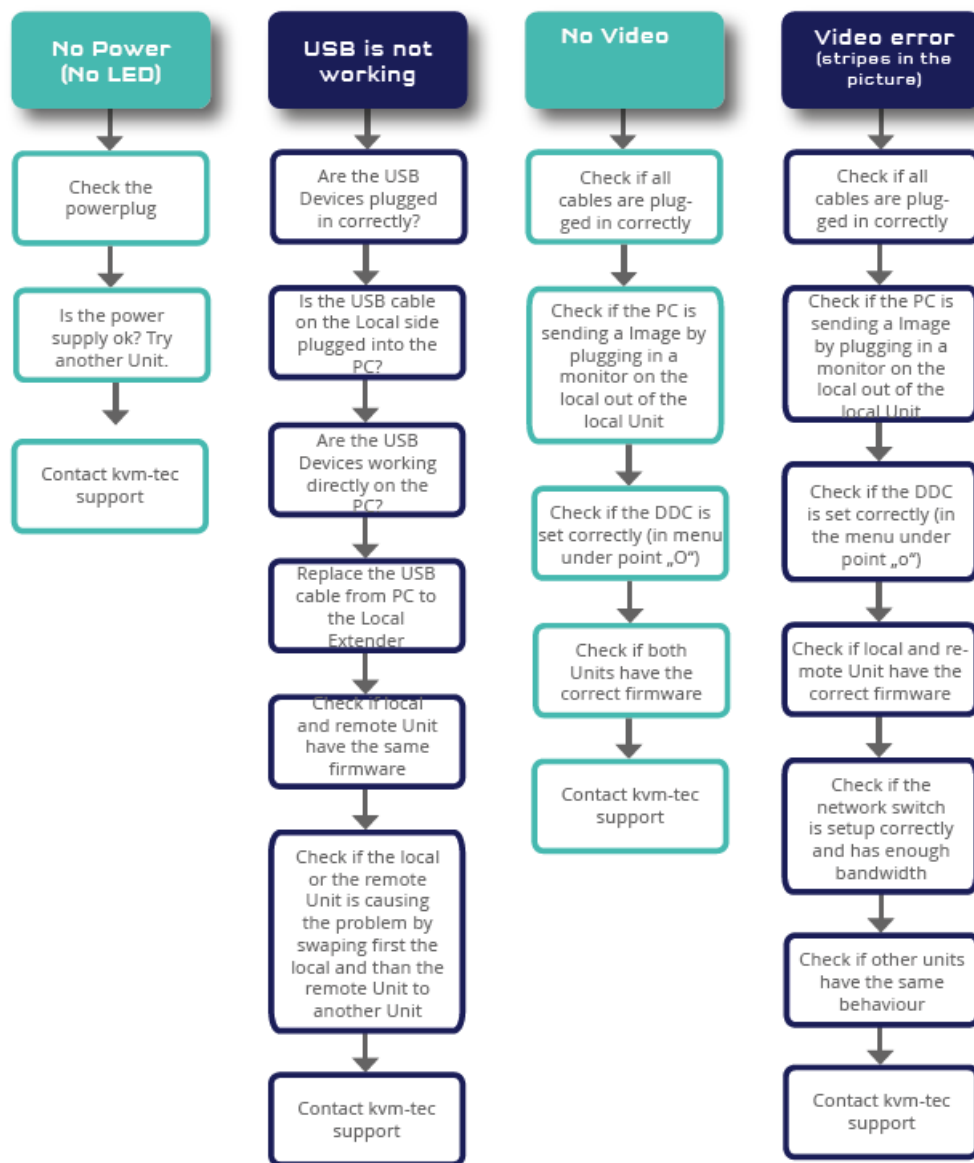 

Delivery Content

LOCAL/CPU Unit

- 1 x SE1 local (CPU)
- 1 x wall power supply| 12V 1A (INT or EU-plug)
- 2 x DVI – DVI cable 1,8m/5.9ft
- 1 x USB canle 1,8m/5.9ft
- 4 x rubber feet

REMOTE/CON Unit

- 1 x SE1 remote (CON)
- 1 x wall power supply| 12V 1A (INT or EU-plug)
- 4 x rubber feet

 
Öpen OSD menu

- The OSD main menu is opened with the standard shortcut: 5 x ALT Gr

(**Attention:** the first 20 seconds 5 x Scroll always works, in case the shortcut was forgotten.)

- **Switching list:** CTRL+ALT+PRINT
- **Changing the shortcuts:** in the OSD menu Go to the Remote Settings and then navigate to Keyboard Shortcut.

CONNECTION

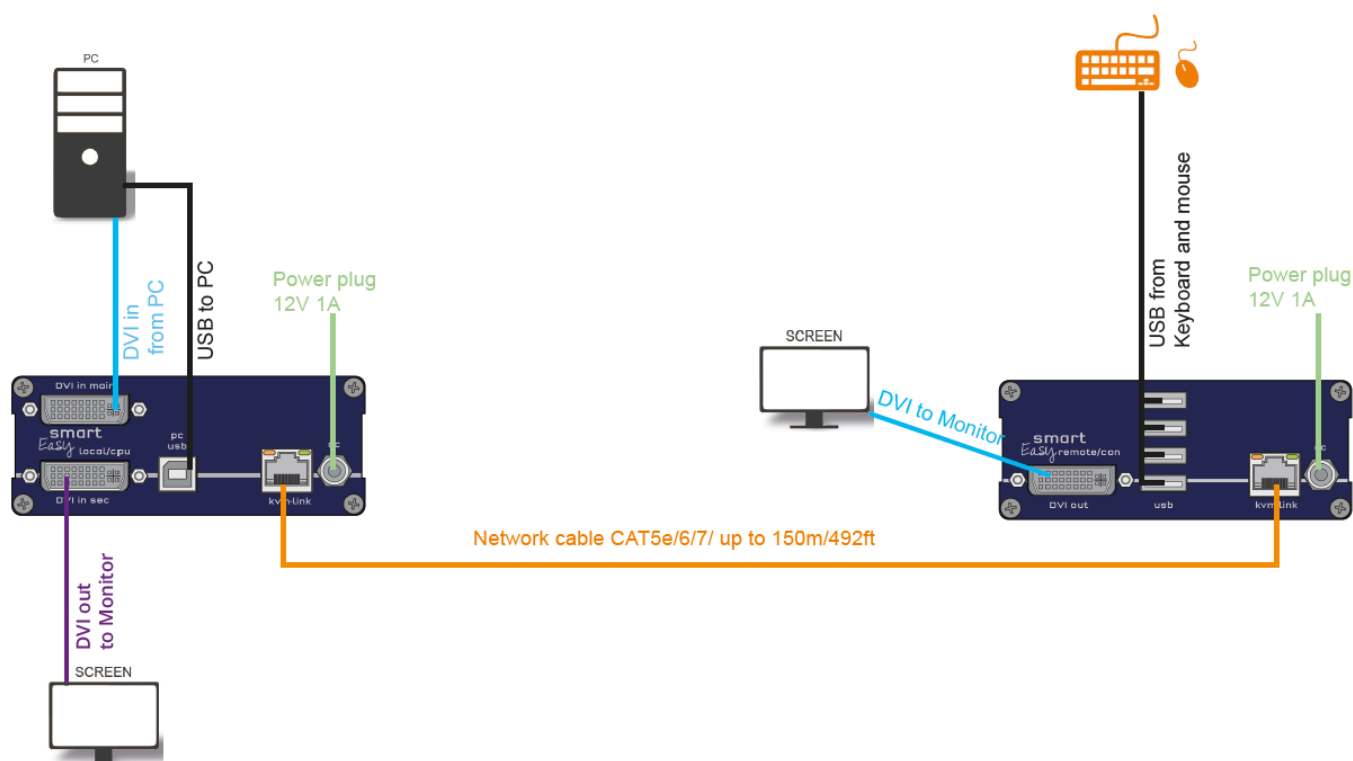

Quick Installation smartEASY Single local / CPU – remote / CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in). Then connect the monitor with the DVI cable to the CON / Remote Unit.
5. If you are using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping (Layer3)

HAVE FUN – your kvm-tec Extender is now in use for many years (MTBF approx 10 years)

 
ACCESS TO MAIN MENU

Use the monitor and the keyboard to access the main menu

Access to the main menu

1. make sure the extenders, monitors, and computers are turned on.
2. Press the Scroll Lock button five times quickly. The main menu and an overview of the submenus are displayed.
3. To enter a submenu, press the corresponding key.

Main menu Short Cuts

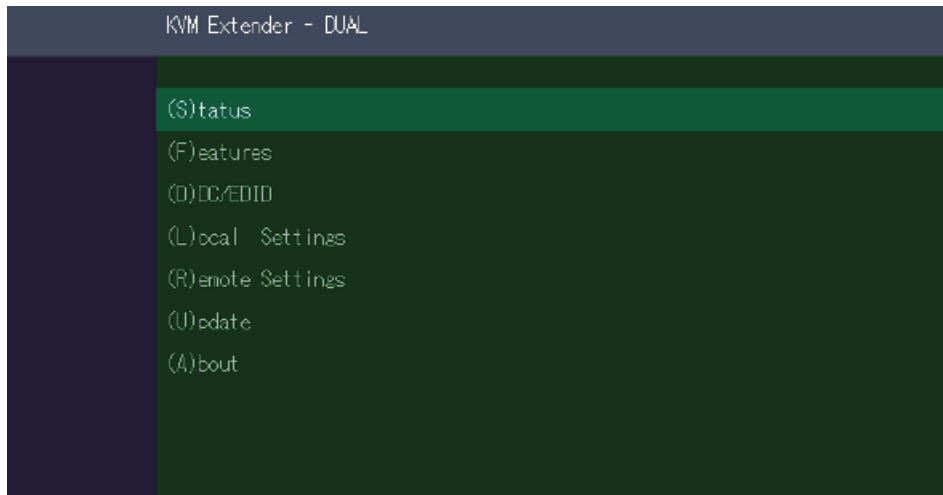

- **S:** Status Overview
- **U:** Update Flash FW
- **F:** Features Overview
- **D:** DDC Option
- **L:** Local Settings
- **R:** Remote Settings
- **A:** About Overview
- Key,Esc”

 
DISPLAYING THE FIRMWARE VERSION

Make sure that the main menu is open. Under „A“ – About the currently installed firmware version of the remote (CON) and local (CPU) extender is displayed.

FEATURES

Press the F key to enter the Features menu. Switching mode is set by default


Menu Status/ current Status

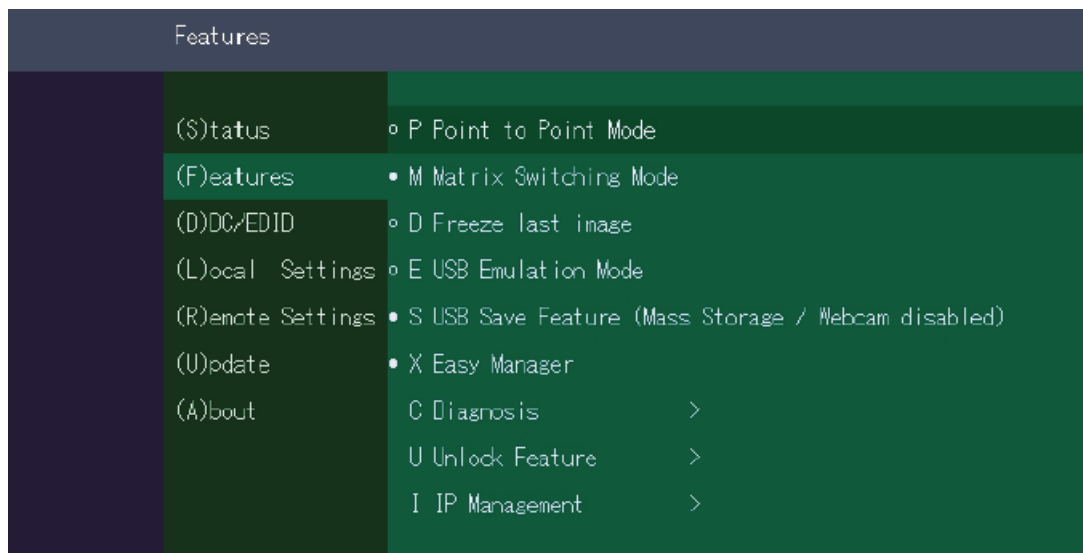

- Firmware update
- Settings Features
- DDC Option Fix
- Settings Local
- Settings Remote
- Exit

FRONTBRIDGING

 
HARDWARE: 2 SINGLE LOCAL + 1 X DUAL REMOTE

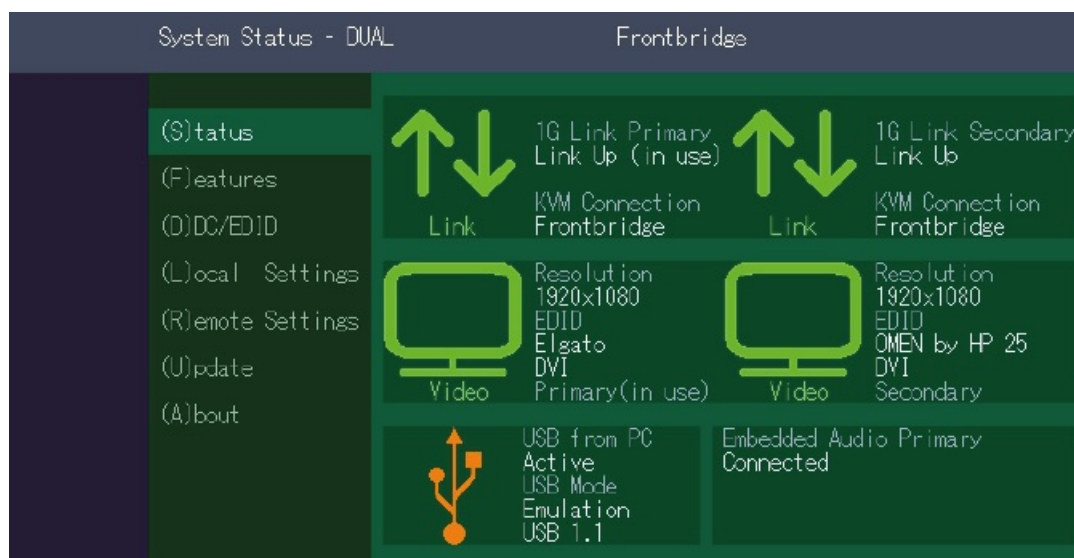

- The „Status Menu“ displays the current status of the extender connection. The menu shows information about the connection, the resolution of the video channel and the USB status.
- The link status shows if a connection is possible. Connected shows if the kvm files can currently be transferred.
- Video and USB show if data is currently being transferred.

BACKBRIDGING

 HARDWARE: 1 X DUAL LOCAL + 2 X SINGLE REMOTE

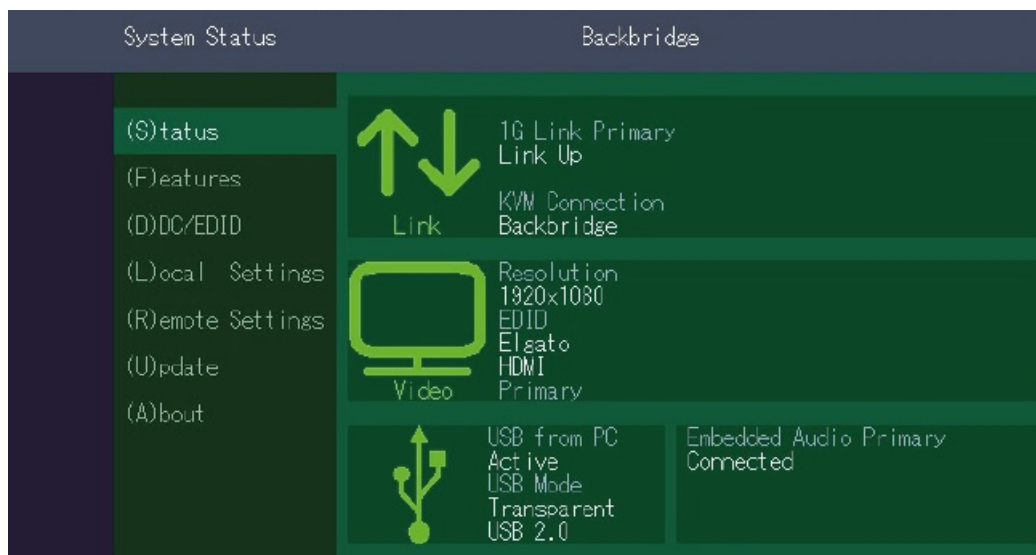

- The „Status Menu“ displays the current status of the extender connection. The menu shows the information about the connection, the resolution of the video channel and the USB status.
- The link status shows if a connection is possible. Connected shows if the kvm data can currently be transferred.
- Video and USB show if data is currently being transferred.

KVM-TEC

- Gewerbepark
- Mitterfeld 1 A 2523 Tattendorf Austria
- www.kvm-tec.com

KVM-TEC ASIA

- p +9173573 20204
- sales.apac@kvm-tec.com

KVM-TEC CHINA

- P + 86 1360 122 8145
- chinasales@kvm-tec.com
- www.kvm-tec.com

IHSE GmbH

- Benzstr.1 88094 Oberteuringen Germany
- www.ihse.com

IHSE USA LLC

- 1 Corp.Dr.Suite Cranburry NJ 08512 USA
- www.ihseusa.com

IHSE GMBH Asia

- 158KallangWay,#07-13A 349245 Singapore
- www.ihse.com

IHSE China Co.,Ltd

- Room 814 Building 3, Kezhu Road Guangzhou PRC
- www.ihse.com.cn

Check out our Installation Channel



kvm-tec Support

- support@kvm-tec.com
- **Phone:** +43 2253 81912 – 30

We are here for you to answer your questions about installation?

Manual download www.kvm-tec.com

kvm-tec Installationchannel on our homepage personally +43 2253 81912






Misprints, errors and technical changes reserved

Documents / Resources



[kvm-tec V102022 smart Easy Full HD KVM Extender Over IP](#) [pdf] Instructions
 V102022, smart Easy Full HD KVM Extender Over IP, V102022 smart Easy Full HD KVM Extender Over IP, smart Easy, Full HD KVM Extender Over IP, Full HD KVM Extender, HD KVM Extender Over IP, KVM Extender Over IP, Extender Over IP

References

-  [TEC - Residential and Business Internet, Voice, and Security](#)
-  [Technology leader made in Germany | IHSE - KVM & Beyond](#)
-  [IHSE - KVM -IP KVM - KVM -IHSE](#)
-  [Home - IHSE](#)
-  [Kvm-tec.com: KVM Extender over IP - Matrix Switching Systeme](#)

Manuals+.