

**kwikset  
vert  
art  
k  
version**



#### Contents


- [1 Kwikset Convert Smart Lock Conversion Kit](#)
- [2 Tools needed](#)
- [3 Parts in the box](#)
- [4 INSTALLATION INSTRUCTIONS](#)
- [5 Kwikset Convert at a Glance](#)
- [6 Status LED Notifications](#)
- [7 Network Information](#)
- [8 Important Safeguards](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

# **Kwikset**









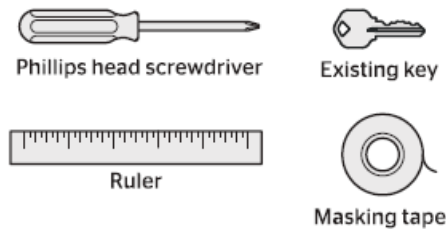





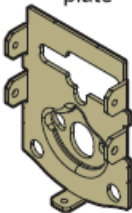

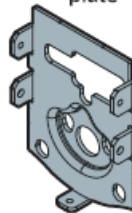
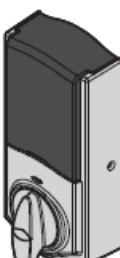

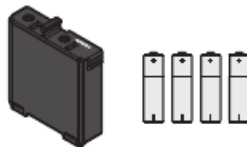
## Kwikset Convert Smart Lock Conversion Kit



### Tools needed




## Parts in the box

Kit "A" (5066143)	Kit "B" (5066145)	Kit "C" (5066144)
<p><b>Black mounting plate</b></p>  <p><b>Black adapter</b></p> 	<p><b>Gold mounting plate</b></p>  <p><b>Gold adapter</b></p>  <p><b>Black adapter</b></p> 	<p><b>Silver mounting plate</b></p>  <p><b>Silver adapter</b></p>  <p><b>Gold adapter</b></p> 
<p><b>Mounting plate screws</b></p>  <p><b>Interior assembly screws</b></p>  <p><b>Interior cover screws</b></p> 	<p><b>Mounting plate screws</b></p>  <p><b>Interior assembly screws</b></p>  <p><b>Interior cover screws</b></p> 	<p><b>Mounting plate screws</b></p>  <p><b>Interior assembly screws</b></p>  <p><b>Interior cover screws</b></p> 
<p><b>Interior cover</b></p> 	<p><b>Interior assembly</b></p> 	<p><b>Battery pack and 4 AA batteries</b></p> 


## INSTALLATION INSTRUCTIONS

### Prepare your door


- A.** Make sure your existing deadbolt is compatible. If you have a standard deadbolt mounted separately from the handle below it, it is compatible with Kwikset Convert.

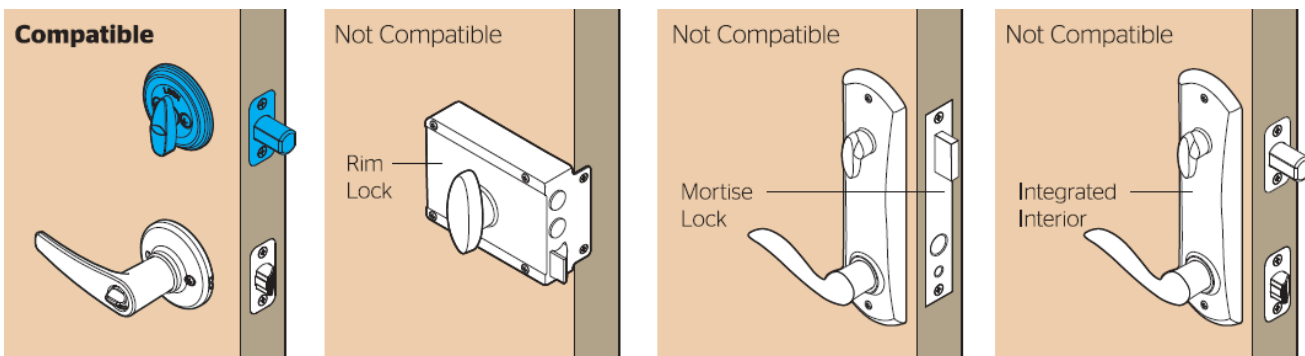


- B.** Make sure your door is aligned before proceeding with installation.

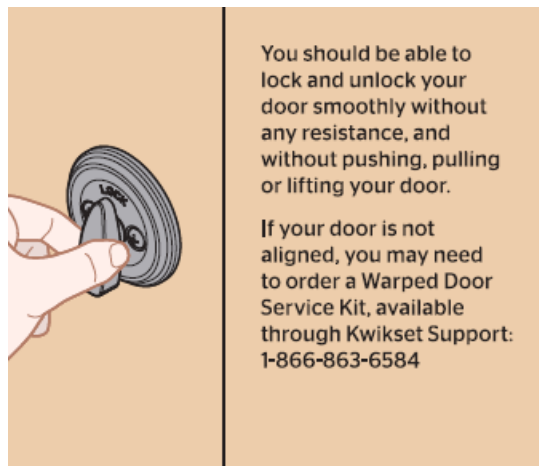


- **C.** Measure to confirm that your door is either 1-3/8" or 1-3/4" (35 mm or 44 mm) thick.

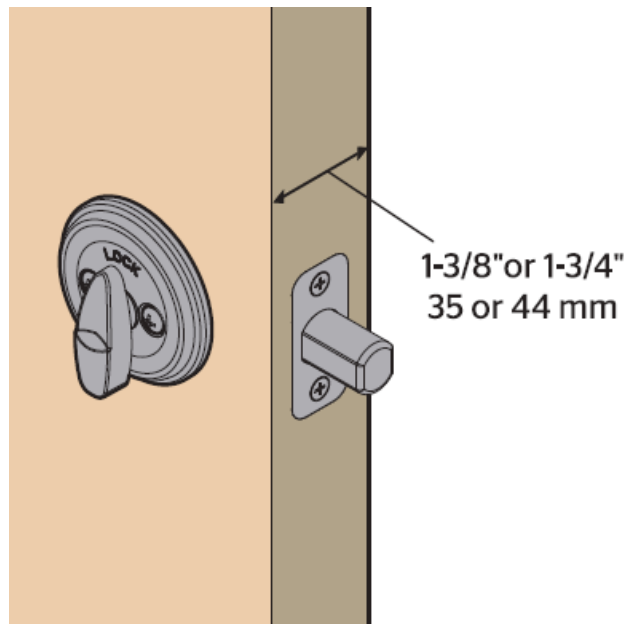


- **D.** Make sure your door is open and extend your latch bolt. Make sure your key is NOT in the deadbolt exterior.

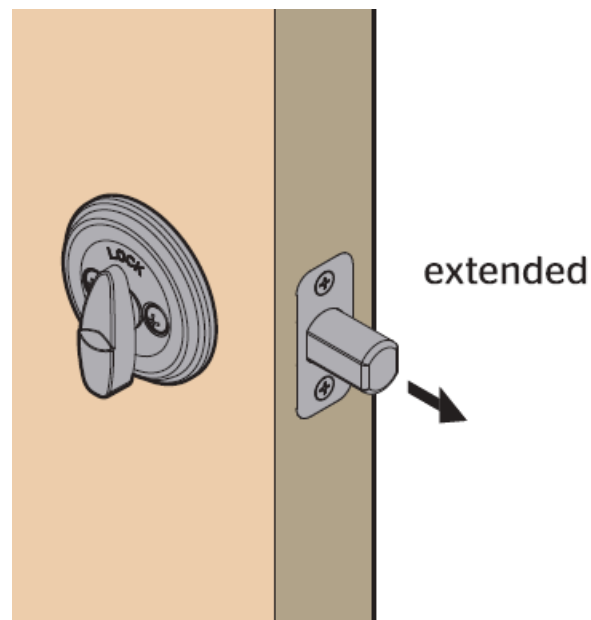

- **E.** Secure your deadbolt exterior with masking tape.

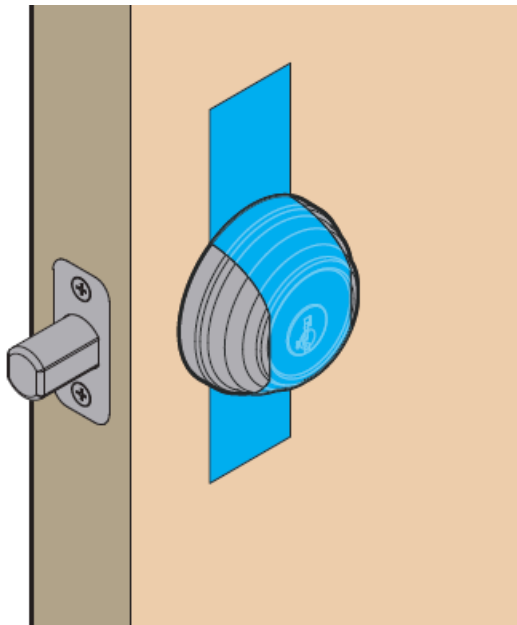

- **F.** Remove all existing deadbolt hardware from the interior side of your door.

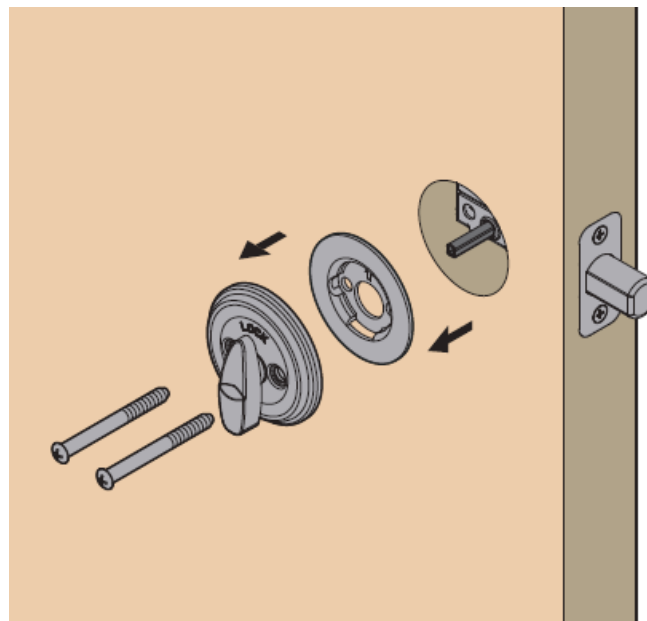


**Determine the parts needed for your door**


For a list of compatible deadbolt models, please see the Kwikset Convert page at [www.kwikset.com](http://www.kwikset.com).

**NOTE:** You will only use one of the three provided kits. To determine which kit you should use, look at the hole in your door. What shape is your torque blade (the part sticking out through the latch)?


**D-shape**

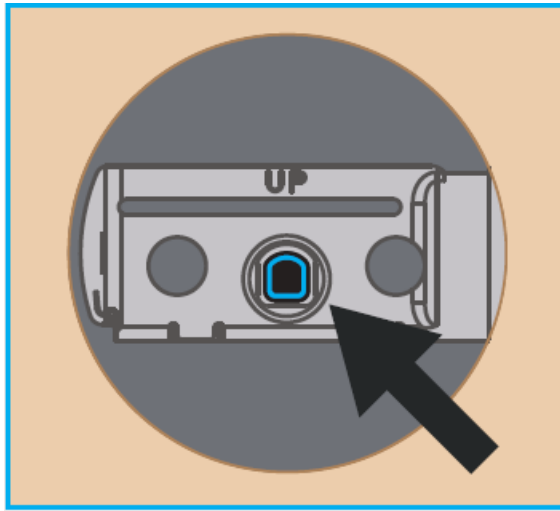


**Kwikset and Weiser deadbolts:** "A":66143)focym dooc.

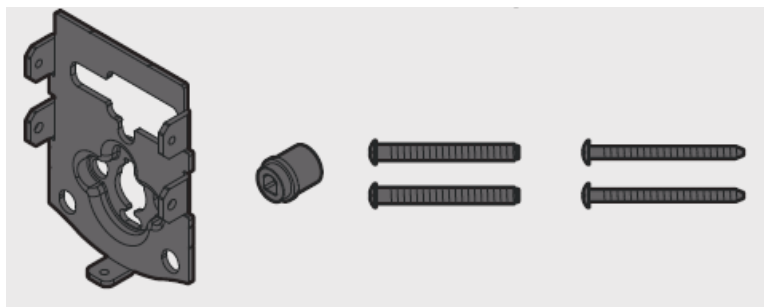


**Baldwin Reserve and Baldwin Prestige deadbolts:** Use kit "B" (5066145) for your door. You will need the black adapter and the thicker gold screws.

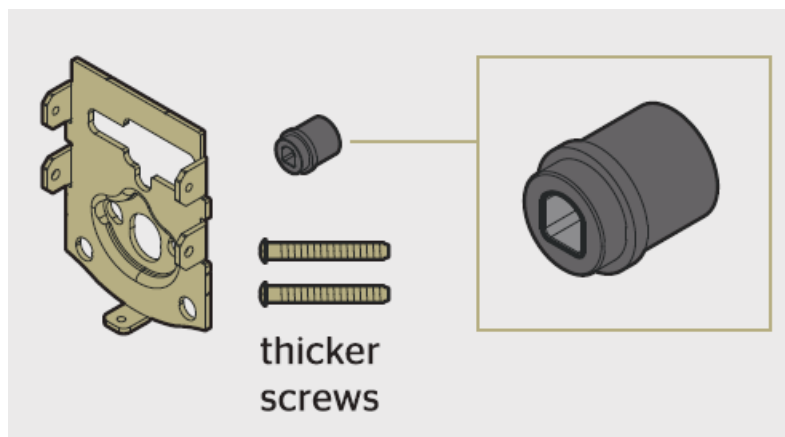


**Vertical rectangle**

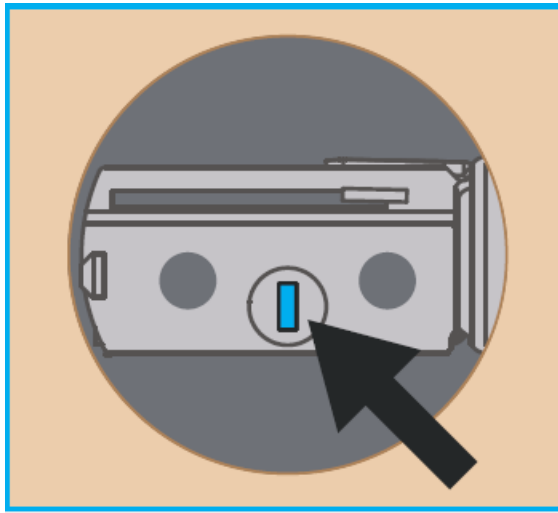


**Baldwin Estate deadbolts:** Use kit “B” (5066145) for your door. You will need the gold adapter and the thinner gold screws.

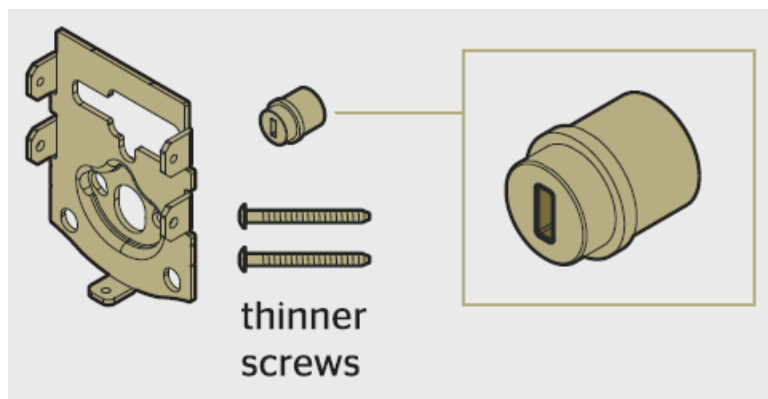


**Slanted rectangle**

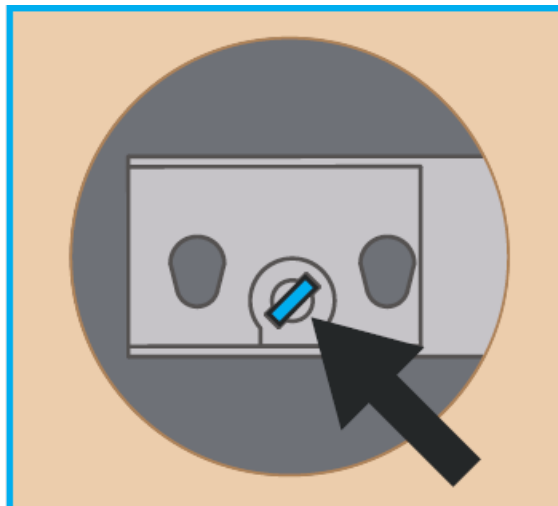


**Schlage deadbolts:** Use kit “C” (5066144) for your door. You will need the silver adapter.

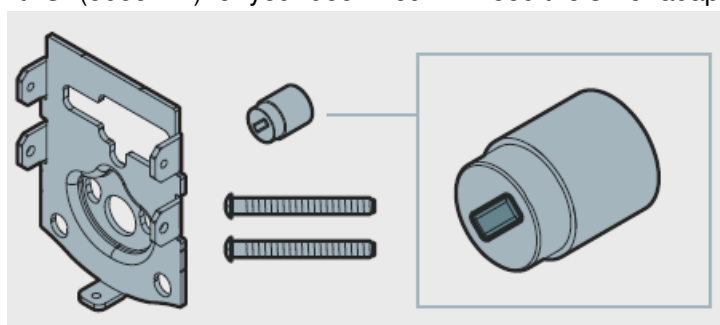

## Horizontal rectangle


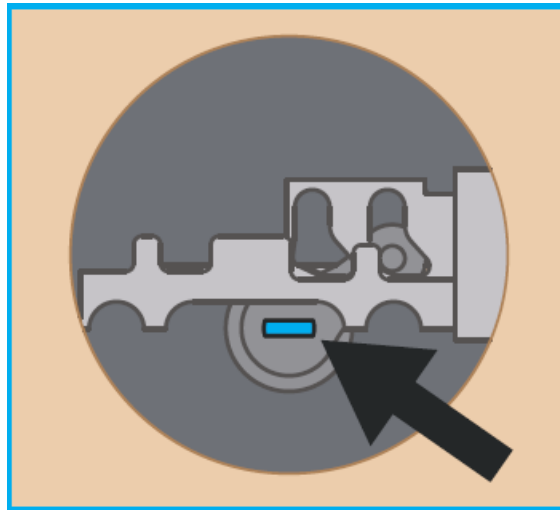


**Schlage deadbolts:** Use kit "C" (5066144) for your door. You will need the gold adapter.

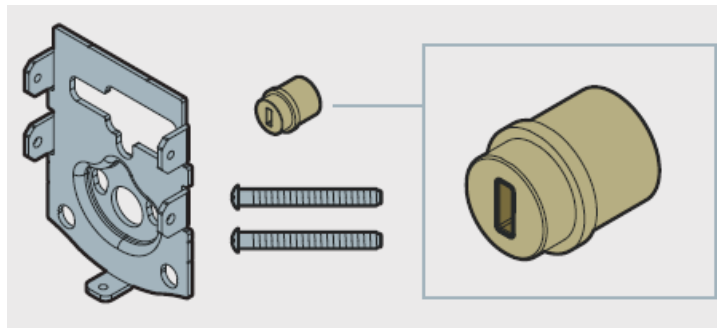


## Install the mounting plate and test your latch

- **A.** Place the mounting plate on the door so that the torque blade inserts through the center hole.

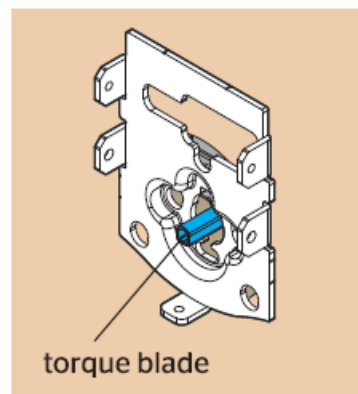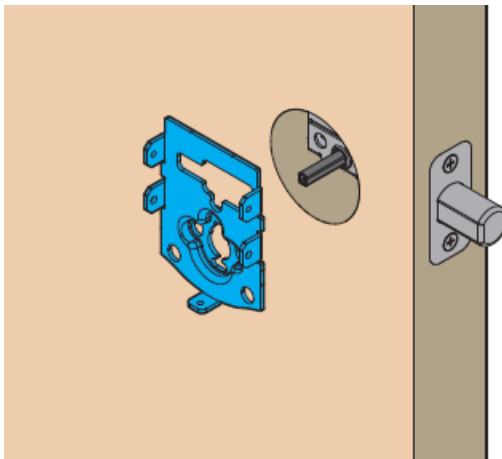

- **Note:** AD-shaped torque blade is shown, but installation is the same for all models.
- **B.** Secure the mounting plate with the mounting screws.

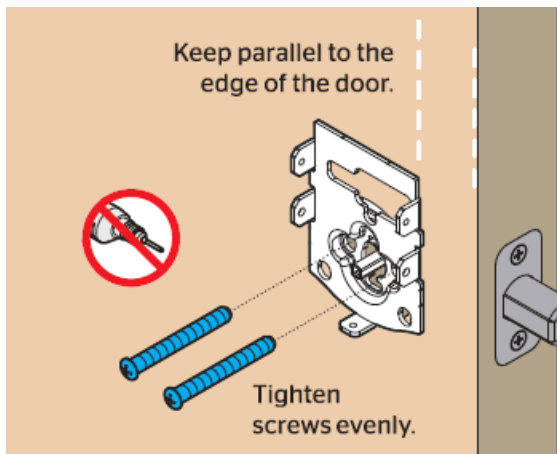

**Baldwin, Kwikset, & Weiser:**

To determine which mounting screws to use, test one of the thicker screws first.


If the thicker screw fits, continue installing the thicker screws.

If the thicker screw doesn't fit, install the thinner screws.

- **C.** Remove the masking tape from the exterior deadbolt, and insert your key and test the latch for smooth operation.




- **D.** Remove your key and make sure the bolt is fully extended.

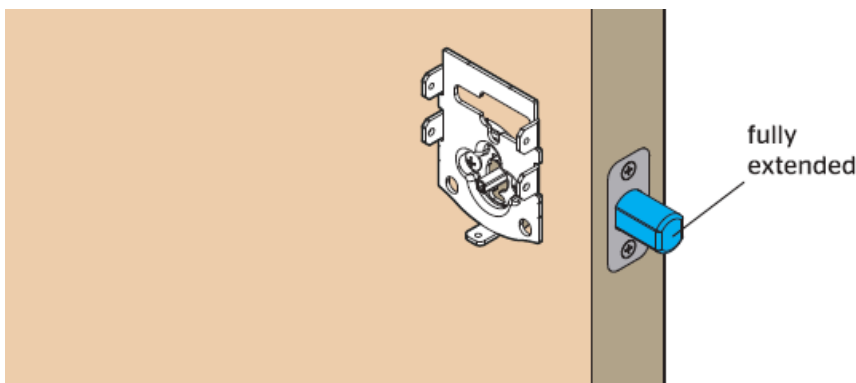

**Install the interior assembly**

- **A.** Remove the interior cover and battery pack.
  - **A.** Make sure the turn piece is in the vertical position.

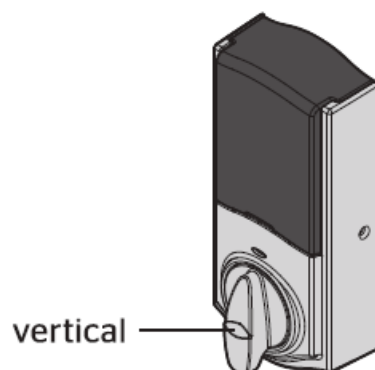


- If the turnpiece shaft is pointing down, place the cover back onto the interior assembly and rotate the turnpiece until you hear it click. You may need to apply some force. Once the turnpiece shaft is




correctly oriented, remove the cover again.


- **B.** Remove the interior cover.

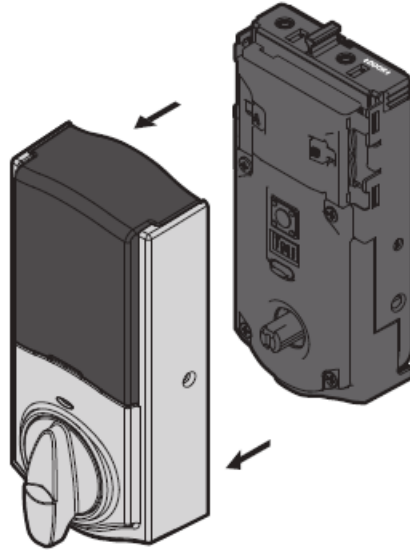


- **C.** Make sure shaft is oriented as shown. If needed, rotate the shaft to this position.

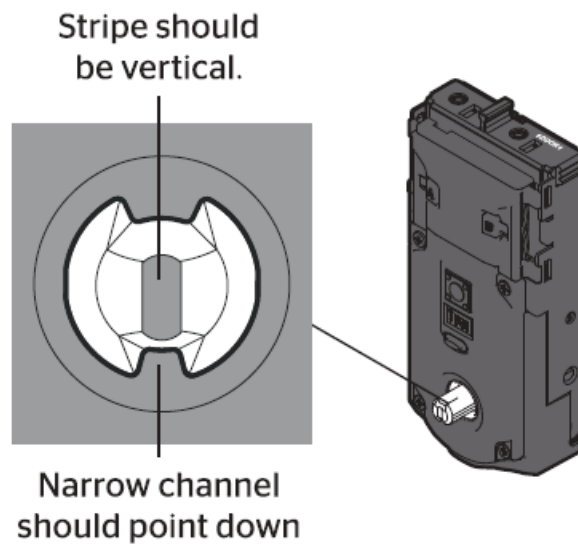


- **D.** Remove the battery pack.

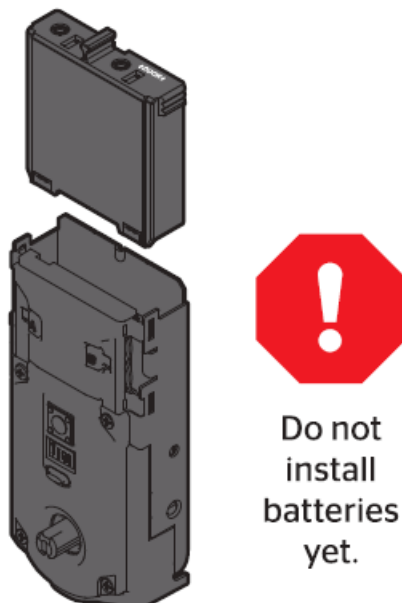

- **B.** Install the adapter on the interior assembly.

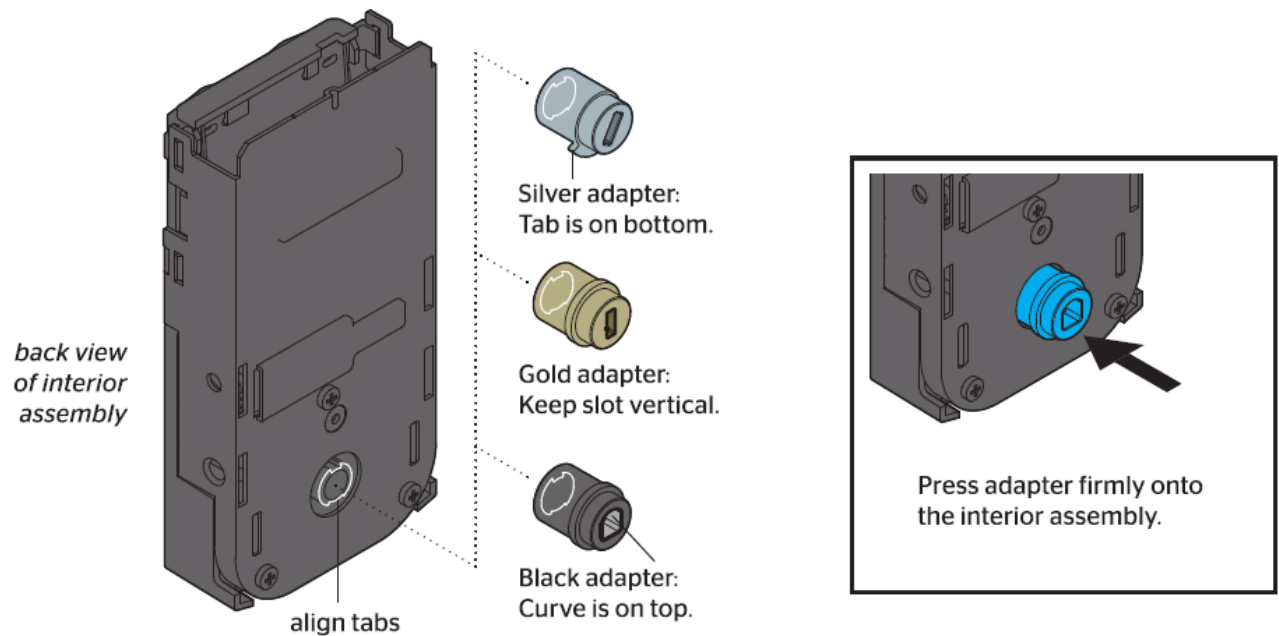



- **C.** Align the adapter with the torque blade and push the interior assembly onto the mounting plate.

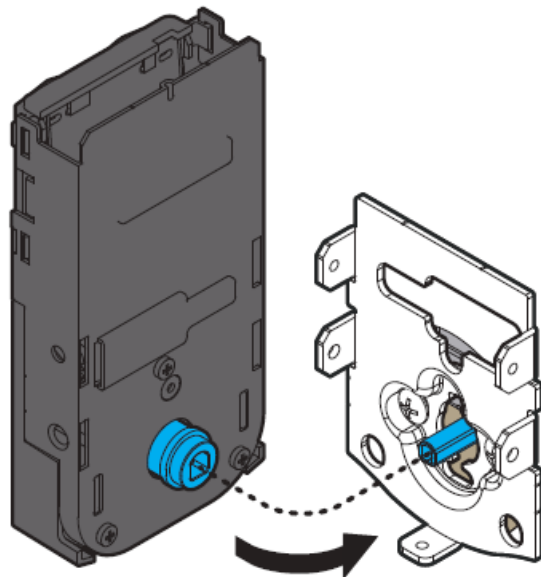

### **Schlage Deadbolts Only:**

You may need to rotate the adapter to align with the torque blade.


- **D.** Secure with two (2) interior assembly screws.

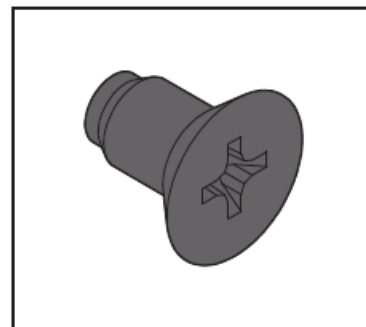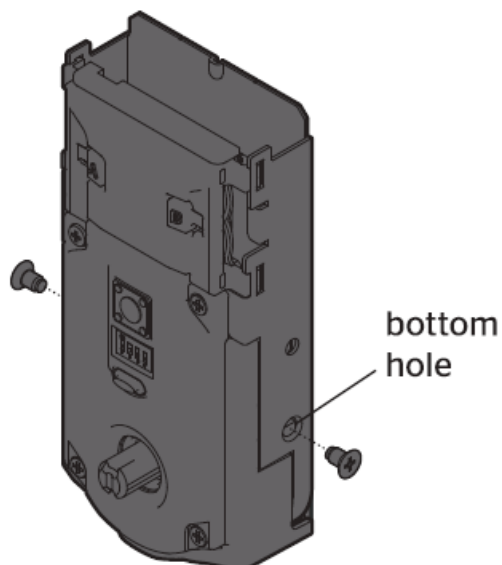

**Perform the door handing process**


This step will teach the lock the orientation of your door and is crucial for lock operation.

- **A.** Install 4 AA batteries in the battery pack.

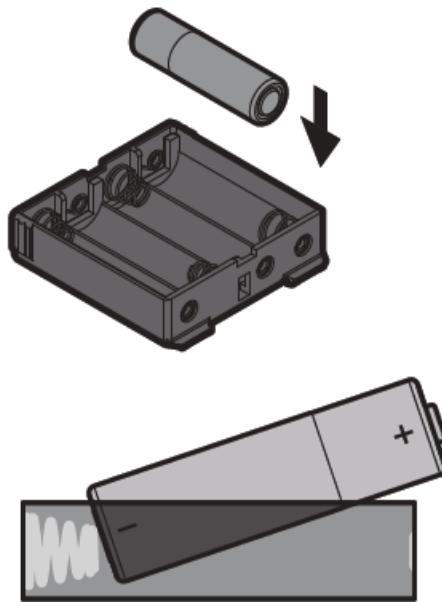


**Ensure correct polarity.  
For best results, use new,  
non-rechargeable Alkaline  
batteries only.**


- **B.** Make sure the door is open. Insert the battery pack while **PRESSING AND HOLDING** the Program button. Keep pressing the button for three seconds after the battery pack is installed, then release the button.

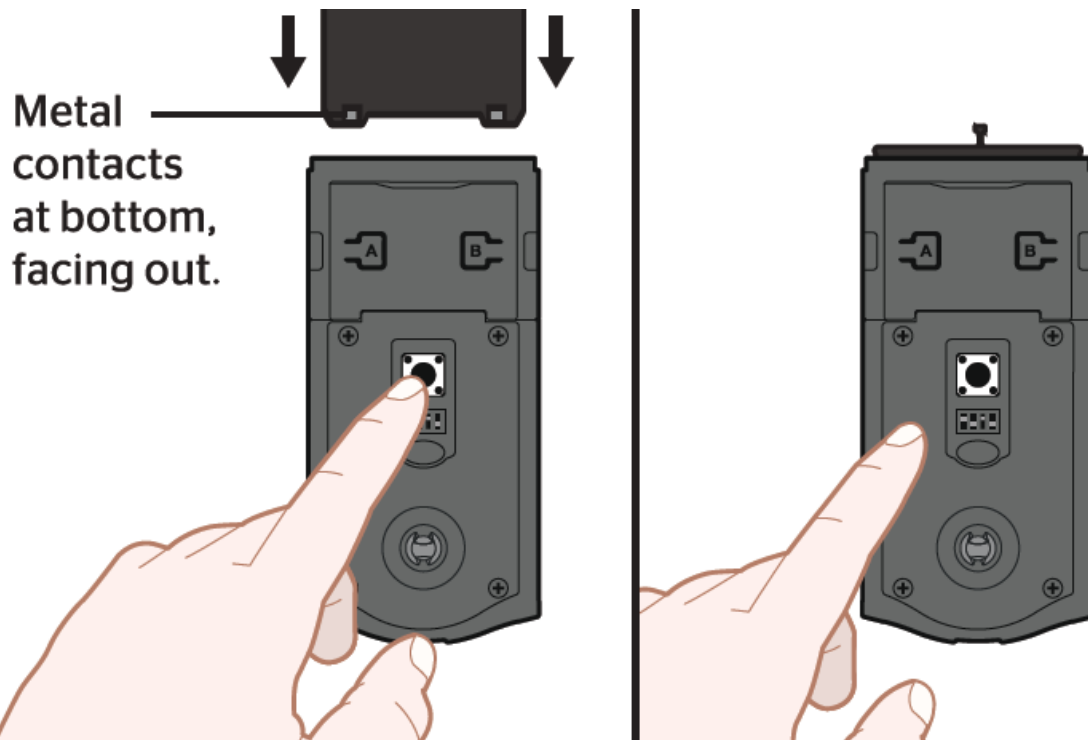


- **C.** The Status LED will flash red and green, and the lock will beep. Press and release the Program button again.

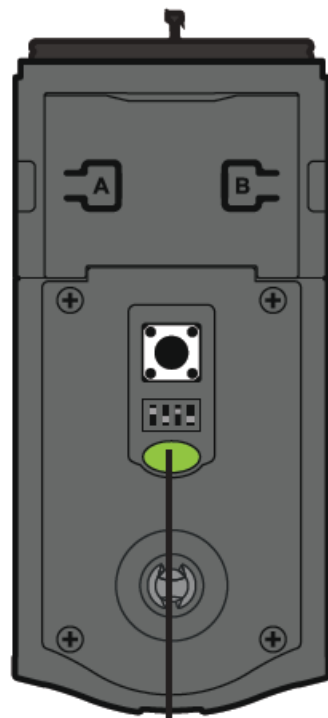

status LED

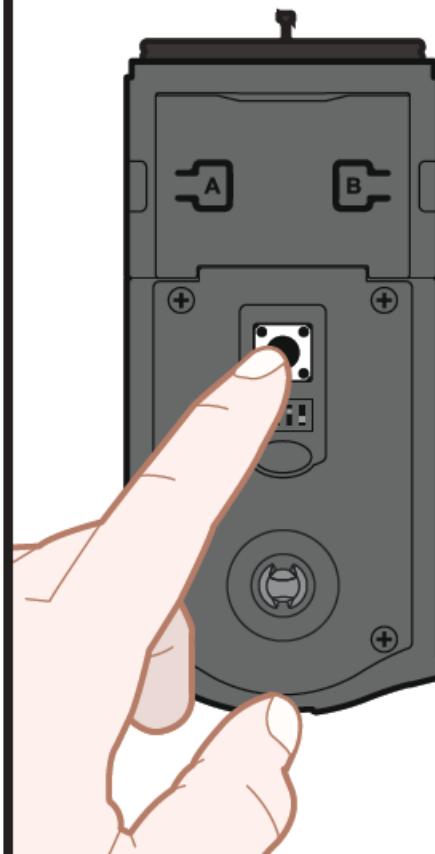

- **D.** The latch bolt will retract and extend on its own to learn the orientation of the door. Did the Status LED turn green or red?

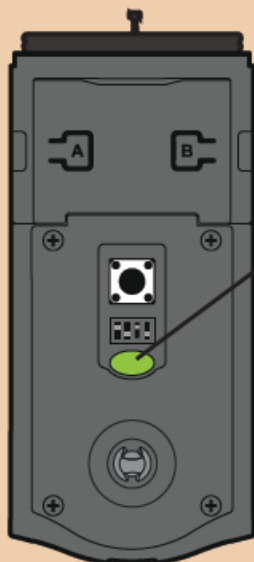

**Green:** Door handing successful. Continue to step 6.


**Red:** See “Red Status LED” below.

If the bolt does not move, make sure the batteries are installed correctly, and perform steps 5A-5D again.

## Red Status LED

### • BALDWIN ESTATE DEADBOLTS:

- If your latch bolt is to the RIGHT of your interior assembly, and the Status LED is solid red after door handing, press and release the Program button again. The door handing process will restart.
- If you are unsure if your lock is Baldwin Estate, see step 2 on page 1.

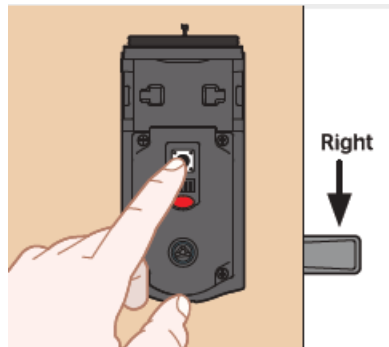


### • OTHER DEADBOLTS:


- If the Status LED is solid red after door handing, make sure the batteries are installed correctly and the lock interior is correctly installed. Perform steps SA-SD again.
- If the door handing process is still unsuccessful after a second attempt, see the Manual Door Handing section on page 4.

## Confirm the lock status

- **A.** After successful handing, the Status LED blinks every six seconds to communicate whether the door is locked or unlocked.

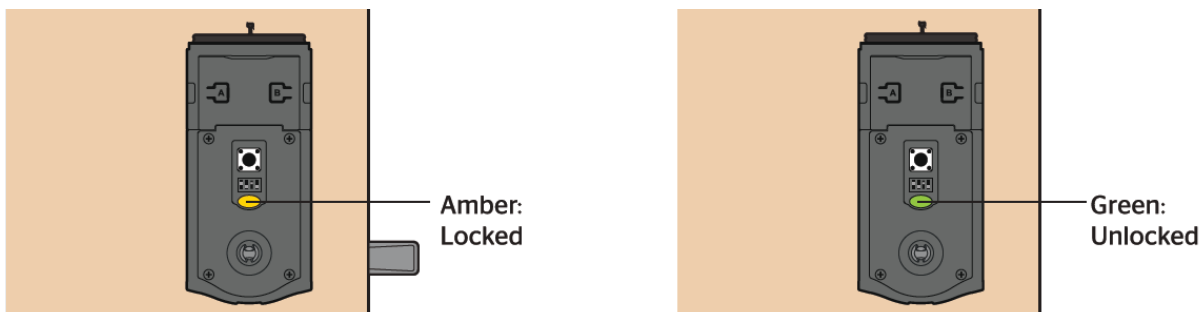


- **B.** If the Status LED shows the opposite color to the latch bolt position, flip switch #4.

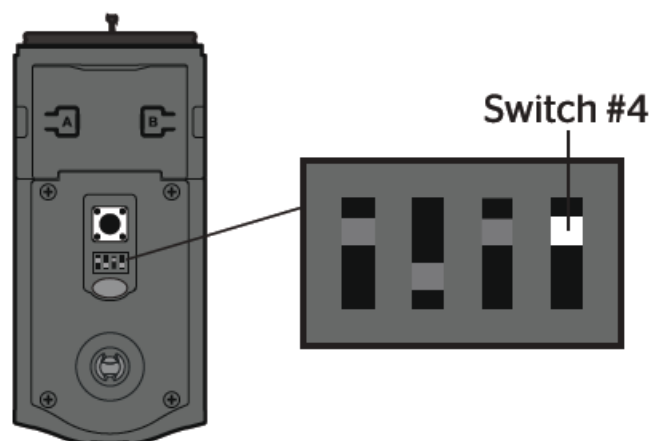

## Pair the lock with your smart home system

- **A.** Initiate the pairing process through your smart home system (either through your smart home app, at your panel, or at your controller or hub). Refer to your smart home system instructions for more information.
- **B.** You may be prompted by your smart home system to scan the QR code on the interior assembly. If not, proceed to step C.
- **C.** When prompted by your smart home system to initiate pairing at the lock, press button “A” on the lock interior four times.

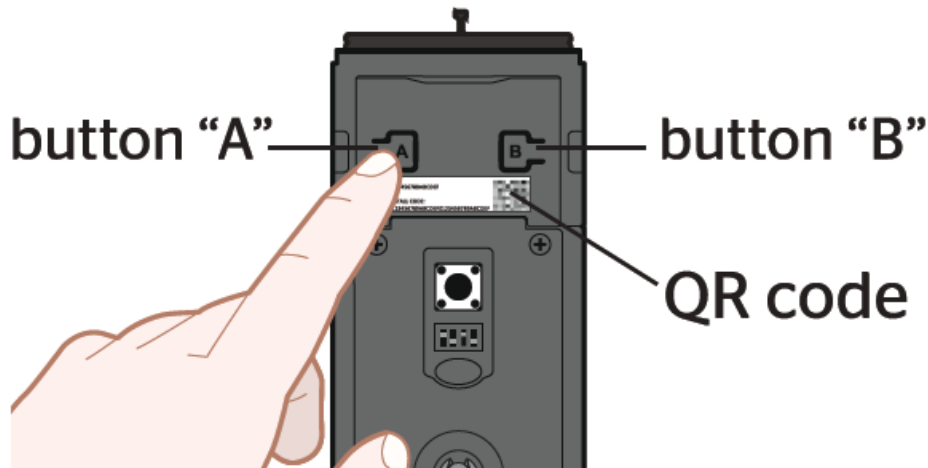


- **D.** If the pairing process is successful, re-name the lock in your system (if applicable).
- **E.** If unsuccessful, press button “B” nine times.
  - Perform steps 7A-7D again.
  - If still unsuccessful, follow your smart home system’s instructions to remove (exclude/unpair) the lock from any other network. Then perform steps 7A-7D again.

### Install the interior cover


#### Important Information about the interior cover




- The window on the interior cover is locked by default to prevent someone from tampering with your lock’s settings.

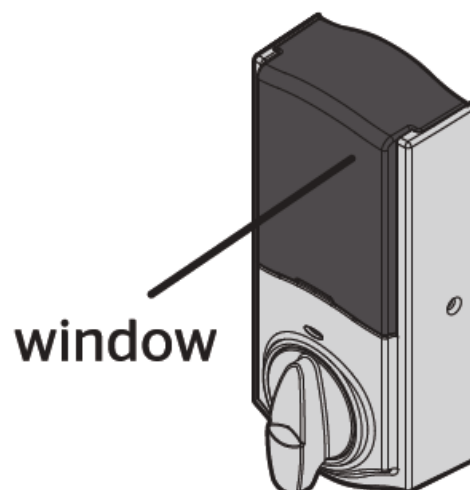


- For more convenient access to the programming buttons and the battery pack while the cover is installed, you may choose to unlock the window by removing the security screw.

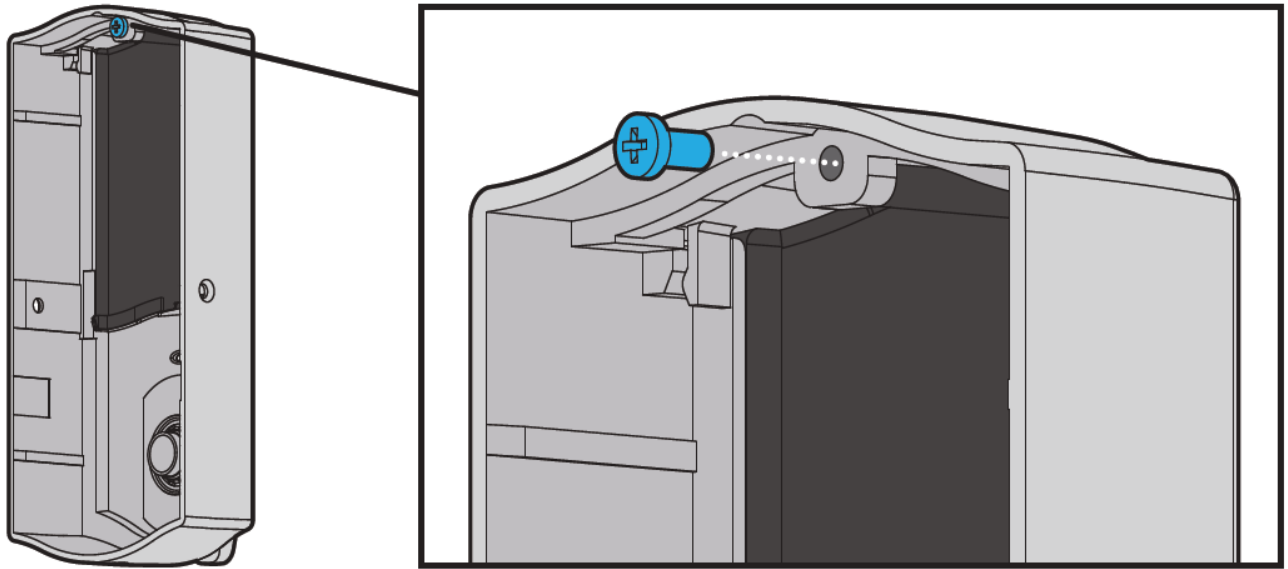

- When the window is unlocked, you can slide up the window to access the battery pack and programming buttons.

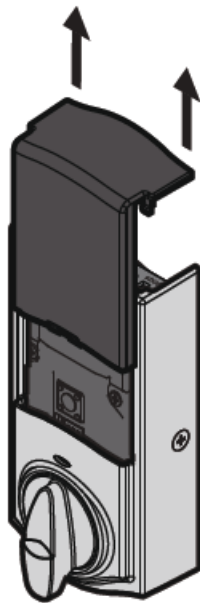


#### Cover Installation:

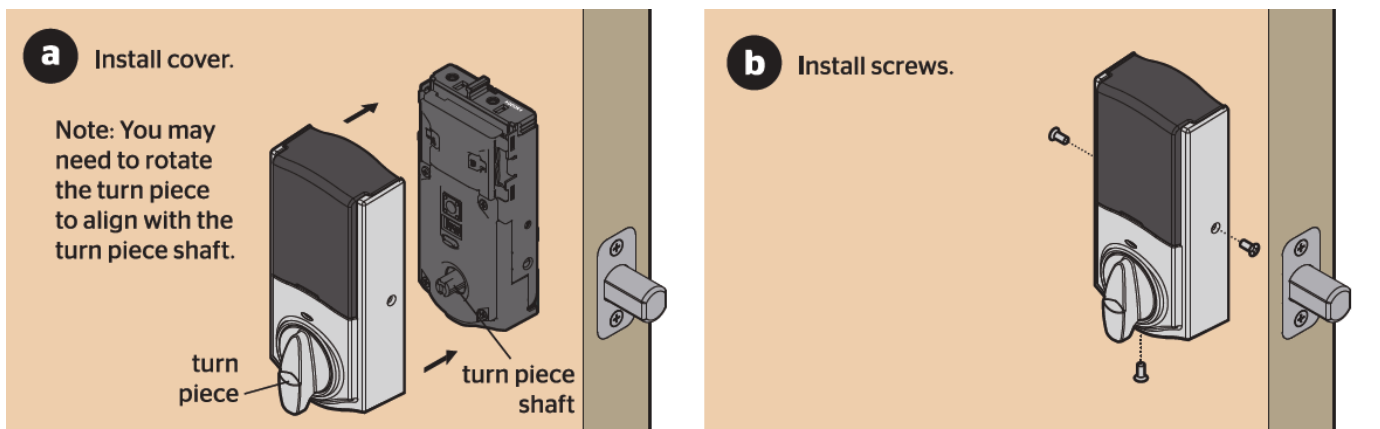


#### Battery Pack Access:


If the window is locked, remove the interior cover and screws to access the battery pack and programming buttons.

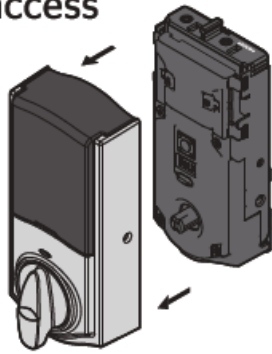

If the window is unlocked, slide up the window to access the battery pack and programming buttons.

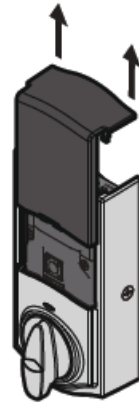


## Kwikset Convert at a Glance

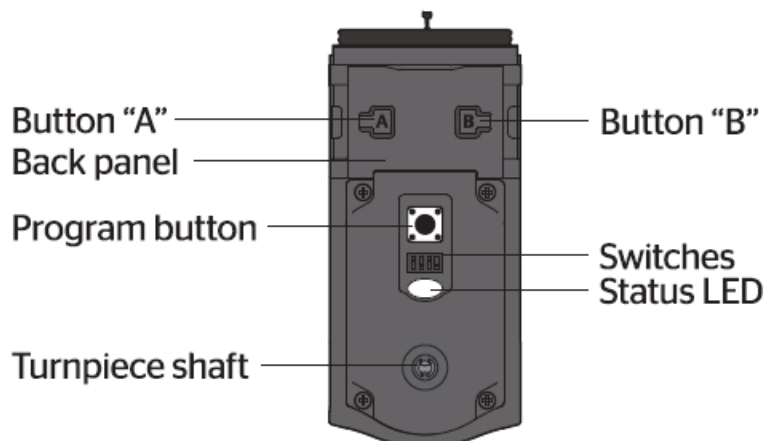

## Switches

- These features can be adjusted in some smart home apps.
- Once the associated functions are set by Zig Bee, the setting of switches #1, 2, and 3 no longer affect the lock operation until a factory reset is completed.

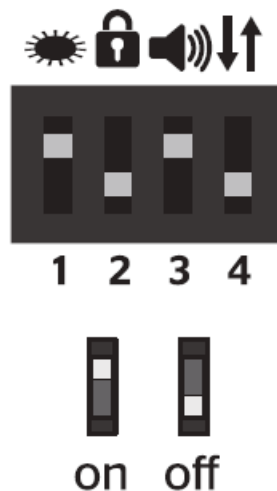



### 1. Status LED

- Door lock status LED blinks every 6 seconds. ON position is factory default.

### 2. Auto-Lock Lt

- Automatically relocks door 30 seconds after unlocking. OFF position is factory default.
- **CAUTION:** With this feature enabled, it is possible to lock yourself outside.

### 3. Audio

- Beeping sound is heard during programming and normal operation. ON position is factory default.

### 4. Invert

- Only used if the Status LED is communicating the opposite door lock status.

 
## Status LED Notifications



**Amber flash**  
Door is locked






**Green flash**  
Door is unlocked.

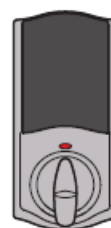

**Red flash**  
The 4 AA batteries  
in the interior are  
low and need to be  
replaced.

## Factory Reset

A factory reset will remove your lock from your smart home system.
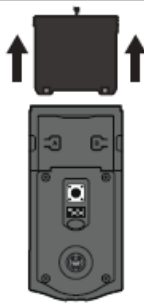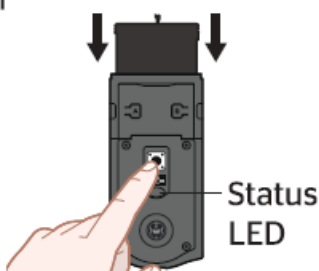
<p>1 Remove battery pack.</p> 	<p>2 Press and HOLD the Program button while reinserting the battery pack.</p> <p>Keep holding the button for 30 seconds until the lock beeps and the status LED flashes red.</p> 
<p>3 Press the Program button once more. When the LED flashes green and you hear two beeps, the lock has been reset.</p> 	<p>4 Perform the door handing process again to teach the lock the orientation of the door and pair the lock to your smarthome system.</p>

## Network Information

- Removing the lock from the network
- Press button “B” on the lock interior nine times.






### ZigBee System Notes

Zig Bee is a “Wireless mesh network,” and results may vary based on building construction and communication path, with 35+ feet being typical installed distance in a standard home environment and 250 feet+ when the lock has a clear line of sight with the smart home controller or hub. It may be necessary to install additional Zig Bee devices to enhance the communication path between the lock and controller/hub for a more robust ZigBee network.

### Manual Door Handing

If needed, the door handing process can be initiated manually. This is useful if the lock is being moved to a different door.
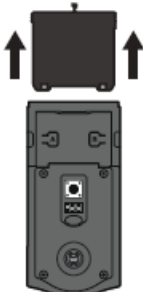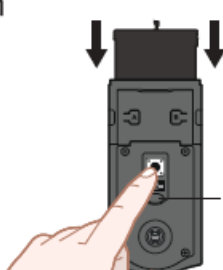
<p><b>1 Remove battery pack.</b></p> 	<p><b>2 Press and HOLD the Program button while reinserting the battery pack.</b></p> <p>Release button shortly after battery pack is installed. The status LED will flash red and green.</p>  <p>Status LED</p>
<p><b>3 Press the Program button once more.</b></p> 	<p><b>4 The latch bolt will extend and retract to learn the orientation of the door. The Status LED will indicate success or failure.</b></p> <p><b>Success:</b> LED flashes green</p> <p><b>Failure:</b> LED remains solid red for 5 seconds</p>

### Important Safeguards

1. Read all instructions in their entirety.
2. Familiarize yourself with all warning and caution statements.
3. Remind all family members of safety precautions.


4. Always have access to your lock's standard key.
5. If using the Auto-Lock feature, make sure to have your standard key with you to prevent locking yourself out.
6. Replace low batteries immediately.
  - **CAUTION:** Prevent unauthorized entry. Restrict access to your lock's back panel and routinely check your settings to ensure they have not been altered without your knowledge.
  - **WARNING:** This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. To enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

©2021 Spectrum Brands, Inc. All Rights Reserved. Lake Forest, CA 92610.

## Kwikset Technical Support

- 1-[866-863-6584](tel:866-863-6584)
- [www.kwikset.com](http://www.kwikset.com).

## Documents / Resources

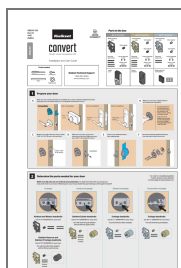

[Kwikset Convert Smart Lock Conversion Kit](#) [pdf] User Guide  
Convert Smart Lock Conversion Kit, Smart Lock Conversion Kit, Lock Conversion Kit, Conversion Kit

## References

- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.